


AUXILIARY HEATSINK

BALDOR CATALOG NO. BC143 INSTALLATION INSTRUCTIONS

Use with BC140, BC141, and BC142 models to extend maximum horsepower ratings as follows:

Models Covered		Maximum Horsepower Ratings	
		Without Auxiliary Heatsink	With Auxiliary Heatsink
BC140 & BC140-FBR	Set for 115VAC	3/4	1
	Set for 230VAC	1½	2
BC141		3/4	1½
BC142		1½	3

Use these (6) 10-32
tapped holes to install
Multi-Drive™

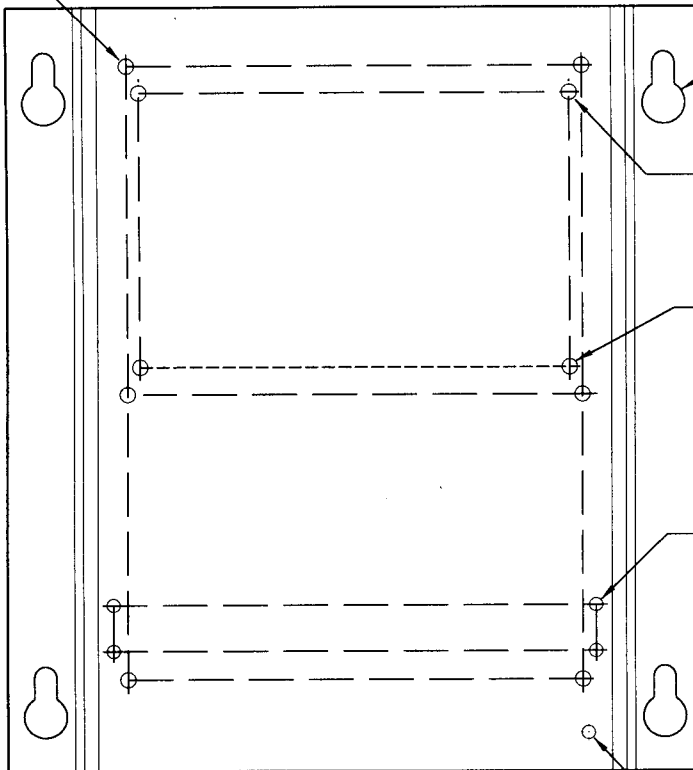

DWG#: C3000-1-00100

(4) Keyhole mounting
slots for No. 10 screws
(not supplied).

Use these (4) 10-32
tapped holes for KBIC or
KBMM installation.

Use these (2) 8-32 tapped
holes for KBPB installation.

Use these (4) 8-32 tapped
holes to install optional
Barrier Terminal Accessory Kit.
KBIC P/N 9863 or KBMM P/N 9883

8-32 Ground Screw
supplied with Barrier
Terminal Block option.

Notes:

1. Always mount Heatsink in vertical position (if possible) to achieve maximum efficiency.
2. (6) 10-32 screws are provided.
3. Install with keyhole slots in position as shown.

*Model BC140 contains a dual voltage switch which must be set to the proper AC line input voltage (115 or 230).

MN1371

A40094 – REV. A – 11/98