



---

---

*ENCODERLESS VECTOR DRIVE*

---

---

# **SERIES 17H**

## **Encoderless Vector Control**

**Installation & Operating Manual**

# Table of Contents

---

<b>Section 1</b>	
<b>Quick Start Guide</b> .....	1-1
Overview .....	1-1
Quick Start Checklist .....	1-1
Quick Start Procedure .....	1-2
<b>Section 2</b>	
<b>General Information</b> .....	2-1
Overview .....	2-1
Limited Warranty .....	2-2
Safety Notice .....	2-3
<b>Section 3</b>	
<b>Receiving &amp; Installation</b> .....	3-1
Receiving & Inspection .....	3-1
Physical Location .....	3-1
Control Installation .....	3-2
Through the Wall Mounting .....	3-2
Optional Remote Keypad Installation .....	3-3
Electrical Installation .....	3-4
System Grounding .....	3-4
Line Impedance .....	3-6
Line Reactors .....	3-7
Load Reactors .....	3-7
Input Current Requirements .....	3-9
AC Main Circuit Considerations .....	3-10
Protection Devices .....	3-10
Power Disconnect .....	3-10
Wire Size and Protection Devices .....	3-10
AC Line Connections .....	3-13
Reduced Input Voltage Derating .....	3-13
380-400 VAC Operation .....	3-13
Three Phase Motor and Control Connections .....	3-14
Single Phase Input Power Considerations .....	3-17
Single Phase Control Derating .....	3-17
Size A and B Single Phase Power Installation .....	3-18
Size C and D Single Phase Power Installation .....	3-20
Size E Single Phase Power Installation .....	3-22
Size F Single Phase Power Installation .....	3-24
Optional Dynamic Brake Hardware .....	3-26
Physical Installation .....	3-26
Electrical Installation .....	3-27

---

Control Circuit Connections .....	3-30
Keypad Mode Connections .....	3-30
Standard Run 3 Wire Mode Connections .....	3-32
15 Speed 2-Wire Mode Connections .....	3-34
Fan Pump 2 Wire Control Mode .....	3-36
Fan Pump 3 Wire Control Mode .....	3-37
Bipolar Speed Mode Connections .....	3-38
Process Mode Connections .....	3-40
Specific Process Mode Outputs .....	3-42
Analog Inputs and Outputs .....	3-44
Analog Inputs .....	3-44
Analog Outputs .....	3-47
External Trip Input .....	3-48
Opto-Isolated Inputs .....	3-48
Opto-Isolated Outputs .....	3-50
Pre-Operation Checklist .....	3-51
Power-Up Procedure .....	3-52
<b>Section 4</b>	
<b>Programming and Operation .....</b>	<b>4-1</b>
Overview .....	4-1
Display Mode .....	4-2
Adjusting Display Contrast .....	4-2
Display Screens & Diagnostic Information Access .....	4-3
Fault Log Access .....	4-4
Program Mode .....	4-5
Parameter Blocks Access for Programming .....	4-5
Changing Parameter Values when Security Code Not Used .....	4-6
Reset Parameters to Factory Settings .....	4-7
Initialize New Software .....	4-8
Parameter Definitions .....	4-9

---

<b>Section 5</b>	
<b>Troubleshooting</b>	5-1
Overview	5-1
No Keypad Display - Display Contrast Adjustment	5-1
How to Access the Fault Log	5-3
How to Clear the Fault Log	5-3
How to Access Diagnostic Information	5-4
Electrical Noise Considerations	5-10
Causes and Cures	5-10
Special Drive Situations	5-13
Drive Power Lines	5-13
Radio Transmitters	5-13
Control Enclosures	5-14
Special Motor Considerations	5-14
Wiring Practices	5-14
Optical Isolation	5-15
Plant Ground	5-15
<b>Section 6</b>	
<b>Manual Tuning the Series 17H Control</b>	6-1
Manually Tuning the Control	6-1
Motor Mag Amps Parameter	6-1
Slip Frequency Parameter	6-1
Current Prop Gain Parameter	6-1
Speed Prop Gain Parameter	6-2
Speed Int Gain Parameter	6-2
PI Controller	6-3

---

<b>Section 7</b>	
<b>Specifications, Ratings &amp; Dimensions</b> .....	7-1
Specifications .....	7-1
Operating Conditions .....	7-1
Keypad Display .....	7-2
Control Specifications .....	7-2
Differential Analog Input .....	7-2
Analog Outputs .....	7-3
Digital Inputs .....	7-3
Digital Outputs .....	7-3
Diagnostic Indications .....	7-3
Ratings .....	7-4
Terminal Tightening Torque Specifications .....	7-6
Dimensions .....	7-10
Size A Control .....	7-10
Size A Control – Through–Wall Mounting .....	7-11
Size B Control .....	7-12
Size B Control – Through–Wall Mounting .....	7-13
Size C Control .....	7-14
Size D Control .....	7-15
Size E Control .....	7-16
Size E Control – Through–Wall Mounting .....	7-17
Size F Control .....	7-19
Size F Control – Through–Wall Mounting .....	7-20
Size G Control .....	7-22
<b>Appendix A</b> .....	A-1
Dynamic Braking (DB) Hardware .....	A-1
RGA Assemblies .....	A-4
RBA Assemblies .....	A-5
RTA Assemblies .....	A-6
<b>Appendix B</b> .....	B-1
Parameter Values .....	B-1
<b>Appendix C</b> .....	C-1
Remote Keypad Mounting Template .....	C-2

# Section 1

## Quick Start Guide

---

### Overview

If you are an experienced user of Baldor controls, you are probably already familiar with the keypad programming and keypad operation methods. If so, this quick start guide has been prepared for you. This procedure will help get your system up and running in the Keypad mode quickly. This will allow motor and control operation to be verified. This procedure assumes that the control, motor and dynamic brake hardware are correctly installed (see Section 3 for procedures) and that you have an understanding of the keypad programming & operation procedures. It is not necessary to wire the terminal strip to operate in the keypad mode (Section 3 describes terminal strip wiring procedures). The quick start procedure is as follows:

1. Read the Safety Notice and Precautions in section 2 of this manual.
2. Mount the control. Refer to Section 3 “Physical Location” procedure.
3. Connect AC power, refer to Section 3 “Three Phase Motor and Control Connections”.
4. Connect the motor, refer to Section 3 “Three Phase Motor and Control Connections”.
5. Install dynamic brake hardware, if required. Refer to Section 3 “Optional Dynamic Brake Hardware”.

### Quick Start Checklist

Check of electrical items.

**⚠ CAUTION: After completing the installation but before you apply power, be sure to check the following items.**

1. Verify AC line voltage at source matches control rating.
2. Inspect all power connections for accuracy, workmanship and torque as well as compliance to codes.
3. Verify control and motor are grounded to each other and the control is connected to earth ground.
4. Check all signal wiring for accuracy.
5. Be certain all brake coils, contactors and relay coils have noise suppression. This should be an R-C filter for AC coils and reverse polarity diodes for DC coils. MOV type transient suppression is not adequate.

**⚠ WARNING: Make sure that unexpected operation of the motor shaft during start up will not cause injury to personnel or damage to equipment.**

### Check of Motors and Couplings

1. Verify freedom of motion for all motor shafts and that all motor couplings are tight without backlash.
2. Verify the holding brakes if any, are properly adjusted to fully release and set to the desired torque value.

---

## Quick Start Procedure

### **Initial Conditions**

Be sure the 17H control, motor and dynamic brake hardware are installed and wired according to the procedures in Section 3 of this manual.

Become familiar with the keypad programming and keypad operation of the control as described in Section 4 of this manual.

1. Verify that any enable inputs to J1-8 are open.
2. Turn power on. Be sure no errors are displayed.
3. Set the Level 1 Input block, Operating Mode parameter to "KEYPAD".
4. Be sure the Level 2 Protection block, Local Enable INP parameter is OFF and the Level 2 Protection block, External Trip parameter is OFF.
5. Set the Level 2 Output Limits block, "OPERATING ZONE" parameter as desired (STD CONST TQ, STD VAR TQ, QUIET CONST TQ or QUIET VAR TQ).
6. Enter the following motor data in the Level 2 Motor Data block parameters:  
Motor Voltage (Nameplate, VOLTS)  
Motor Rated Amps (Nameplate, FLA)  
Motor Rated Speed (Nameplate, RPM)  
Motor Rated Frequency (Nameplate, HZ)  
Motor Mag Amps (Nameplate, NLA)
7. At the Level 2 Motor Data block, press ENTER, at CALC PRESETS select YES (using the ▲ key) and let the control calculate preset values for the parameters that are necessary for control operation.
8. Disconnect the motor from the load (including coupling or inertia wheels). If the load can not be disconnected, refer to Section 6 and manually tune the control. After manual tuning, perform steps 10, 11, 15 and 16.

**⚠ WARNING: The motor shaft will rotate during this procedure. Be certain that unexpected motor shaft movement will not cause injury to personnel or damage to equipment.**

9. Go to Level 2 Autotune block, and perform the following tests:  
CMD OFFSET TRIM  
STATOR R1  
FLUX CUR SETTING
10. Set the Level 2 Output Limits block, "MIN OUTPUT SPEED" parameter.
11. Set the Level 2 Output Limits block, "MAX OUTPUT SPEED" parameter.
12. Remove all power from the control.
13. Couple the motor to its load.
14. Turn power on. Be sure no errors are displayed.
15. Run the drive from the keypad using one of the following: the arrow keys for direct speed control, a keypad entered speed or the JOG mode.
16. Select and program additional parameters to suit your application.

The control is now ready for use in the keypad mode. If a different operating mode is desired, refer to Section 3 Control Connections and Section 4 Programming and Operation.

## Section 2

### General Information

---

#### Overview

The Baldor Series 17H control may be used in many different applications. It may be programmed by the user to operate in four different operating zones; standard or quiet constant torque or variable torque. It can also be configured to operate in a number of modes depending upon the application requirements and user preference.

It is the responsibility of the user to determine the optimum operating zone and mode to interface the control to the application. These choices are made with the keypad as explained in the programming section of this manual.

Note: These choices can also be made using the Serial interface if this option has been added.

The control's rated horsepower is based on the use of a NEMA design B four pole motor and 60Hz operation at nominal rated input voltage. If any other type of motor is used, the control should be sized to the motor using the rated current stated on the motor nameplate.

---

### **Limited Warranty**

For a period of two (2) years from the date of original purchase, BALDOR will repair or replace without charge controls and accessories which our examination proves to be defective in material or workmanship. This warranty is valid if the unit has not been tampered with by unauthorized persons, misused, abused, or improperly installed and has been used in accordance with the instructions and/or ratings supplied. This warranty is in lieu of any other warranty or guarantee expressed or implied. BALDOR shall not be held responsible for any expense (including installation and removal), inconvenience, or consequential damage, including injury to any person or property caused by items of our manufacture or sale. (Some states do not allow exclusion or limitation of incidental or consequential damages, so the above exclusion may not apply.) In any event, BALDOR's total liability, under all circumstances, shall not exceed the full purchase price of the control. Claims for purchase price refunds, repairs, or replacements must be referred to BALDOR with all pertinent data as to the defect, the date purchased, the task performed by the control, and the problem encountered. No liability is assumed for expendable items such as fuses.

Goods may be returned only with written notification including a BALDOR Return Authorization Number and any return shipments must be prepaid.

---

## **Safety Notice**

This equipment contains voltages that may be as high as 1000 volts! Electrical shock can cause serious or fatal injury. Only qualified personnel should attempt the start-up procedure or troubleshoot this equipment.

This equipment may be connected to other machines that have rotating parts or parts that are driven by this equipment. Improper use can cause serious or fatal injury. Only qualified personnel should attempt the start-up procedure or troubleshoot this equipment.

### **PRECAUTIONS**

- ⚠ WARNING:** Do not touch any circuit board, power device or electrical connection before you first ensure that power has been disconnected and there is no high voltage present from this equipment or other equipment to which it is connected. Electrical shock can cause serious or fatal injury. Only qualified personnel should attempt the start-up procedure or troubleshoot this equipment.
- ⚠ WARNING:** This unit has an automatic restart feature that will start the motor whenever input power is applied and a RUN (FWD or REV) command is issued. If an automatic restart of the motor could cause injury to personnel, the automatic restart feature should be disabled by changing the Level 2 Miscellaneous block, Restart Auto/Man parameter to Manual.
- ⚠ WARNING:** Do not remove cover for at least five (5) minutes after AC power is disconnected to allow capacitors to discharge. Dangerous voltages are present inside the equipment. Electrical shock can cause serious or fatal injury.
- ⚠ WARNING:** Be sure that you are completely familiar with the safe operation of this equipment. This equipment may be connected to other machines that have rotating parts or parts that are controlled by this equipment. Improper use can cause serious or fatal injury. Only qualified personnel should attempt the start-up procedure or troubleshoot this equipment.
- ⚠ WARNING:** Be sure the system is properly grounded before applying power. Do not apply AC power before you ensure that all grounding instructions have been followed. Electrical shock can cause serious or fatal injury.
- ⚠ WARNING:** Improper operation of control may cause violent motion of the motor shaft and driven equipment. Be certain that unexpected motor shaft movement will not cause injury to personnel or damage to equipment. Certain failure modes of the control can produce peak torque of several times the rated motor torque.
- ⚠ WARNING:** Motor circuit may have high voltage present whenever AC power is applied, even when motor is not rotating. Electrical shock can cause serious or fatal injury.
- ⚠ WARNING:** Dynamic brake resistors may generate enough heat to ignite combustible materials. Keep all combustible materials and flammable vapors away from brake resistors.
- ⚠ WARNING:** The motor shaft will rotate during the autotune procedure. Be certain that unexpected motor shaft movement will not cause injury to personnel or damage to equipment.

Continued on next page

- 
- ⚠ Caution:** To prevent equipment damage, be certain that the electrical service is not capable of delivering more than the maximum line short circuit current amperes listed for 230 VAC, 460 VAC or 575 VAC control rating.
  - ⚠ Caution:** Disconnect motor leads (T1, T2 and T3) from control before you perform a “Megger” test on the motor. Failure to disconnect motor from the control will result in extensive damage to the control. The control is tested at the factory for high voltage / leakage resistance as part of Underwriter Laboratory requirements.
  - ⚠ Caution:** Do not connect AC power to the Motor terminals T1, T2 and T3. Connecting AC power to these terminals may result in damage to the control.
  - ⚠ Caution:** Baldor recommends not using “Grounded Leg Delta” transformer power leads that may create ground loops and degrade system performance. Instead, we recommend using a four wire Wye.
  - ⚠ Caution:** Do not supply any power to the External Trip (motor thermostat) leads at J1-16 and 17. Power on these leads can damage the control. Use a dry contact type that requires no external power to operate.

## Section 3 Receiving & Installation

### Receiving & Inspection

The Series 17H Encoderless Vector Control is thoroughly tested at the factory and carefully packaged for shipment. When you receive your control, there are several things you should do immediately.

1. Observe the condition of the shipping container and report any damage immediately to the commercial carrier that delivered your control.
2. Verify that the part number of the control you received is the same as the part number listed on your purchase order.
3. If the control is to be stored for several weeks before use, be sure that it is stored in a location that conforms to published storage specifications. (Refer to Section 7 of this manual).

### Physical Location

The location of the 17H is important. It should be installed in an area that is protected from direct sunlight, corrosives, harmful gases or liquids, dust, metallic particles, shock and vibration. Exposure to these elements and/or conditions can reduce the operating life and degrade performance of the control.

Several other factors should be carefully evaluated when selecting a location for installation:

1. For effective cooling and maintenance, the control should be mounted vertically on a flat, smooth, non-flammable vertical surface. Table 3-1 lists the Watts Loss ratings for enclosure sizing.
2. At least two inches clearance must be provided on all sides for air flow.
3. Front access must be provided to allow the control cover to be opened or removed for service and to allow viewing of the Keypad Display. (The keypad may optionally be remote mounted up to 100 feet from the control.)

Controls packaged in a floor mounted enclosure must be positioned with clearance to open the enclosure door. This clearance will also provide sufficient air space for cooling.

4. **Altitude derating.** Up to 3300 feet (1000 meters) no derating required. Above 3300 ft, derate the continuous and peak output current by 2% for each 1000 ft.
5. **Temperature derating.** Up to 40°C no derating required. Above 40°C, derate the continuous and peak output current by 2% per °C. Maximum ambient is 55°C.

**Table 3-1 Series 17H Watts Loss Ratings**

Enclosure Size	230 VAC		460 VAC		575 VAC	
	2.5KHz PWM	8.0KHz PWM	2.5KHz PWM	8.0KHz PWM	2.5KHz PWM	8.0KHz PWM
A and B	14 Watts/ Amp	17 Watts/ Amp	17 Watts/ Amp	26 Watts/ Amp	18 Watts/ Amp	28 Watts/ Amp
C, D, E, and F	12 Watts/ Amp	15 Watts/ Amp	15 Watts/ Amp	23Watts/ Amp	19Watts/ Amp	29 Watts/ Amp
G			15 Watts/ Amp			

---

## **Control Installation**

The control must be securely fastened to the mounting surface. Use the four (4) mounting holes to fasten the control to the mounting surface or enclosure.

## **Through the Wall Mounting**

Control sizes A, B, E and F are designed for panel or through the wall installation. To mount a control through the wall, a Through the Wall mounting kit must be purchased. These kits are:

<b>Kit No.</b>	<b>Description</b>
KT0000A00	Size A control through the wall mounting kit.
KT0001A00	Size B control through the wall mounting kit.
V0083991	Size E control through the wall mounting kit.
V0084001	Size F control through the wall mounting kit.

### **Procedure:**

1. Refer to Section 7 of this manual for drawings and dimensions of the through the wall mounting kits. Use the information contained in these drawings to layout the appropriate size hole on your enclosure and wall.
2. Cut the holes in your enclosure and wall.
3. Locate and drill holes for mounting hardware as shown in the drawings.
4. Cut foam tape and apply to perimeter of opening as shown.
5. Secure the four (4) brackets to the exterior of the customers panel with the hardware provided.
6. Secure the control to the panel using the hardware provided.

---

**Optional Remote Keypad Installation** The keypad may be remotely mounted using the optional Baldor keypad extension cable. The keypad assembly (white - DC00005A-01; grey - DC00005A-02) comes complete with the screws and gasket required to mount it to an enclosure. When the keypad is properly mounted to a NEMA Type 4X indoor enclosure, it retains the Type 4X indoor rating.

**Tools Required:**

- Center punch, tap handle, screwdrivers (Phillips and straight) and crescent wrench.
- 8-32 tap and #29 drill bit (for tapped mounting holes) or #19 drill (for clearance mounting holes).
- 1-1/4" standard knockout punch (1-11/16" nominal diameter).
- RTV sealant.
- (4) 8-32 nuts and lock washers.
- Extended 8-32 screws (socket fillister) are required if the mounting surface is thicker than 12 gauge and is not tapped (clearance mounting holes).
- Remote keypad mounting template. A tear out copy is provided at the end of this manual for your convenience.

**Mounting Instructions: For tapped mounting holes**

1. Locate a flat 4" wide x 5.5" minimum high mounting surface. Material should be sufficient thickness (14 gauge minimum).
2. Place the template on the mounting surface or mark the holes as shown.
3. Accurately center punch the 4 mounting holes (marked A) and the large knockout (marked B).
4. Drill four #29 mounting holes (A). Thread each hole using an 8-32 tap.
5. Locate the 1-1/4" knockout center (B) and punch using the manufacturers instructions.
6. Debur knockout and mounting holes making sure the panel stays clean and flat.
7. Apply RTV to the 4 holes marked (A).
8. Assemble the keypad to the panel. Use 8-32 screws, nuts and lock washers.
9. From the inside of the panel, apply RTV over each of the four mounting screws and nuts. Cover a 3/4" area around each screw while making sure to completely encapsulate the nut and washer.

**Mounting Instructions: For clearance mounting holes**

1. Locate a flat 4" wide x 5.5" minimum high mounting surface. Material should be sufficient thickness (14 gauge minimum).
2. Place the template on the mounting surface or mark the holes as shown on the template.
3. Accurately center punch the 4 mounting holes (marked A) and the large knockout (marked B).
4. Drill four #19 clearance holes (A).
5. Locate the 1-1/4" knockout center (B) and punch using the manufacturers instructions.
6. Debur knockout and mounting holes making sure the panel stays clean and flat.
7. Apply RTV to the 4 holes marked (A).
8. Assemble the keypad to the panel. Use 8-32 screws, nuts and lock washers.
9. From the inside of the panel, apply RTV over each of the four mounting screws and nuts. Cover a 3/4" area around each screw while making sure to completely encapsulate the nut and washer.

Each control is equipped with MOV type surge suppression that is designed to protect the control from transient overvoltages between line to line and line to ground. Transient noise can be caused by lightening, motor starters, DC SCR drives, other electrical equipment or by switching power factor capacitors onto or out of the line.

## Electrical Installation

Interconnection wiring is required between the motor control, AC power source, motor, host control and any operator interface stations. Use listed closed loop connectors that are of appropriate size for wire gauge being used. Connectors are to be installed using crimp tool specified by the manufacturer of the connector. Only Class 1 wiring should be used.


Baldor Series H controls feature UL approved adjustable motor overload protection suitable for motors rated at no less than 50% of the output rating of the control. Other governing agencies such as NEC may require separate over-current protection. The installer of this equipment is responsible for complying with the National Electric Code and any applicable local codes which govern such practices as wiring protection, grounding, disconnects and other current protection.

## System Grounding

Baldor Controls are designed to be powered from standard three phase lines that are electrically symmetrical with respect to ground. System grounding is an important step in the overall installation to prevent problems. The recommended grounding method is shown in Figure NO TAG.

**⚠ Caution:** Baldor recommends not using “Grounded Leg Delta” transformer power leads that may create ground loops and degrade system performance. Instead, we recommend using a four wire Wye.

Figure 3-1 Recommended System Grounding

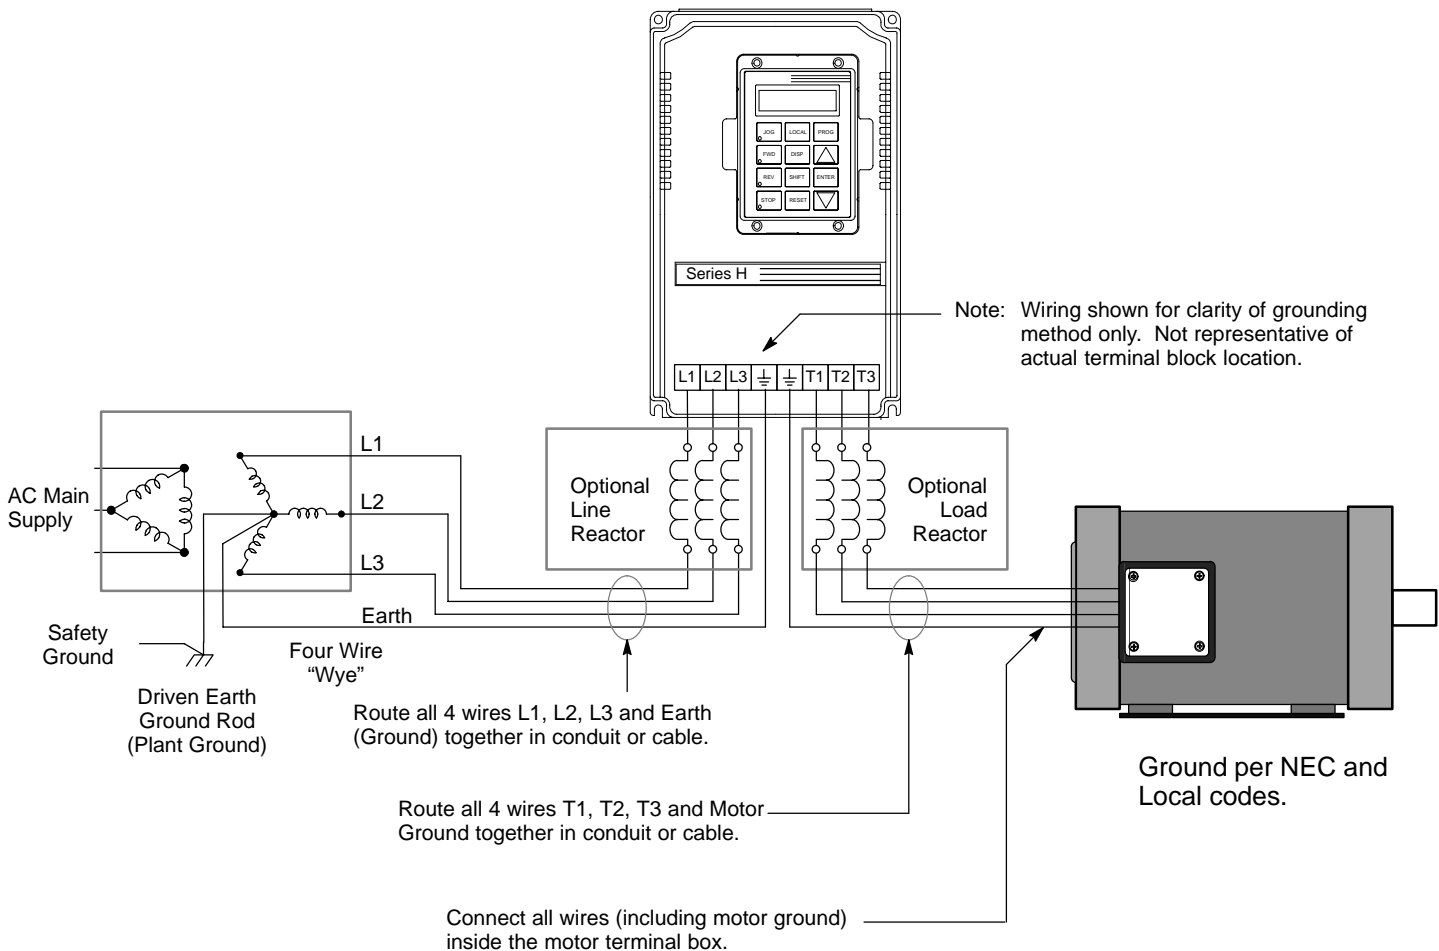

---

### **Ungrounded Distribution System**

With an ungrounded power distribution system it is possible to have a continuous current path to ground through the MOV devices. To avoid equipment damage, an Isolation transformer with a grounded secondary is recommended. This provides three phase AC power that is symmetrical with respect ground.

### **Input Power Conditioning**

Baldor controls are designed for direct connection to standard three phase lines that are electrically symmetrical with respect to ground. Certain power line conditions must be avoided. An AC line reactor or an isolation transformer may be required for some power conditions.

- Baldor Series H controls require a minimum line impedance of 3%. Refer to “Line Impedance” for additional information.
- If the feeder or branch circuit that provides power to the control has permanently connected power factor correction capacitors, an input AC line reactor or an isolation transformer must be connected between the power factor correction capacitors and the control.
- If the feeder or branch circuit that provides power to the control has power factor correction capacitors that are switched on line and off line, the capacitors must not be switched while the control is connected to the AC power line. If the capacitors are switched on line while the control is still connected to the AC power line, additional protection is required. TVSS (Transient Voltage Surge Suppressor) of the proper rating must be installed between the AC line reactor or an isolation transformer and the AC input to the control.

---

## Line Impedance

The Baldor Series 17H control requires a minimum line impedance of 3% (voltage drop across the reactor is 3% when the control draws rated input current). If the incoming power line has less than 3% impedance, a 3 phase line reactor can be used to provide the needed impedance in most cases. Line reactors are optional and are available from Baldor.

The input impedance of the power lines can be determined in two ways:

1. Measure the line to line voltage at the motor at no load and at full rated load. Use these measured values to calculate impedance as follows:

$$\% \text{Impedance} = \frac{(\text{Volts}_{\text{No Load Speed}} - \text{Volts}_{\text{Full Load Speed}})}{(\text{Volts}_{\text{No Load Speed}})} \times 100$$

2. Calculate the short circuit current capacity of the power line. If the short circuit current capacity is greater than the published maximum short circuit current ratings for the control, a line reactor should be installed.

Two methods of calculating short circuit current capacity are provided:

### A. Method 1

Calculate short circuit current as follows:

$$I_{SC} = \frac{(KVA_{XFMR} \times 1000 \times 100)}{(\%Z_{XFMR} \times V_{L-L} \times \sqrt{3})}$$

Example: 50KVA transformer with 2.75% impedance @ 460VAC

$$I_{SC} = \frac{(50 \times 1000 \times 100)}{(2.75 \times 460 \times \sqrt{3})} = 2282 \text{ Amps}$$

### B. Method 2

Step 1: Calculate KVA short circuit as follows:

$$KVA_{SC} = \frac{(KVA_{XFMR})}{\left(\frac{\%Z_{XFMR}}{100}\right)} = \left(\frac{50}{.0275}\right) = 1818.2 \text{ KVA}$$

Step 2: Calculate short circuit current as follows:

$$I_{SC} = \frac{(KVA_{SC} \times 1000)}{(V_{L-L} \times \sqrt{3})} = \frac{1818.2 \times 1000}{460 \times \sqrt{3}} = 2282 \text{ Amps}$$

where:

$KVA_{XFMR}$ =Transformer KVA

$I_{SC}$ =short circuit current

$Z_{XFMR}$ =Transformer Impedance

$V_{L-L}$ =Input volts measured line to line

---

## Line Reactors

Three phase line reactors are available from Baldor. The line reactor to order is based on the \*Quad Rated HP of the control. If providing your own line reactor, use the following formula to calculate the minimum inductance required. Table 3-3 lists the input current required for this calculation, for each control size.

$$L = \frac{(V_{L-L} \times 0.03)}{(I \times \sqrt{3} \times 377)}$$

Where:

L	Minimum inductance in henries.
$V_{L-L}$	Input volts measured line to line.
0.03	Desired percentage of input impedance.
I	Input current rating of control.
377	Constant used with 60Hz power. Use 314 if input power is 50Hz.

## Load Reactors

Line reactors may be used at the control output to the motor. When used this way, they are called Load Reactors. Load reactors serve several functions that include:

- Protect the control from a short circuit at the motor.
- Limit the rate of rise of motor surge currents.
- Slowing the rate of change of power the control delivers to the motor.

Load reactors should be installed as close to the control as possible.

\*Quad Rated HP of the control refers to the four (4) different HP ratings of the control that are based on operating in Standard (2.5KHz PWM) or Quiet (8.0KHz PWM) in either Constant Torque or Variable Torque. The ratings are provided in Section 7 of this manual.

**Table 3-2 Short Circuit Current Ratings**

230VAC		460VAC		575VAC	
Catalog Numbers	Max. Line Short Circuit Current	Catalog Numbers	Max. Line Short Circuit Current	Catalog Numbers	Max. Line Short Circuit Current
ZD17H201-E	250	ZD17H401-E	150	ZD17H501-E	50
ZD17H201-W	350	ZD17H401-W	200	ZD17H502-E	100
ZD17H202-E	350	ZD17H402-E	200	ZD17H503-E	150
ZD17H202-W	550	ZD17H402-W	300	ZD17H505-E	200
ZD17H203-E or W	550	ZD17H403-E or W	300	ZD17H507-E	300
ZD17H205-E	550	ZD17H405-E	300	ZD17H510-E	400
ZD17H205-W	1000	ZD17H405-W	500	ZD17H515-E, EO or ER	600
ZD17H207-E or W	1000	ZD17H407-E or W	500	ZD17H520-EO or ER	1000
ZD17H210-E	1000	ZD17H410-E	500	ZD17H525-EO or ER	1100
ZD17H210L-ER	1500	ZD17H410L-ER	800	ZD17H530-EO or ER	1500
ZD17H215-E, EO or ER	1900	ZD17H415-E, EO or ER	1000	ZD17H540-EO or ER	1800
ZD17H215L-ER	1900	ZD17H415L-ER	1000	ZD17H550-EO or ER	2200
ZD17H220-EO or ER	2400	ZD17H420-EO or ER	1200	ZD17H560-EO or ER	2700
ZD17H220L-ER	2100	ZD17H420L-ER	1200	ZD17H575-EO or ER	3300
ZD17H225-EO or ER	2800	ZD17H425-EO or ER	1400	ZD17H5100-EO or ER	4200
ZD17H225L-ER	2500	ZD17H425L-ER	1400	ZD17H5150V-EO or ER	4800
ZD17H230V-EO or ER	3600	ZD17H430V-EO or ER	1800		
ZD17H230-EO or ER	3600	ZD17H430-EO or ER	1800		
ZD17H230L-ER	3600	ZD17H430L-ER	1800		
ZD17H240-MO or MR	4500	ZD17H440-MO or MR	2300		
ZD17H240L-MR	4000	ZD17H440L-MR	2300		
ZD17H250V-MO or MR	4500	ZD17H450-EO or ER	2800		
ZD17H250-MO or MR	4500	ZD17H450L-ER	2800		
		ZD17H460-EO or ER	3500		
		ZD17H460V-EO or ER	3500		
		ZD17H460L-ER	3500		
		ZD17H475-EO	4300		
		ZD17H475L-EO	4300		
		ZD17H4100-EO	5500		
		ZD17H4150V-EO	6200		
		ZD17H4150-EO	8300		
		ZD17H4200-EO	11000		
		ZD17H4250-EO	13800		
		ZD17H4300-EO	16600		
		ZD17H4350-EO	19900		
		ZD17H4400-EO	19900		
		ZD17H4450-EO	25000		

## Input Current Requirements

**Table 3-3 Input Current Continuous Amps Requirements**

230 VAC Control Catalog Numbers	Input Amps	460 VAC Control Catalog Numbers	Input Amps	575 VAC Control Catalog Numbers	Input Amps
ZD17H201-E or W	6.8	ZD17H401-E or W	3.4	ZD17H501-E	2.7
ZD17H202-E or W	9.6	ZD17H402-E or W	4.8	ZD17H502-E	4.0
ZD17H203-E or W	15.2	ZD17H403-E or W	7.6	ZD17H503-E	6.1
ZD17H205-E	15.2	ZD17H405-E or W	11	ZD17H505-E	11
ZD17H205-W	22	ZD17H407-E	11	ZD17H507-E	11
ZD17H207-E or W	28	ZD17H407-W	14	ZD17H510-E	11
ZD17H210-E	28	ZD17H410-E	21	ZD17H515-EO or ER	22
ZD17H210L-ER	42	ZD17H410L-ER	21	ZD17H520-EO or ER	27
ZD17H215-E	42	ZD17H415-E	21	ZD17H525-EO or ER	32
ZD17H215-EO or ER	54	ZD17H415-EO or ER	27	ZD17H530-EO or ER	41
ZD17H220-EO or ER	68	ZD17H415L-ER	27	ZD17H540-EO or ER	52
ZD17H220L-ER	60	ZD17H420-E or ER	34	ZD17H550-EO or ER	62
ZD17H225-EO or ER	80	ZD17H420L-ER	30	ZD17H560-EO or ER	62
ZD17H225L-ER	75	ZD17H425-EO or ER	40	ZD17H575-EO	100
ZD17H230-EO or ER	104	ZD17H425L-ER	38	ZD17H5100-EO	125
ZD17H230V-EO or ER	104	ZD17H430-EO or ER	52	ZD17H5150-EO	145
ZD17H230L-ER	104	ZD17H430L-ER	52		
ZD17H240-MO or MR	130	ZD17H430V-EO or ER	52		
ZD17H240L-MR	115	ZD17H430L-ER	52		
ZD17H250-MO or MR	130	ZD17H440-EO or ER	65		
ZD17H250V-MR	130	ZD17H440L-ER	60		
		ZD17H450-EO or ER	80		
		ZD17H450L-ER	80		
		ZD17H460-EO or ER	100		
		ZD17H460V-EO or ER	100		
		ZD17H460L-ER	100		
		ZD17H475-EO	125		
		ZD17H475L-EO	125		
		ZD17H4100-EO	160		
		ZD17H4150-EO	240		
		ZD17H4150V-EO	180		
		ZD17H4200-EO	310		
		ZD17H4250-EO	370		
		ZD17H4300-EO	420		
		ZD17H4350-EO	480		
		ZD17H4400-EO	540		
		ZD17H4450-EO	590		

## AC Main Circuit Considerations

### Protection Devices

Be sure a suitable input power protection device is installed. Use the recommended circuit breaker or fuses listed in Tables 3-4 through 3-6 (Wire Size and Protection Devices). Input and output wire size is based on the use of copper conductor wire rated at 75 °C. The table is specified for NEMA B motors.

Circuit Breaker:	1 phase, thermal magnetic. Equal to GE type THQ or TEB for 230 VAC
	3 phase, thermal magnetic. Equal to GE type THQ or TEB for 230 VAC or GE type TED for 460 VAC and 575 VAC.
Fast Action Fuses:	230 VAC, Buss KTN 460 VAC, Buss KTS to 600A (KTU 601 - 1200A) 575VAC, Buss FRS
Very Fast Action:	230 VAC, Buss JJN 460 VAC, Buss JJS 575 VAC, , Buss JJS
Time Delay Fuses:	230 VAC, Buss FRN 460 VAC, Buss FRS to 600A (KTU 601 - 1200A) 575 VAC, Buss FRS to 600A (KTU 601 - 1200A)

### Power Disconnect

A power disconnect should be installed between the input power service and the control for a fail safe method to disconnect power. The control will remain in a powered-up condition until all input power is removed from the control and the internal bus voltage is depleted.

## Wire Size and Protection Devices

**Table 3-4 Wire Size and Protection Devices - 230 VAC Controls**

Control Output Power Rating	Input Breaker	Input Fuse		Wire Gauge	
		Fast Acting	Time Delay	AWG	mm <sup>2</sup>
1	5A	5A	5A	14	2.5
2	10A	10A	8A	14	2.5
3	15A	15A	12A	14	2.5
5	20A	25A	12.5A	14	2.5
7.5	25A	30A	25A	12	4
10	35A	40A	35A	10	10
15	50A	60A	50A	8	10
20	60A	80A	60A	4	25
25	80A	100A	80A	4	25
30	100A	125A	100A	3	30
40	125A	150A	125A	1	50
50	150A	200A	150A	2/0	70

Note: All wire sizes based on 75°C copper wire, 3% line impedance. Higher temperature smaller gauge wire may be used per NEC and local codes. Recommended fuses/breakers are based on 25°C ambient, maximum continuous control output current and no harmonic current.

**Table 3-5 Wire Size and Protection Devices - 460 VAC Controls**

Control Output Power Rating	Input Breaker	Input Fuse		Wire Gauge	
		Fast Acting	Time Delay	AWG	mm <sup>2</sup>
1	4A	4A	3A	14	2.5
2	10A	5A	4A	14	2.5
3	10A	8A	6A	14	2.5
5	10A	12A	9A	14	2.5
7.5	15A	20A	15A	14	2.5
10	20A	25A	17.5A	12	4
15	25A	30A	25A	10	6
20	30A	40A	30A	8	10
25	40A	50A	40A	8	10
30	45A	60A	45A	6	16
40	60A	80A	60A	4	25
50	70A	100A	75A	4	25
60	90A	125A	90A	2	35
75	125A	150A	125A	1/0	54
100	150A	200A	150A	2/0	70
125	175A	250A	175A	2/0	70
150	200A	300A	200A	4/0	120
200	250A	350A	250A	(2)1/0	(2)54
250	350A	450A	350A	(2)3/0	(2)95
300	400A	500A	400A	(2)4/0	(2)120
350	500A	600A	500A	(3)4/0	(3)120
400	600A	800A	600A	(3)250 mcm	(3)125
450	600A	800A	600A	(3)250 mcm	(3)125
500	800A	1000A	800A	(3)350 mcm	(3)185

Note: All wire sizes based on 75°C copper wire, 3% line impedance. Higher temperature smaller gauge wire may be used per NEC and local codes. Recommended fuses/breakers are based on 25°C ambient, maximum continuous control output current and no harmonic current.

**Table 3-6 Wire Size and Protection Devices - 575 VAC Controls**

Control Output Power Rating	Input Breaker	Input Fuse		Wire Gauge	
		Fast Acting	Time Delay	AWG	mm <sup>2</sup>
1	5A	5A	4A	14	2.5
2	10A	5A	4A	14	2.5
3	10A	6A	5A	14	2.5
5	10A	10A	7A	14	2.5
7.5	10A	15A	10A	14	2.5
10	15A	15A	12A	14	2.5
15	20A	25A	20A	12	4
20	25A	35A	25A	10	6
25	30A	40A	30A	8	10
30	35A	50A	35A	8	10
40	45A	60A	45A	6	16
50	60A	80A	60A	4	25
60	70A	90A	70A	4	25
75	120A	150A	120A	3	27
100	120A	150A	120A	1/0	54
125	150A	200A	150A	2/0	70
150	175A	225A	175A	2/0	70

Note: All wire sizes based on 75°C copper wire, 3% line impedance. Higher temperature smaller gauge wire may be used per NEC and local codes. Recommended fuses/breakers are based on 25°C ambient, maximum continuous control output current and no harmonic current.

---

## AC Line Connections

**Reduced Input Voltage Derating** All power ratings stated in Section 7 are for the stated nominal AC input voltages (230, 460 or 575VAC). The power rating of the control must be reduced when operating at a reduced input voltage. The amount of reduction is the ratio of the voltage change.

**Examples:**

For example, a 10HP, 230VAC control operating at 208VAC has a reduced power rating of 9.04HP.

$$10\text{HP} \times \frac{208\text{VAC}}{230\text{VAC}} = 9.04\text{HP}$$

Likewise, a 10HP, 460VAC control operating at 380VAC has a reduced power rating of 8.26HP.

$$10\text{HP} \times \frac{380\text{VAC}}{460\text{VAC}} = 8.26\text{HP}$$

To obtain the full output rating of 10HP in either case requires a 15HP Control.

**380-400 VAC Operation** Size A and B 460VAC controls may be used directly with a 380-400 VAC power source, control modification is not necessary.

Size C, D, E, F and G 460VAC controls all require modification for operation on the reduced line voltage. Specifically, the control transformer must have the wire on terminal 5 (for 460V) moved to terminal 4 (for 380-400V).


**Control Transformer Tap Change Procedure** (size C, D, E, and F controls).

1. Be sure drive operation is terminated and secured.
2. Remove all power sources from the control. If power has been applied, wait at least 5 minutes for bus capacitors to discharge.
3. Remove or open the front cover.
4. Remove the wire from terminal 5.
5. Place the wire that was removed from terminal 5 onto terminal 4.
6. Install or close the front cover.

**Control Transformer Tap Change Procedure** (size G controls). See Figure 3-2.

1. Be sure drive operation is terminated and control is disabled.
2. Remove all power sources from the control. If power has been applied, wait at least 5 minutes for bus capacitors to discharge.
3. Remove or open the front cover.
4. Remove the wires from the two right side terminals.
5. Place the wires on the center terminals as shown.
6. Install or close the front cover.

**Figure 3-2 Configuring the Control Transformer Terminal Block for 380 - 400 VAC (Size G)**

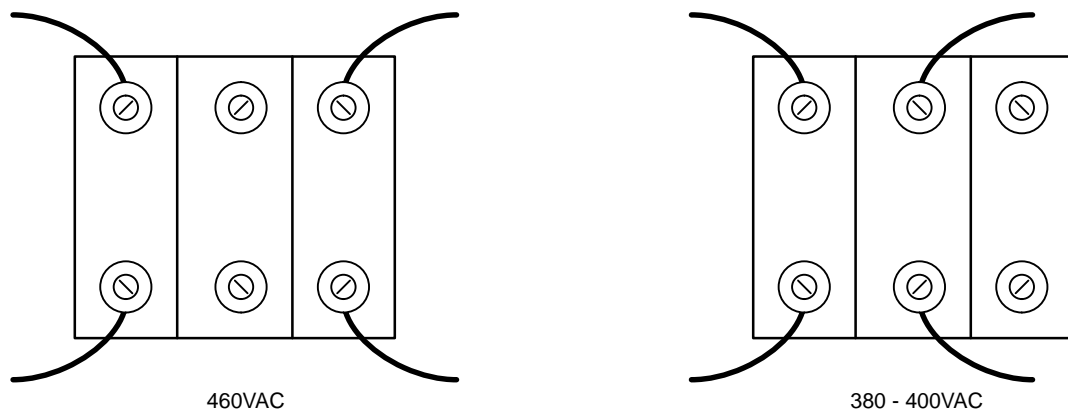

---


## Three Phase Motor and Control Connections

 The AC power and motor connections are shown in Figure 3-1. Overloads are not required. The 17H control has an electronic I<sup>2</sup>t motor overload protection. If motor overloads are desired, they should be sized according to the manufacturers specifications and installed between the motor and the T1, T2 and T3 terminals of the control.

**⚠ Caution:** Do not connect AC power to the Motor terminals T1, T2 and T3. Connecting AC power to these terminals may result in damage to the control.


**⚠ Caution:** Baldor recommends not using “Grounded Leg Delta” transformer power leads that may create ground loops and degrade system performance. Instead, we recommend using a four wire Wye.

1. Connect the incoming AC power wires from the protection devices to L1, L2 and L3 at the main circuit terminals. The phase rotation is not important as the control is not phase sensitive.

2. \* Connect earth ground to the “” of the control. Be sure to comply with all applicable codes.



Note: Use same gauge wire for earth ground as is used for L1, L2 and L3 connections. Refer to the Wire Size and Protection Devices tables shown previously in this section.

 3. Connect the three phase power leads of the AC motor to terminals T1, T2, and T3 of the main circuit terminals.

4. \* Connect motor ground wire to the “” of the control. Be sure to comply with all applicable codes.

\* Grounding by using conduit or panel connection is not adequate. A separate conductor of the proper size must be used as a ground conductor.


**Figure 3-1 3 Phase AC Power and Motor Connections**

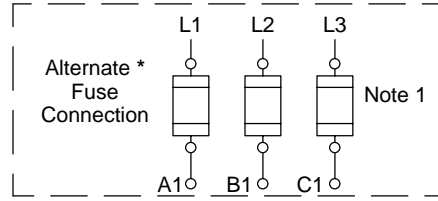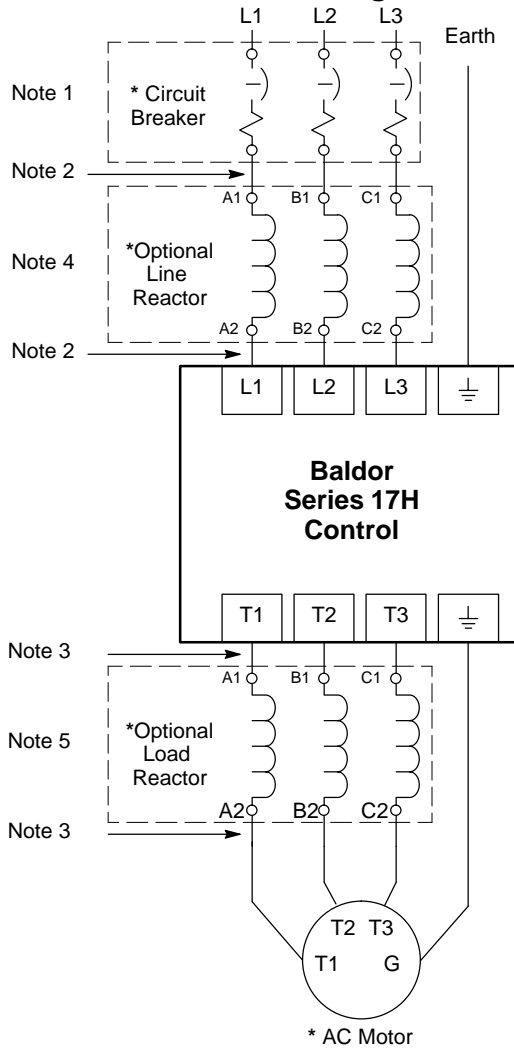

\* Optional components not provided with 17H Control.

**Notes:**

1. See "Protective Devices" described previously in this section.
2. Shield wires inside a metal conduit.
3. Metal conduit should be used to shield output wires (between control and motor).
4. See "Line Impedance" described previously in this section.
5. See Line/Load Reactors described previously in this section.
6. A motor circuit contactor is recommended to provide a positive disconnect and prevent motor rotation which could pose a safety hazard. Connect the M-Contactor as shown. The contactor should open the enable input at J1-8 at least 20 msec before the main M-contacts open to prevent arcing at contacts. This greatly increases contactor life and allows use of IEC rated contactors.

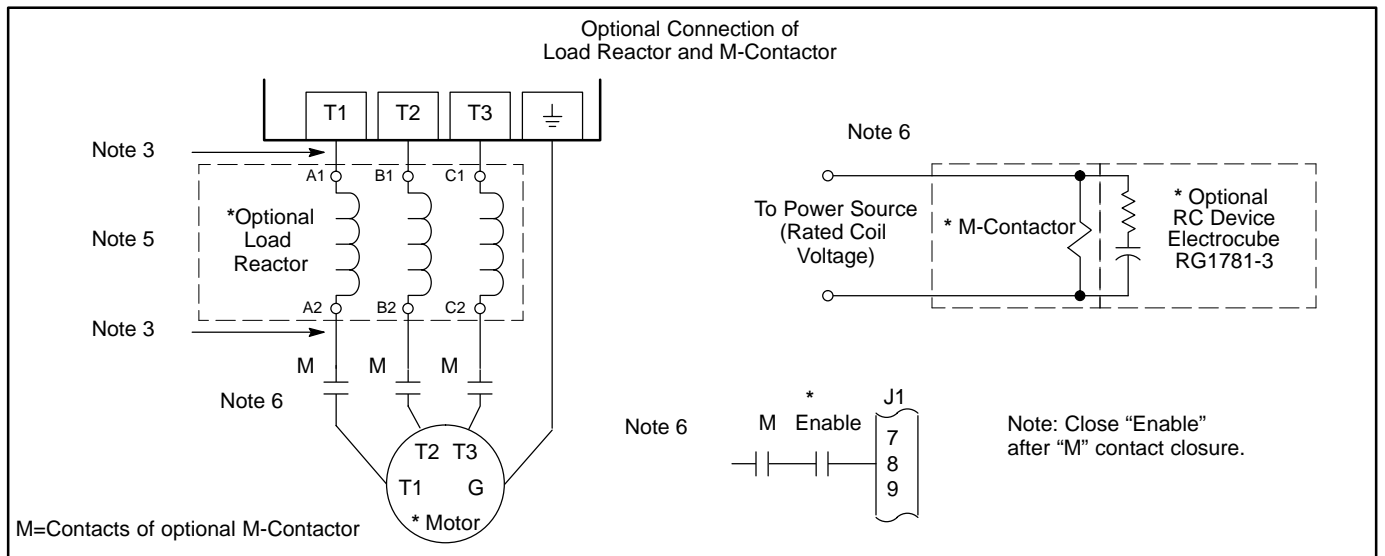

See Recommended Tightening Torques in Section 7.

**Table 3-7 Single Phase Rating Wire Size and Protection Devices - 230 VAC Controls**

Control Output Power Rating	Input Breaker	Input Fuse		Wire Gauge	
		Fast Acting	Time Delay	AWG	mm <sup>2</sup>
1	15A	5A	5A	14	2.5
2	15A	10A	10A	14	2.5
3	15A	15A	15A	14	2.5
5	30A	30A	30A	12	4
7.5	25A	25A	25A	14	2.5
10	40A	30A	30A	12	4
15	50A	45A	45A	10	6
20	60A	45A	45A	8	10
25	70A	70A	70A	8	10
30	80A	80A	80A	6	16
40	100A	100A	100A	4	25
50	125A	125A	125A	4	25

**Table 3-8 Single Phase Rating Wire Size and Protection Devices - 460 VAC Controls**

Control Output Power Rating	Input Breaker	Input Fuse		Wire Gauge	
		Fast Acting	Time Delay	AWG	mm <sup>2</sup>
1	15A	4A	4A	14	2.5
2	15A	8A	8A	14	2.5
3	15A	10A	10A	14	2.5
5	15A	15A	15A	14	2.5
7.5	15A	15A	15A	14	2.5
10	20A	15A	15A	14	2.5
15	25A	25A	25A	14	2.5
20	30A	30A	30A	14	2.5
25	35A	30A	30A	14	2.5
30	40A	40A	40A	10	6
40	60A	50A	50A	8	10
50	70A	60A	60A	8	10
60	80A	80A	80A	6	16

Note: All wire sizes based on 75°C copper wire, 3% line impedance. Higher temperature smaller gauge wire may be used per NEC and local codes. Recommended fuses/breakers are based on 25°C ambient, maximum continuous control output current and no harmonic current.

---

## Single Phase Input Power Considerations

- ⚠ **Caution:** Do not connect AC power to the Motor terminals T1, T2 and T3. Connecting AC power to these terminals may result in damage to the control.
- ⚠ **Caution:** Baldor recommends not using “Grounded Leg Delta” transformer power leads that may create ground loops and degrade system performance. Instead, we recommend using a four wire Wye.

Single phase AC input power can be used to power the control instead of three phase for control sizes A, B, C, D, E and F. Single phase operation of G size controls is not possible. The specifications and control sizes are listed in Section 7 of this manual. If single phase power is to be used, the rated Horsepower of the control may have to be reduced (derated). In addition, power wiring and jumper changes are required.

Single phase rating wire size and protection devices are listed in Tables 3-7 and 3-8.

**Single Phase Control Derating:** Single phase power derating requires that the continuous and peak current ratings of the control be reduced by the following percentages:

1. **1-2 HP 230 and 460 VAC controls:**  
No derating required.
2. **3-15 HP (Size B) 230 and 460 VAC controls:**  
Derate HP by 40% of the nameplate rating.
3. **15 HP (Size C) and Larger 230 and 460 VAC controls:**  
Derate HP by 50% of the nameplate rating.

---

## Size A and B Single Phase Power Installation

### Jumper Configuration

Size A and B controls, no jumper changes required.

### Power and Control Connections

The single phase power and motor connections are shown in Figure 3-2.



1. Connect the incoming power wires to Main Circuit Terminals L1 and L2.
2. Place a jumper across control power input terminals L2 and L3. Use the same size wire for the jumper as the incoming power wires on L1 and L2.
3. Connect earth ground to the “ $\perp$ ” of the control. Be sure to comply with local codes.

Note: Use same gauge wire for earth ground as is used for L1, L2 and L3 connections. Refer to the Wire Size and Protection Devices tables shown previously in this section.

4. Connect the three phase power leads of the AC motor to terminals T1, T2, and T3 of the Main Circuit Terminals.
5. Connect motor ground wire to the “ $\perp$ ” of the control. Be sure to comply with all applicable codes.

Note: In steps 3 and 5 grounding by using conduit or panel connection is not adequate. A separate conductor of the proper size must be used as a ground conductor.


**Figure 3-2 Size A & B Single Phase 230/460VAC Power and Motor Connections**

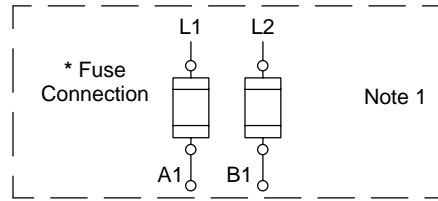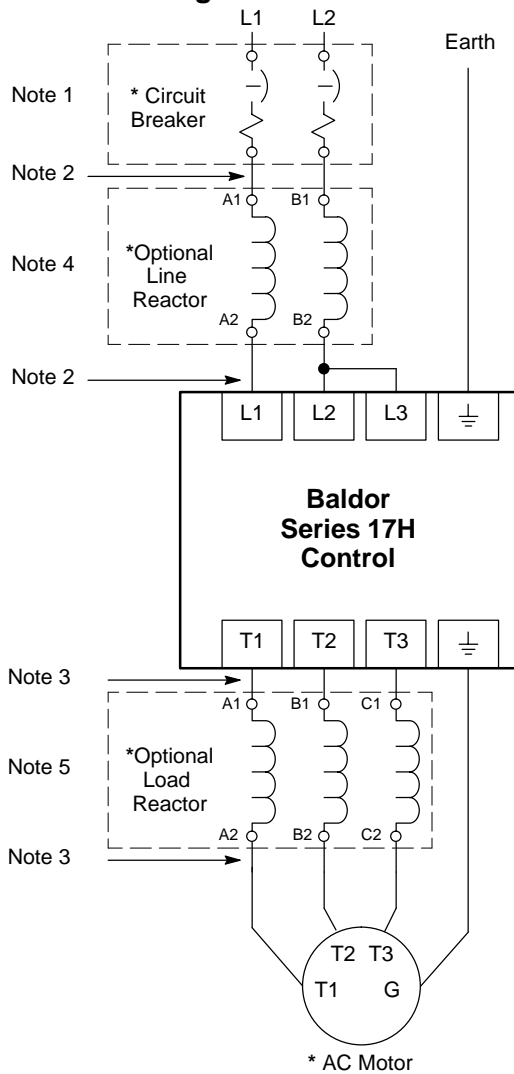

\* Optional components not provided with 17H Control.

**Notes:**


1. See "Protective Devices" described previously in this section.
2. Shield wires inside a metal conduit.
3. Metal conduit should be used to shield output wires (between control and motor).
4. See "Line Impedance" described previously in this section.
5. See Line/Load Reactors described previously in this section.
6. A motor circuit contactor is recommended to provide a positive disconnect and prevent motor rotation which could pose a safety hazard. Connect the M-Contactor as shown. The contactor should open the enable input at J1-8 at least 20 msec before the main M-contacts open to prevent arcing at contacts. This greatly increases contactor life and allows use of IEC rated contactors.

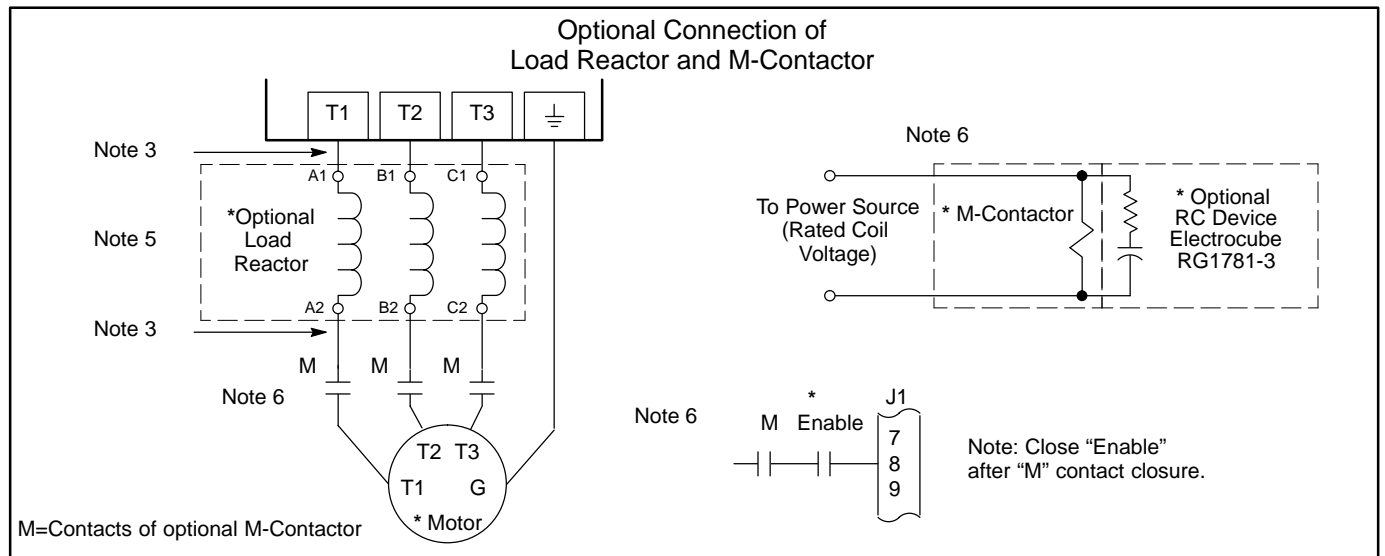

See Recommended Tightening Torques in Section 7.

## Size C and D Single Phase Power Installation

Figure 3-3 Jumper Configuration

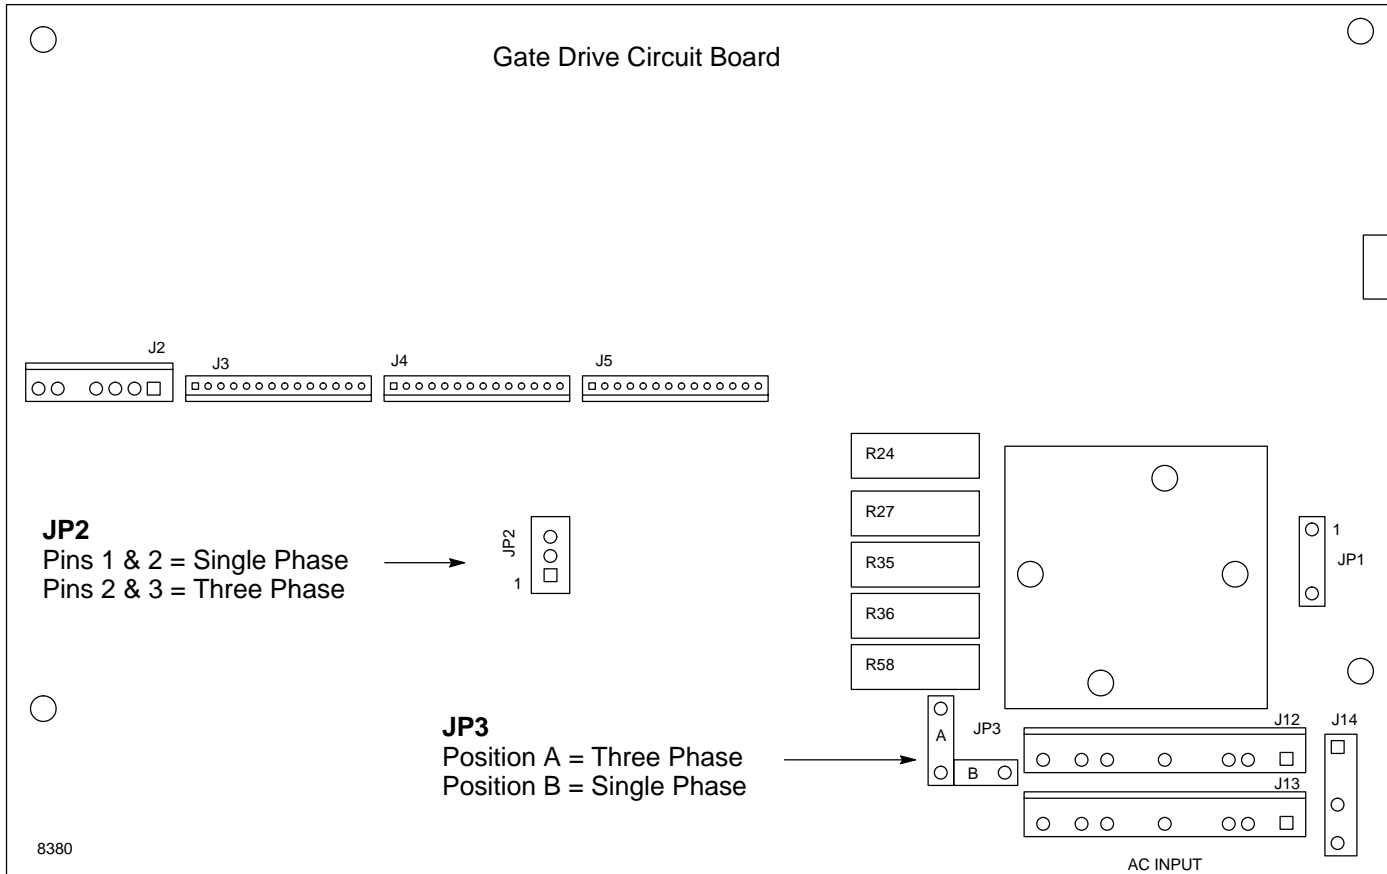

### Power and Control Connections

The single phase Gate Drive board jumpers are shown in Figure 3-3.

1. Place JP2 on pins 1 & 2 for control single phase operation. Place JP3 in position B for fan single phase operation.

The single phase power and motor connections are shown in Figure 3-4.



2. Connect the incoming power wires to Main Circuit Terminals L2 and L3.
3. Place a jumper across control power input terminals L1 and L2. Use the same size wire for the jumper as the incoming power wires on L2 and L3.
4. Connect earth ground to the "⊥" of the control. Be sure to comply with local codes.

Note: Use same gauge wire for earth ground as is used for L1, L2 and L3 connections. Refer to the Wire Size and Protection Devices tables shown previously in this section.

5. Connect the three phase power leads of the AC motor to terminals T1, T2, and T3 of the Main Circuit Terminals.
6. Connect motor ground wire to the "⊥" of the control. Be sure to comply with all applicable codes.

Note: In steps 3 and 5 grounding by using conduit or panel connection is not adequate. A separate conductor of the proper size must be used as a ground conductor.


**Figure 3-4 Size C & D Single Phase 230/460VAC Power and Motor Connections**

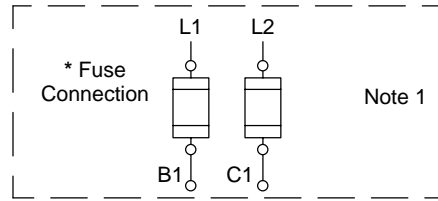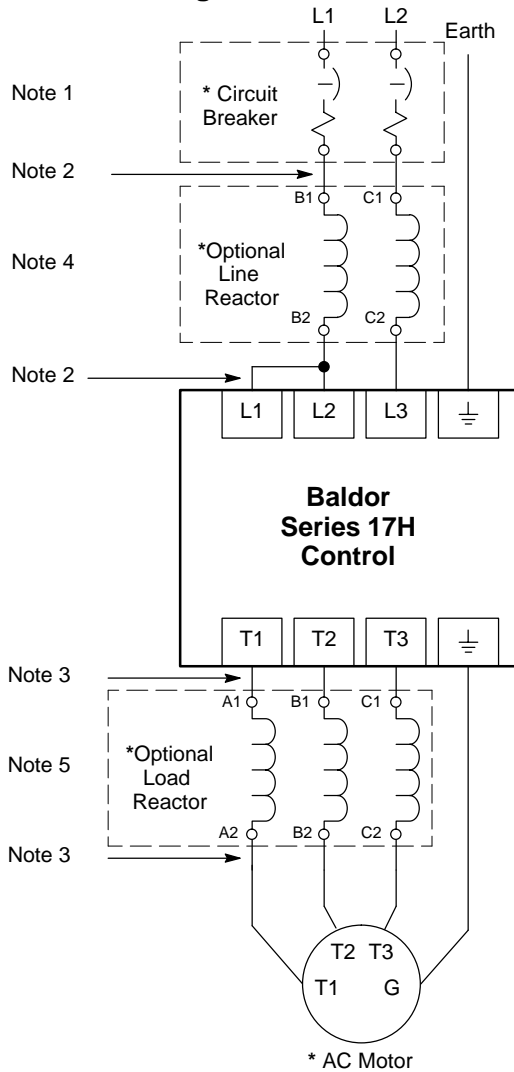

\* Optional components not provided with 17H Control.

**Notes:**


1. See "Protective Devices" described previously in this section.
2. Shield wires inside a metal conduit.
3. Metal conduit should be used to shield output wires (between control and motor).
4. See "Line Impedance" described previously in this section.
5. See Line/Load Reactors described previously in this section.
6. A motor circuit contactor is recommended to provide a positive disconnect and prevent motor rotation which could pose a safety hazard. Connect the M-Contactor as shown. The contactor should open the enable input at J1-8 at least 20 msec before the main M-contacts open to prevent arcing at contacts. This greatly increases contactor life and allows use of IEC rated contactors.

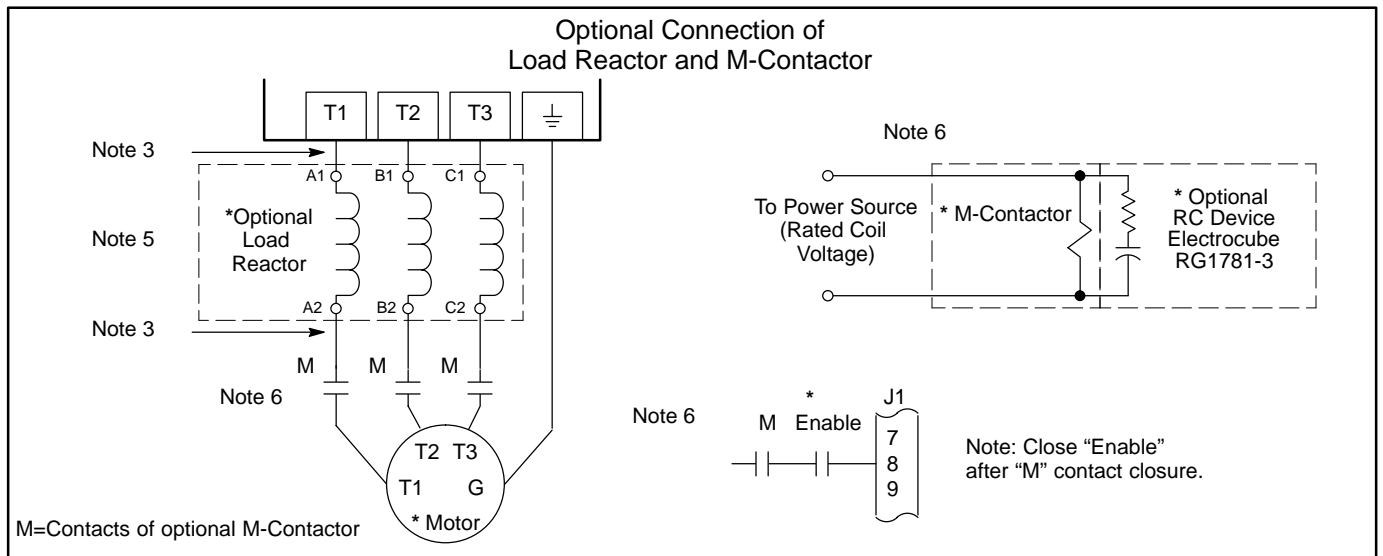

See Recommended Tightening Torques in Section 7.

## Size E Single Phase Power Installation

Figure 3-5 Jumper Configuration

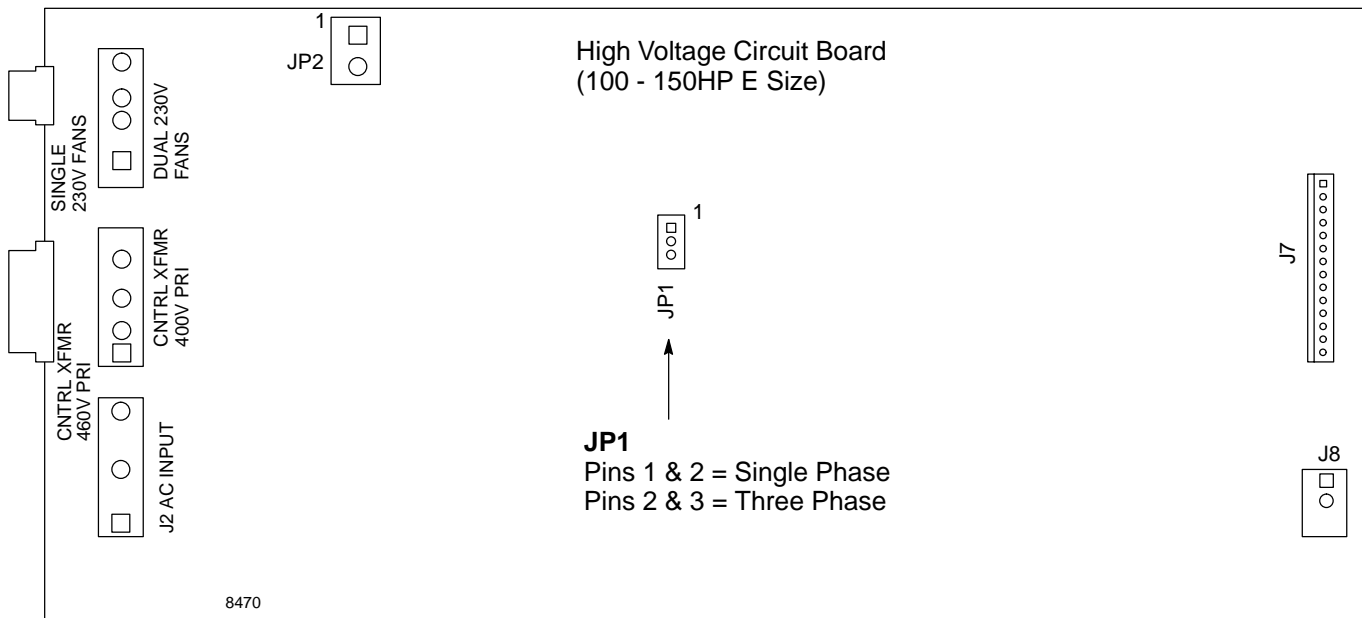

### Power and Control Connections

The single phase High Voltage board jumpers are shown in Figure 3-5.

1. Place JP1 on the High Voltage Circuit Board across pins 1 and 2.

The single phase power and motor connections are shown in Figure 3-6.



2. Connect the incoming power wires to Main Circuit Terminals L1 and L2.
3. Place a jumper across control power input terminals L2 and L3. Use the same size wire for the jumper as the incoming power wires on L1 and L2.
4. Connect earth ground to the “ $\perp$ ” of the control. Be sure to comply with local codes.

Note: Use same gauge wire for earth ground as is used for L1, L2 and L3 connections. Refer to the Wire Size and Protection Devices tables shown previously in this section.

5. Connect the three phase power leads of the AC motor to terminals T1, T2, and T3 of the Main Circuit Terminals.
6. Connect motor ground wire to the “ $\perp$ ” of the control. Be sure to comply with all applicable codes.

Note: In steps 3 and 5 grounding by using conduit or panel connection is not adequate. A separate conductor of the proper size must be used as a ground conductor.


**Figure 3-6 Size E Single Phase 230/460VAC Power and Motor Connections**

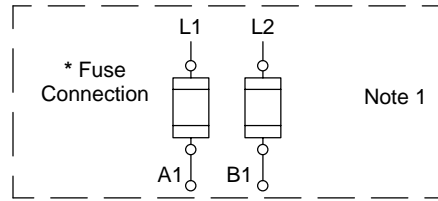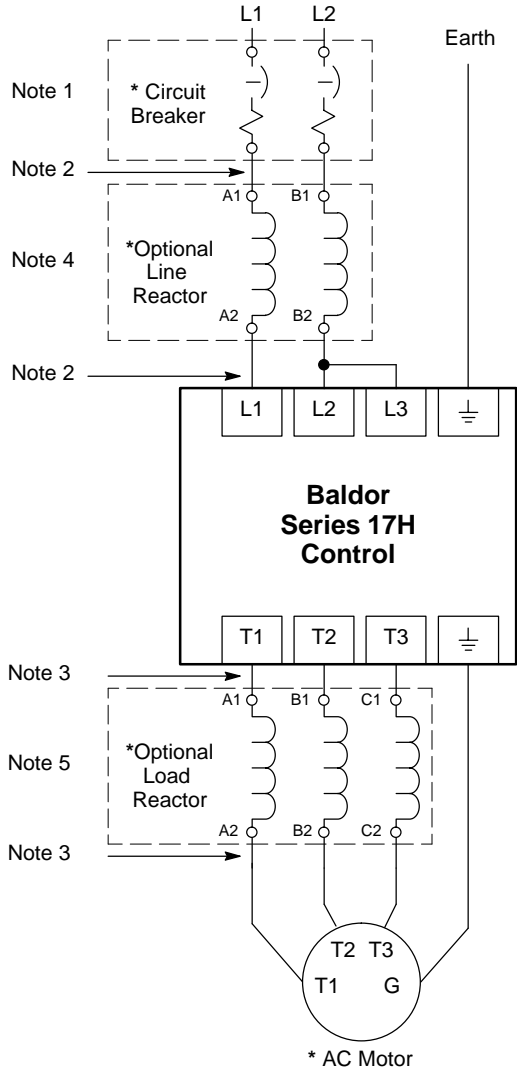

\* Optional components not provided with 17H Control.

**Notes:**


1. See "Protective Devices" described previously in this section.
2. Shield wires inside a metal conduit.
3. Metal conduit should be used to shield output wires (between control and motor).
4. See "Line Impedance" described previously in this section.
5. See Line/Load Reactors described previously in this section.
6. A motor circuit contactor is recommended to provide a positive disconnect and prevent motor rotation which could pose a safety hazard. Connect the M-Contactor as shown. The contactor should open the enable input at J1-8 at least 20 msec before the main M-contacts open to prevent arcing at contacts. This greatly increases contactor life and allows use of IEC rated contactors.

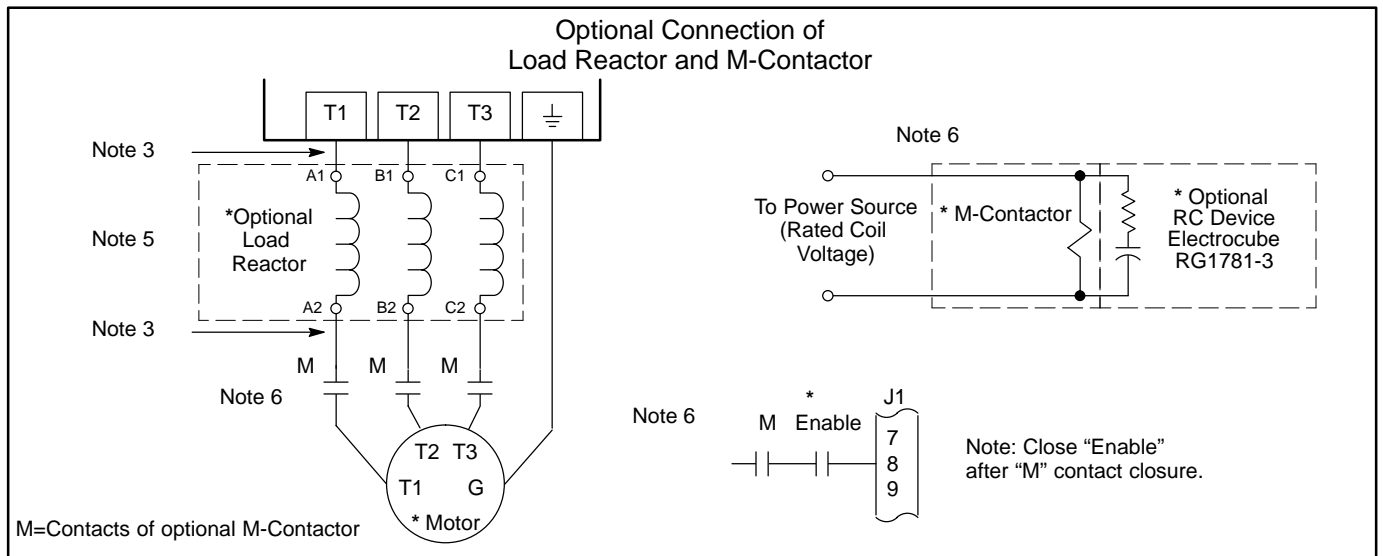

See Recommended Tightening Torques in Section 7.

## Size F Single Phase Power Installation

Figure 3-7 Jumper Configuration

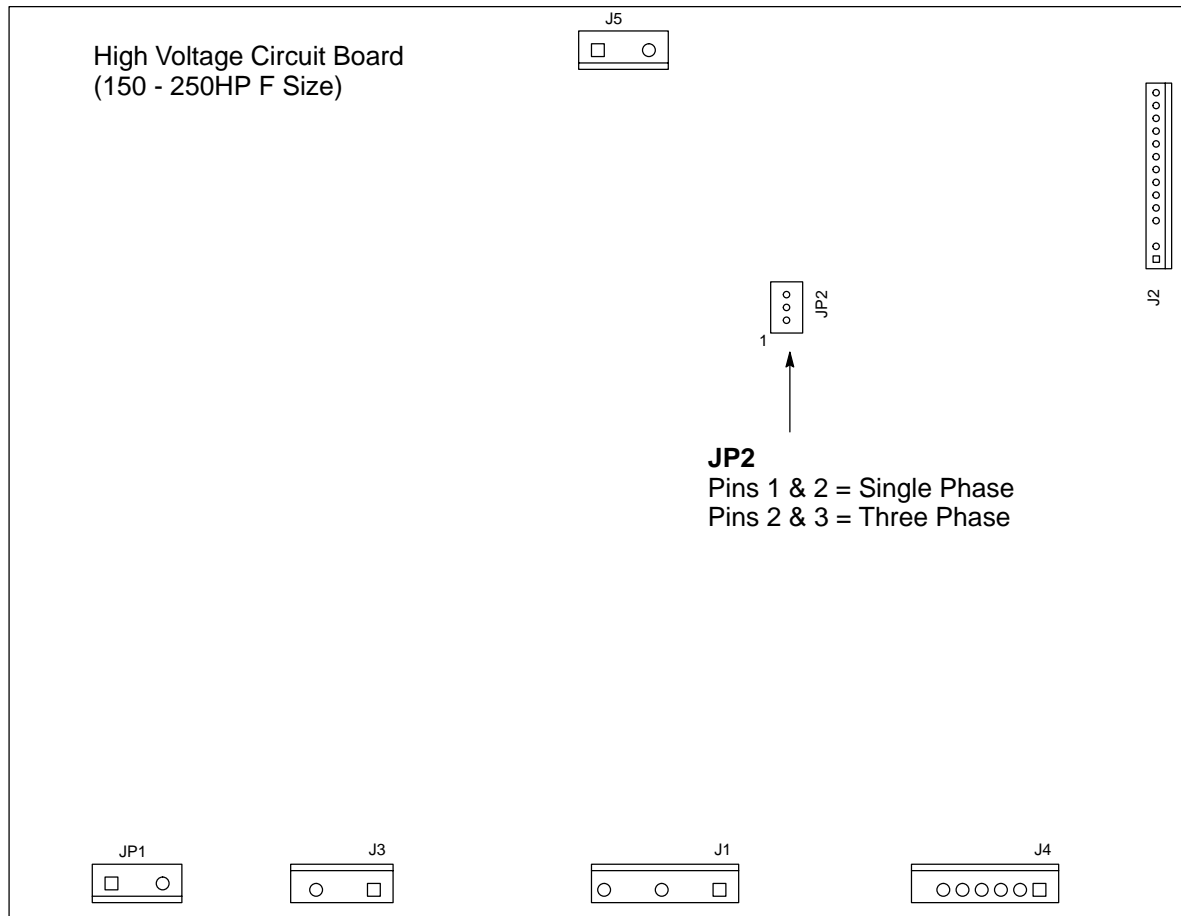

### Power and Control Connections

The single phase High Voltage board jumpers are shown in Figure 3-7.

1. Place JP2 on the High Voltage Circuit Board across pins 1 and 2.

The single phase power and motor connections are shown in Figure 3-8.



2. Connect the incoming power wires to Main Circuit Terminals L2 and L3.
3. Place a jumper across control power input terminals L1 and L3. Use the same size wire for the jumper as the incoming power wires on L2 and L3.
4. Connect earth ground to the “⊥” of the control. Be sure to comply with local codes.

Note: Use same gauge wire for earth ground as is used for L1, L2 and L3 connections. Refer to the Wire Size and Protection Devices tables shown previously in this section.

5. Connect the three phase power leads of the AC motor to terminals T1, T2, and T3 of the Main Circuit Terminals.
6. Connect motor ground wire to the “⊥” of the control. Be sure to comply with all applicable codes.

Note: In steps 3 and 5 grounding by using conduit or panel connection is not adequate. A separate conductor of the proper size must be used as a ground conductor.


**Figure 3-8 Size F Single Phase 230/460VAC Power and Motor Connections**

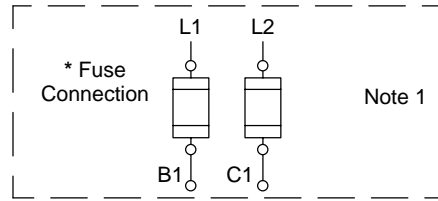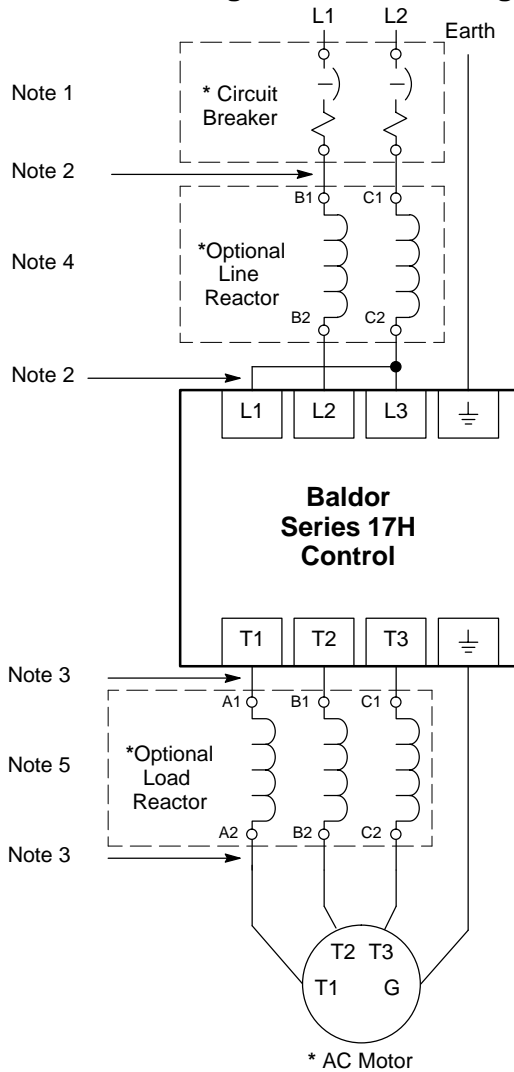

\* Optional components not provided with 17H Control.

**Notes:**

1. See "Protective Devices" described previously in this section.
2. Shield wires inside a metal conduit.
3. Metal conduit should be used to shield output wires (between control and motor).
4. See "Line Impedance" described previously in this section.
5. See Line/Load Reactors described previously in this section.
6. A motor circuit contactor is recommended to provide a positive disconnect and prevent motor rotation which could pose a safety hazard. Connect the M-Contactor as shown. The contactor should open the enable input at J1-8 at least 20 msec before the main M-contacts open to prevent arcing at contacts. This greatly increases contactor life and allows use of IEC rated contactors.

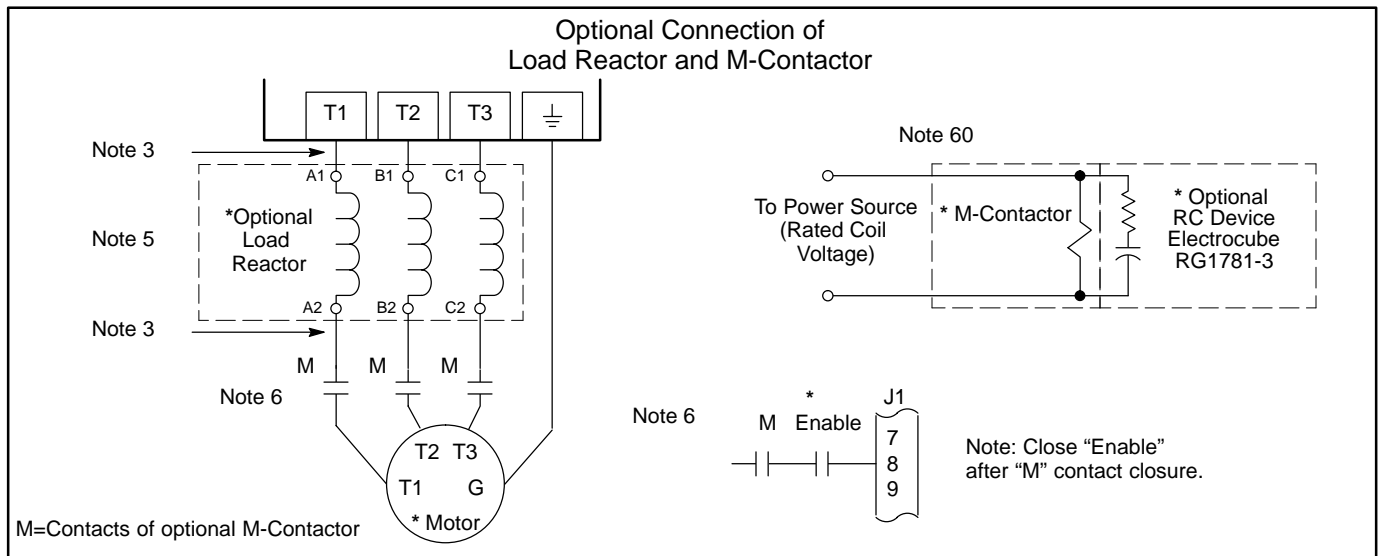

See Recommended Tightening Torques in Section 7.

## Optional Dynamic Brake Hardware

**⚠ WARNING:** Resistors may generate enough heat to ignite combustible materials. To avoid fire hazard, keep all combustible materials and flammable vapors away from brake resistors.

### Physical Installation


Dynamic Brake (DB) hardware must be installed on a flat, non-flammable, vertical surface to obtain effective cooling and operation. The ambient temperature must not exceed 80°C.

1. Select a clean **VERTICAL** surface that is free from corrosive gasses, liquids, vibration, dust and metallic particles.

**⚠ Caution:** If the DB hardware mounting is in any position other than vertical (Figure 3-9), the DB hardware must be derated by 35% of its wattage rating. (The value of the Level 2 Brake Adjust block, Resistor Watts parameter must not exceed 65% of the wattage value stated on the resistor nameplate).

2. Mount the DB hardware as shown in Figure 3-9.

**Figure 3-9 DB Hardware Installation**

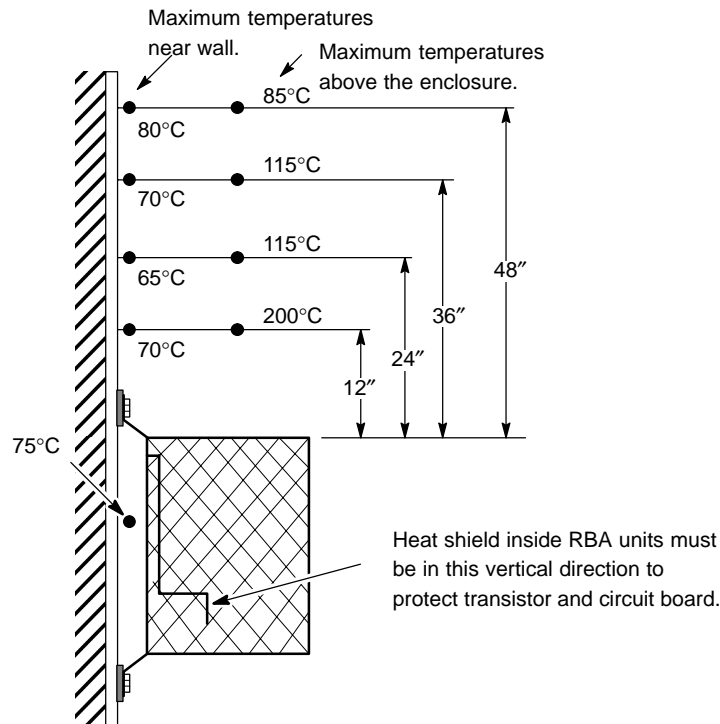


## Electrical Installation

Terminal connections for DB hardware are determined by 17H Control model number suffix (E, EO, ER or MO). See Figure 3-10 for terminal identification.

**Figure 3-10 DB Terminal Identification**


“E” or “W” suffix (ZD17HXXX-E).

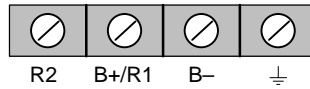

“EO” or “MO” suffix (ZD17HXXX-EO).




“ER” suffix (ZD17HXXX-ER).

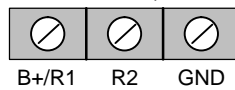

See recommended Terminal Tightening Torques in Section 7.

**Figure 3-11 Wiring for RGA Assembly (-E, -W and -ER controls)**

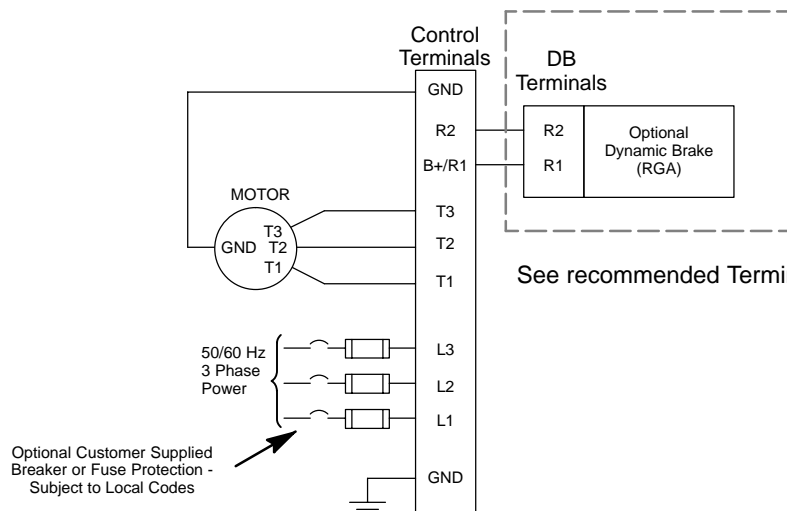


See recommended Terminal Tightening Torques in Table 3-10.

See recommended Terminal Tightening Torques in Section 7.

Note: Although not shown, metal conduit should be used to shield all power wires and motor leads.


**Figure 3-12 Wiring for RBA Assembly**

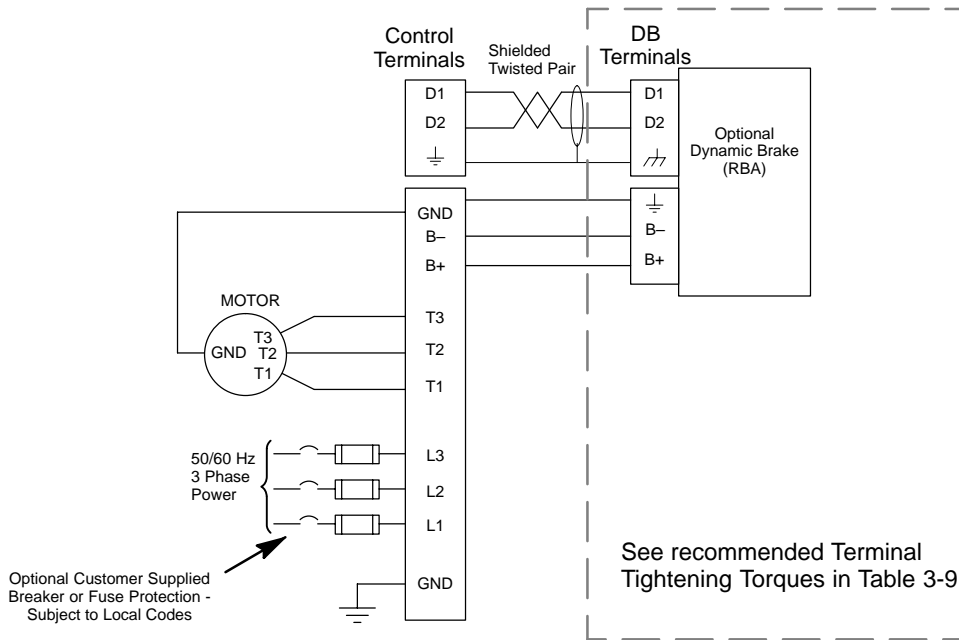

See recommended Terminal Tightening Torques in Section 7.

Note: Although not shown, metal conduit should be used to shield all power wires and motor leads.

**Figure 3-13 Wiring for RTA Assembly**

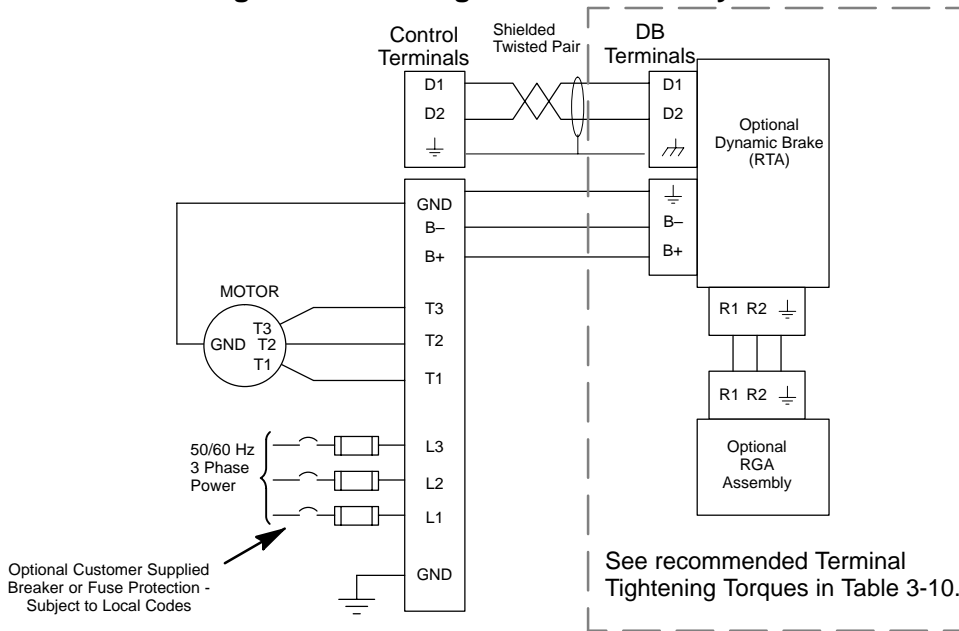

See recommended Terminal Tightening Torques in Section 7.

Note: Although not shown, metal conduit should be used to shield all power wires and motor leads.

**Table 3-9 Terminal Torques & Wire Size for Model No. Suffix E or W**

Control Voltage Rating VAC	B+ / B- / R1 / R2 / $\perp$ Terminals				
	Wire Size		Volt	Tightening Torque	
	AWG	mm <sup>2</sup>		Nm	Lb-in
230, 460, 575	10	6	600	2.26	20

**Table 3-10 Terminal Torques & Wire Size for Model No. Suffix EO, MO, or ER**

Control Voltage Rating VAC	Braking Option Watts Rating	B+ / B- and R1 / R2 / $\perp$ Terminals					D1 / D2 / $\pitchfork$ Terminals				
		Wire Size		Volt	Tightening Torque		Wire Size		Volt	Tightening Torque	
		AWG	mm <sup>2</sup>		Nm	Lb-in	AWG	mm <sup>2</sup>		Nm	Lb-in
230	<10,000	10	6	600	2.26	32	20-22	0.5	600	0.4	3.5
230	>10,000	8	10	600	2.26	32	20-22	0.5	600	0.4	3.5
460	<20,000	10	6	600	2.26	32	20-22	0.5	600	0.4	3.5
460	>20,000	8	10	600	2.26	32	20-22	0.5	600	0.4	3.5
575	<20,000	10	6	600	2.26	32	20-22	0.5	600	0.4	3.5
575	>20,000	8	10	600	2.26	32	20-22	0.5	600	0.4	3.5

**Table 3-11 DB Terminal Torques (All)**

Tightening Torque	
Nm	Lb-in
2.26	32

---

**Control Circuit Connections** Eight operating modes are available in the Series 17H Encoderless Vector Control. These operating modes define the basic motor control setup and the function of the input and output terminals. After the circuit connections are completed, the operating mode is selected by programming the Operating Mode parameter in the Level 1 Input programming Block. Available operating modes include:

- Keypad Control
- Standard Run, 3 Wire Control
- 15 Speed, 2 Wire Control
- Fan Pump, 2 Wire Control
- Fan Pump, 3 Wire Control
- Bipolar Speed
- Process Control
- Serial

Note: The Serial operating mode requires one of the optional Serial Interface expansion boards (RS232 or 422/485). Installation and operation information for these serial expansion boards is provided in Serial Communications expansion board manual MN1310. This manual is shipped with the serial expansion boards.


### Keypad Mode Connections

To operate in the keypad mode, set the Level 1 Input block, Operating Mode parameter to Keypad. In this mode, the External Trip input is active (if the Level 2 Protection block, External Trip parameter is set to ON), the Enable input is active (if the Level 2 Protection block, Local Enable INP is set to ON) and the Opto Outputs are active. Both analog outputs also remain active. Connections are made as shown in Figure 3-14.

The STOP key can operate in two ways:

- Press STOP key one time to brake or coast to stop.
- Press STOP key two times to disable control.

**Figure 3-14 Keypad Control Connection Diagram**

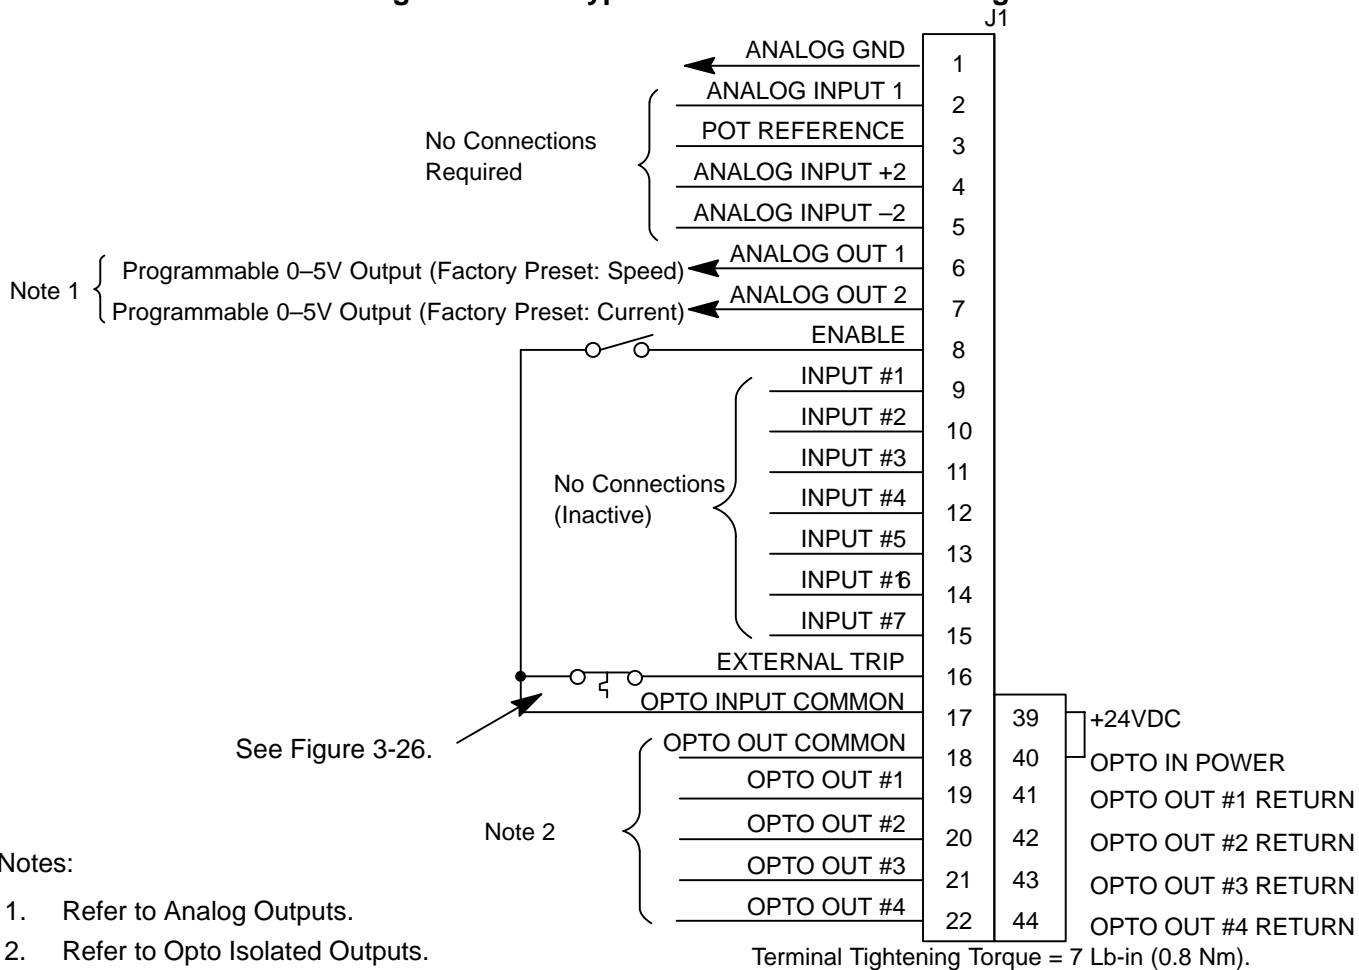

**Notes:**

1. Refer to Analog Outputs.
2. Refer to Opto Isolated Outputs.


- J1-8 Optional, is active when Level 2 Protection block, Local Enable INP parameter is set to ON. OPEN disables the control and motor coasts to a stop. CLOSED allows current to flow in the motor and produce torque.
- J1-16 OPEN causes an external trip to be received by control. The control will disable and display external trip when programmed "ON". When this occurs, the drive is disabled and an external trip fault is displayed on the keypad display (also logged into the fault log). If J1-16 is connected, you must set Level 2 Protection block, External Trip to "ON".
- J1-39 & 40 Jumper as shown to power the Opto Inputs from the internal +24VDC supply.

---

### Standard Run 3 Wire Mode Connections

In standard run mode, the control is operated by the Opto Isolated inputs at J1-8 through J1-16 and the analog command input. The Opto inputs can be switches as shown in Figure 3-15 or logic signals from another device. The External Trip Opto Input at J1-16 is active if connected as shown and the Level 2 Protection block, External Trip parameter is set to ON.

**Figure 3-15 Standard Run 3-Wire Connection Diagram**

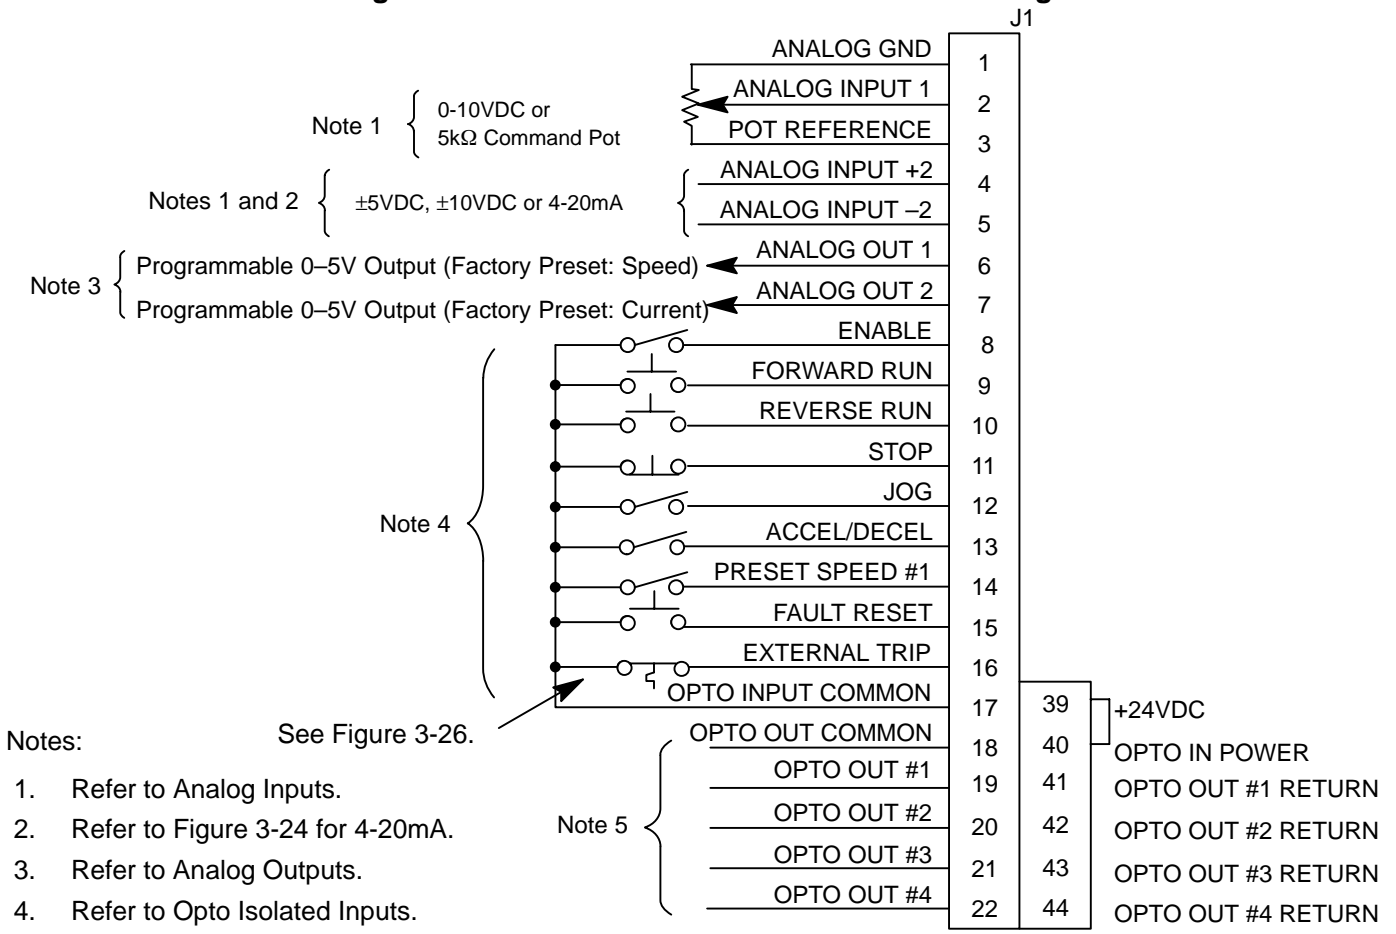

Terminal Tightening Torque = 7 Lb-in (0.8 Nm).

- J1-8 OPEN disables the control and motor coasts to a stop. CLOSED allows current to flow in the motor and produce torque.
- J1-9 MOMENTARY CLOSED starts motor operation in the Forward direction. In JOG mode (J1-12 CLOSED), holding J1-9 CLOSED jogs motor in the Forward direction.
- J1-10 MOMENTARY CLOSED starts motor operation in the Reverse direction. In JOG mode (J1-12 CLOSED), holding J1-10 CLOSED jogs motor in the Reverse direction.
- J1-11 MOMENTARY OPEN causes motor to stop. Current continues to be applied to the motor.
- J1-12 CLOSED places control in JOG mode, Forward (J1-9) and Reverse Run (J1-10) are used to jog the motor.
- J1-13 OPEN selects ACC / DEC / S-CURVE group 1. CLOSED selects group 2.
- J1-14 CLOSED selects preset speed #1, (J1-12 JOG, will override this preset speed). OPEN allows speed command from Analog input #1 or #2 or expansion board.
- J1-15 CLOSED to reset fault condition, OPEN to run.
- J1-16 OPEN causes an external trip to be received by control. The control will disable and display external trip when programmed "ON". When this occurs, the drive is disabled and an external trip fault is displayed on the keypad display (also logged into the fault log). If J1-16 is connected, you must set Level 2 Protection block, External Trip to "ON".
- J1-39 & 40 Jumper as shown to power the Opto Inputs from the internal +24VDC supply.

---

**15 Speed 2-Wire Mode Connections** Switch Truth Table is defined in Table 3-12.


Operation in the 15 Speed 2-Wire mode is controlled by the Opto Isolated inputs at J1-8 through J1-16. The Opto inputs can be switches as shown in Figure 3-16 or logic signals from another device. The External Trip Opto Input at J1-16 is active if connected as shown and the Level 2 Protection block, External Trip parameter is set to ON.

Switched inputs at J1-11 through J1-14 allow selection of 15 preset speeds and provide Fault Reset as defined in Table 3-12.

**Table 3-12 Switch Truth Table for 15 Speed, 2 Wire Control Mode**

<b>Function</b>	<b>J1-11</b>	<b>J1-12</b>	<b>J1-13</b>	<b>J1-14</b>
Preset 1	Open	Open	Open	Open
Preset 2	Closed	Open	Open	Open
Preset 3	Open	Closed	Open	Open
Preset 4	Closed	Closed	Open	Open
Preset 5	Open	Open	Closed	Open
Preset 6	Closed	Open	Closed	Open
Preset 7	Open	Closed	Closed	Open
Preset 8	Closed	Closed	Closed	Open
Preset 9	Open	Open	Open	Closed
Preset 10	Closed	Open	Open	Closed
Preset 11	Open	Closed	Open	Closed
Preset 12	Closed	Closed	Open	Closed
Preset 13	Open	Open	Closed	Closed
Preset 14	Closed	Open	Closed	Closed
Preset 15	Open	Closed	Closed	Closed
Fault Reset	Closed	Closed	Closed	Closed

**Figure 3-16 15 Speed 2-Wire Control Connection Diagram**

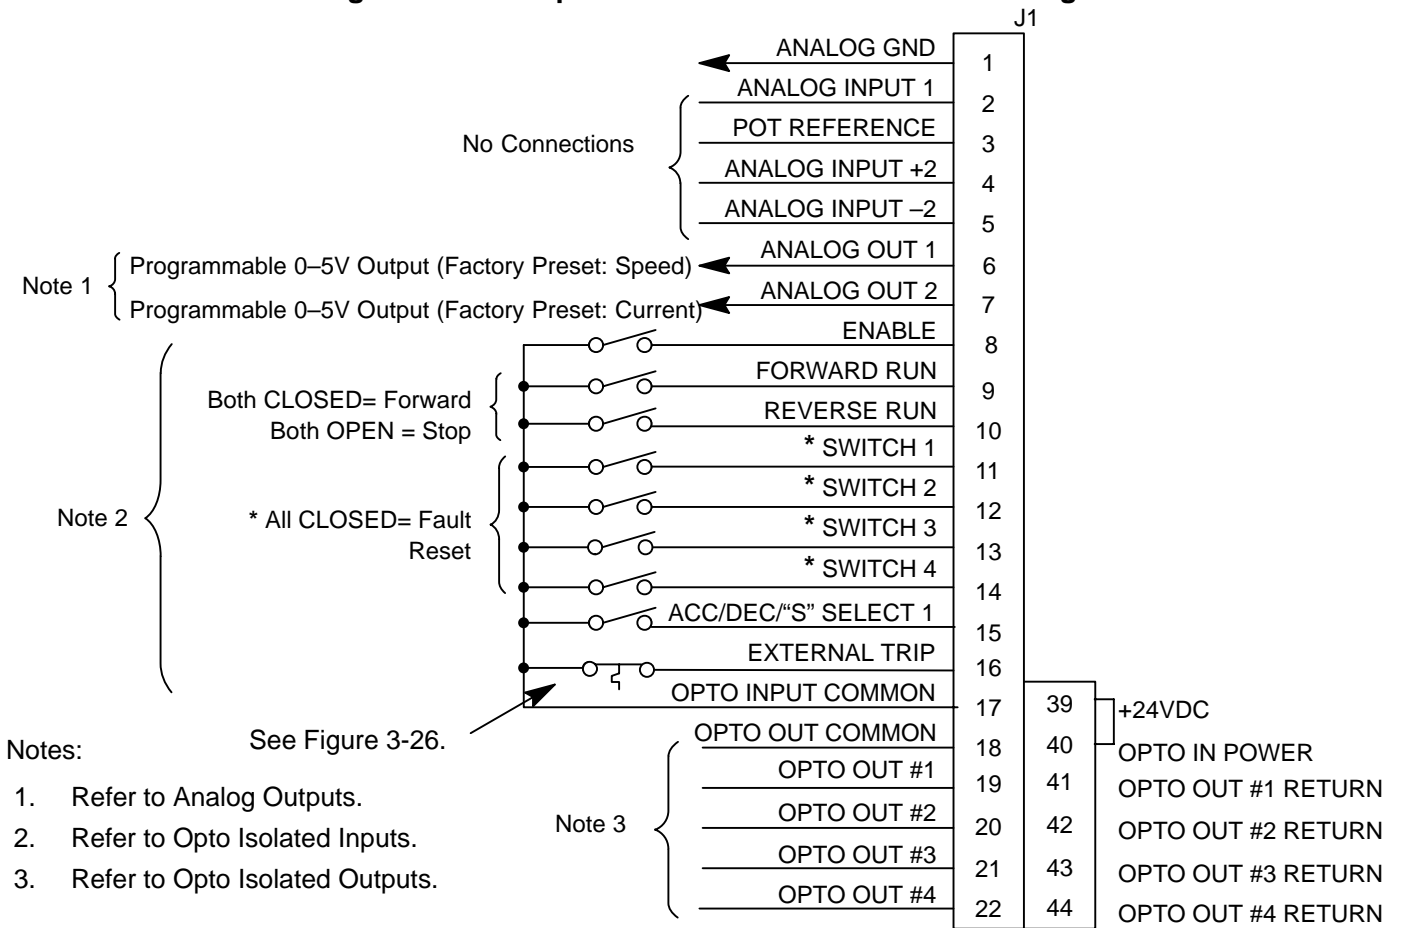

Note 1 { Programmable 0–5V Output (Factory Preset: Speed)  
Programmable 0–5V Output (Factory Preset: Current)

Note 2 { Both CLOSED= Forward  
Both OPEN = Stop  
\* All CLOSED= Fault  
Reset

Notes:

See Figure 3-26.

1. Refer to Analog Outputs.
2. Refer to Opto Isolated Inputs.
3. Refer to Opto Isolated Outputs.

Note 3 {


\* Refer to truth table, Table 3-12.

Terminal Tightening Torque = 7 Lb-in (0.8 Nm).

- J1-8 OPEN disables the control & motor coasts to a stop. CLOSED allows current to flow in the motor and produce torque.
- J1-9 CLOSED operates the motor in the Forward direction (with J1-10 open). OPEN motor decels or coasts to stop (depending on Keypad Stop mode parameter setting).
- J1-10 CLOSED operates motor in the Reverse direction (with J1-9 open). OPEN motor decels or coasts to stop (depending on Keypad Stop mode parameter setting).
- J1-11 to J1-14 Selects programmed preset speeds as defined in Table 3-12.
- J1-15 Selects ACC/DEC/S" group. OPEN selects group 1. CLOSED selects group 2.
- J1-16 OPEN causes an external trip to be received by control. The control will disable and display external trip when programmed "ON". When this occurs, the drive is disabled and an external trip fault is displayed on the keypad display (also logged into the fault log). If J1-16 is connected, you must set Level 2 Protection block, External Trip to "ON".
- J1-39 & 40 Jumper as shown to power the Opto Inputs from the internal +24VDC supply.

## Fan Pump 2 Wire Control Mode

Figure 3-17 Fan Pump, 2 Wire Control Connection Diagram

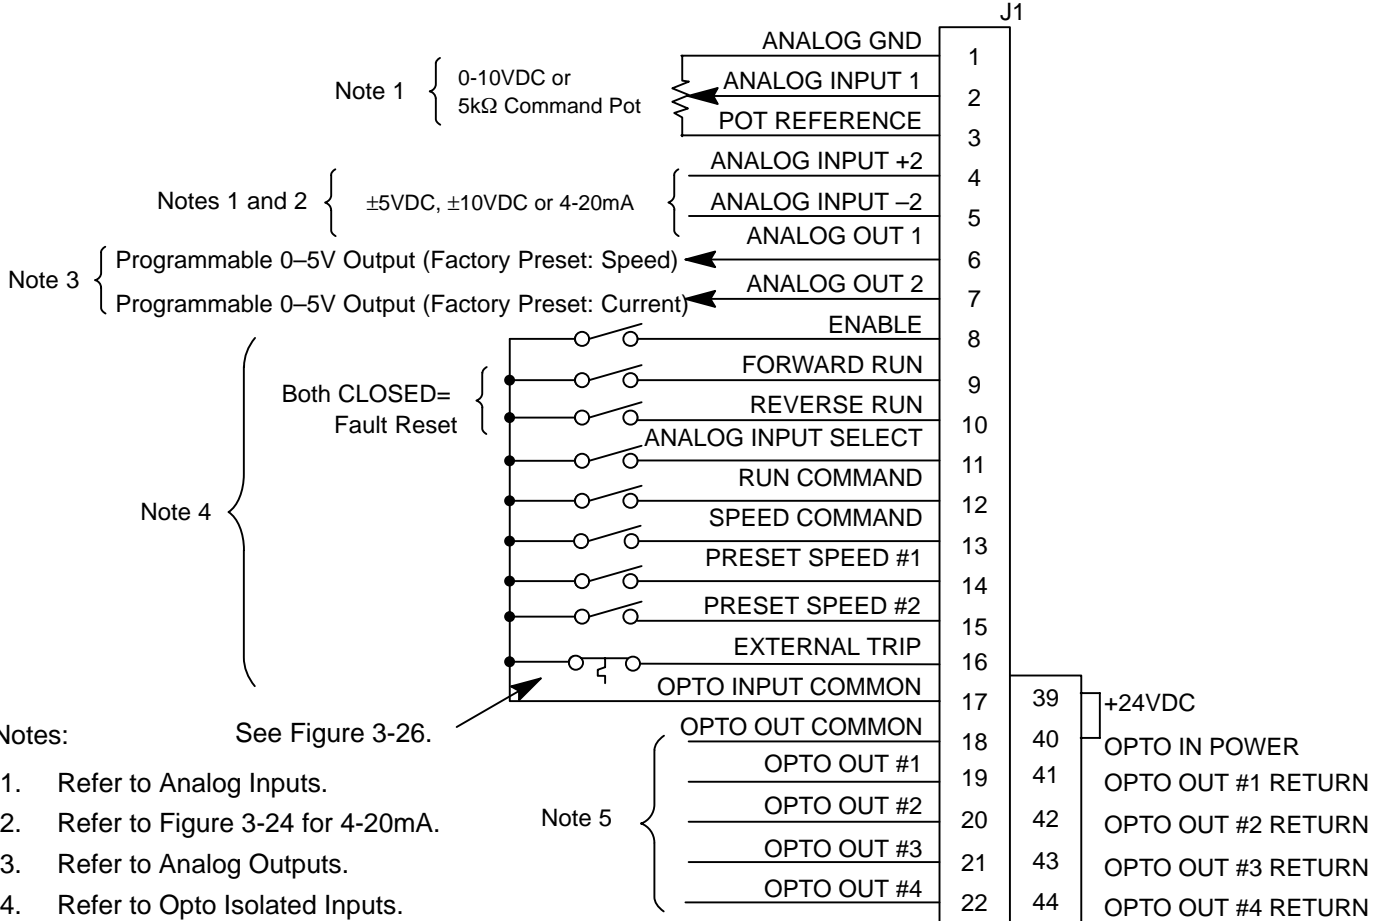

Notes: See Figure 3-26.


1. Refer to Analog Inputs.
2. Refer to Figure 3-24 for 4-20mA.
3. Refer to Analog Outputs.
4. Refer to Opto Isolated Inputs.
5. Refer to Opto Isolated Outputs.

Terminal Tightening Torque = 7 Lb-in (0.8 Nm).

- J1-8 OPEN disables the control and motor coasts to a stop. CLOSED allows current to flow in the motor.
- J1-9 CLOSED starts motor operation in the Forward direction. OPEN initiates Stop command.
- J1-10 CLOSED starts motor operation in the Reverse direction. OPEN initiates Stop command.
- J1-11 OPEN selects setting of "Command Select" parameter. Closed selects Analog Input #1.  
Note: If Command Select (Level 1 Input block) is set to Potentiometer, then Analog Input #1 is always selected regardless of this switch position.
- J1-12 Run Command. OPEN selects STOP/START and Reset commands from Keypad. CLOSED selects STOP/START and Reset commands from terminal strip.
- J1-13 Speed Command. OPEN selects speed commanded from Keypad. CLOSED selects terminal strip speed source (selected in the Level 1 Input block, Command Select parameter).  
Note: When changing from Keypad to Terminal Strip (J1-12 or J1-13) the motor speed and direction will remain the same after the change.
- J1-14 OPEN selects preset speed #1 regardless of the Speed Command input J1-13. (FIRESTAT).
- J1-15 OPEN selects preset speed #2 regardless of the Speed Command input J1-13. (FREEZESTAT).  
Note: If J1-14 and J1-15 are both Open, Preset Speed #1 is selected.
- J1-16 OPEN causes an external trip to be received by control. The control will disable and display external trip when programmed "ON". When this occurs, the drive is disabled and an external trip fault is displayed on the keypad display (also logged into the fault log). If J1-16 is connected, you must set Level 2 Protection block, External Trip to "ON".

## Fan Pump 3 Wire Control Mode

**Figure 3-18 Fan Pump, 3 Wire Control Connection Diagram**

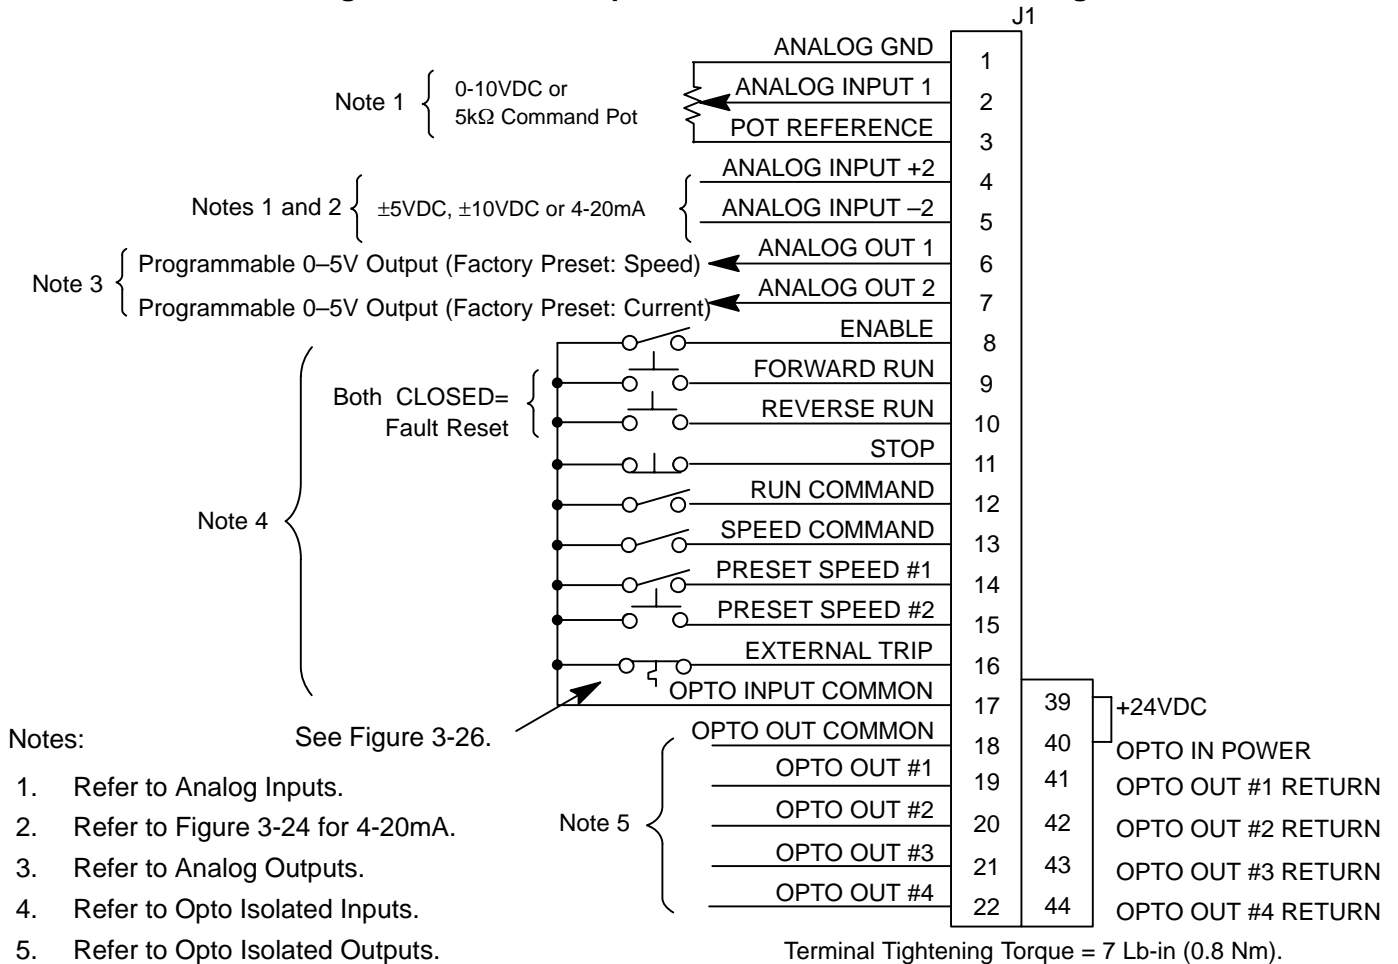

- J1-8 OPEN disables the control and motor coasts to a stop. CLOSED allows current to flow in the motor.
- J1-9 MOMENTARY CLOSED starts motor operation in the Forward direction.
- J1-10 MOMENTARY CLOSED starts motor operation in the Reverse direction.
- J1-11 When OPEN motor Decels to stop.
- J1-12 Run Command. OPEN selects STOP/START and Reset commands from Keypad. CLOSED selects STOP/START and Reset commands from terminal strip.
- J1-13 Speed Command. OPEN selects speed commanded from Keypad. CLOSED selects terminal strip speed source (selected in the Level 1 Input block, Command Select parameter).
- Note: When changing from Keypad to Terminal Strip (J1-12 or J1-13) the motor speed and direction will remain the same after the change.
- J1-14 OPEN selects preset speed #1 regardless of the Speed Command input J1-13. (FIRESTAT)
- J1-15 OPEN selects preset speed #2 regardless of the Speed Command input J1-13. (FREEZESTAT)
- Note: If J1-14 and J1-15 are both Open, Preset Speed #1 is selected.
- J1-16 OPEN causes an external trip to be received by control. The control will disable and display external trip when programmed "ON". When this occurs, the drive is disabled and an external trip fault is displayed on the keypad display (also logged into the fault log). If J1-16 is connected, you must set Level 2 Protection block, External Trip to "ON".

---

## Bipolar Speed Mode Connections

This mode allows the user to store up to four (4) different complete sets of operating parameters. This is important if you wish to store and use different acceleration rates, speed commands, jog speeds or to store tuning parameter values for different motors etc.

To program and use multiple parameter sets: (refer to Figure 3-19 and Table 3-13) the control must be in Remote mode (not Local mode):


Note: Except for the Level 1 Operating Mode parameter, the control can be programmed in the REMOTE mode with the drive enabled and switches in step 4 closed. The control must be disabled to change the operating mode parameter.

1. Set the Level 1 INPUT block, Operating Mode parameter value to BIPOLAR in each of the parameter sets.
2. Set switches J1-13 and J1-14 to Parameter Table #0 (both switches open). Be sure switches J1-9 and J1-10 are OPEN, J1-8 is CLOSED. Enter all parameter values, and autotune as instructed in Section 3 of this manual. This creates and saves the first parameter set which is numbered Table#0.
3. Set switches J1-13 and J1-14 to Parameter Table #1. Be sure switches J1-9 and J1-10 are OPEN, J1-8 is CLOSED. Enter all parameter values, and autotune as instructed in Section 3 of this manual. This creates and saves the second parameter set which is numbered Table#1.
4. Set switches J1-13 and J1-14 to Parameter Table #2. Be sure switches J1-9 and J1-10 are OPEN, J1-8 is CLOSED. Enter all parameter values, and autotune as instructed in Section 3 of this manual. This creates and saves the third parameter set which is numbered Table#2.
5. Set switches J1-13 and J1-14 to Parameter Table #3. Be sure switches J1-9 and J1-10 are OPEN, J1-8 is CLOSED. Enter all parameter values, and autotune as instructed in Section 3 of this manual. This creates and saves the final parameter set which is numbered Table#3.
6. Remember that to change the value of a parameter in one of the parameter tables, you must first select the table using the switches. You cannot change a value in a table until you have first selected that table.

**Table 3-13 Bipolar Mode Table Select Truth Table**

Function	J1-13	J1-14
Parameter Table #0	Open	Open
Parameter Table #1	Closed	Open
Parameter Table #2	Open	Closed
Parameter Table #3	Closed	Closed

**Figure 3-19 Bipolar Speed Connection Diagram**

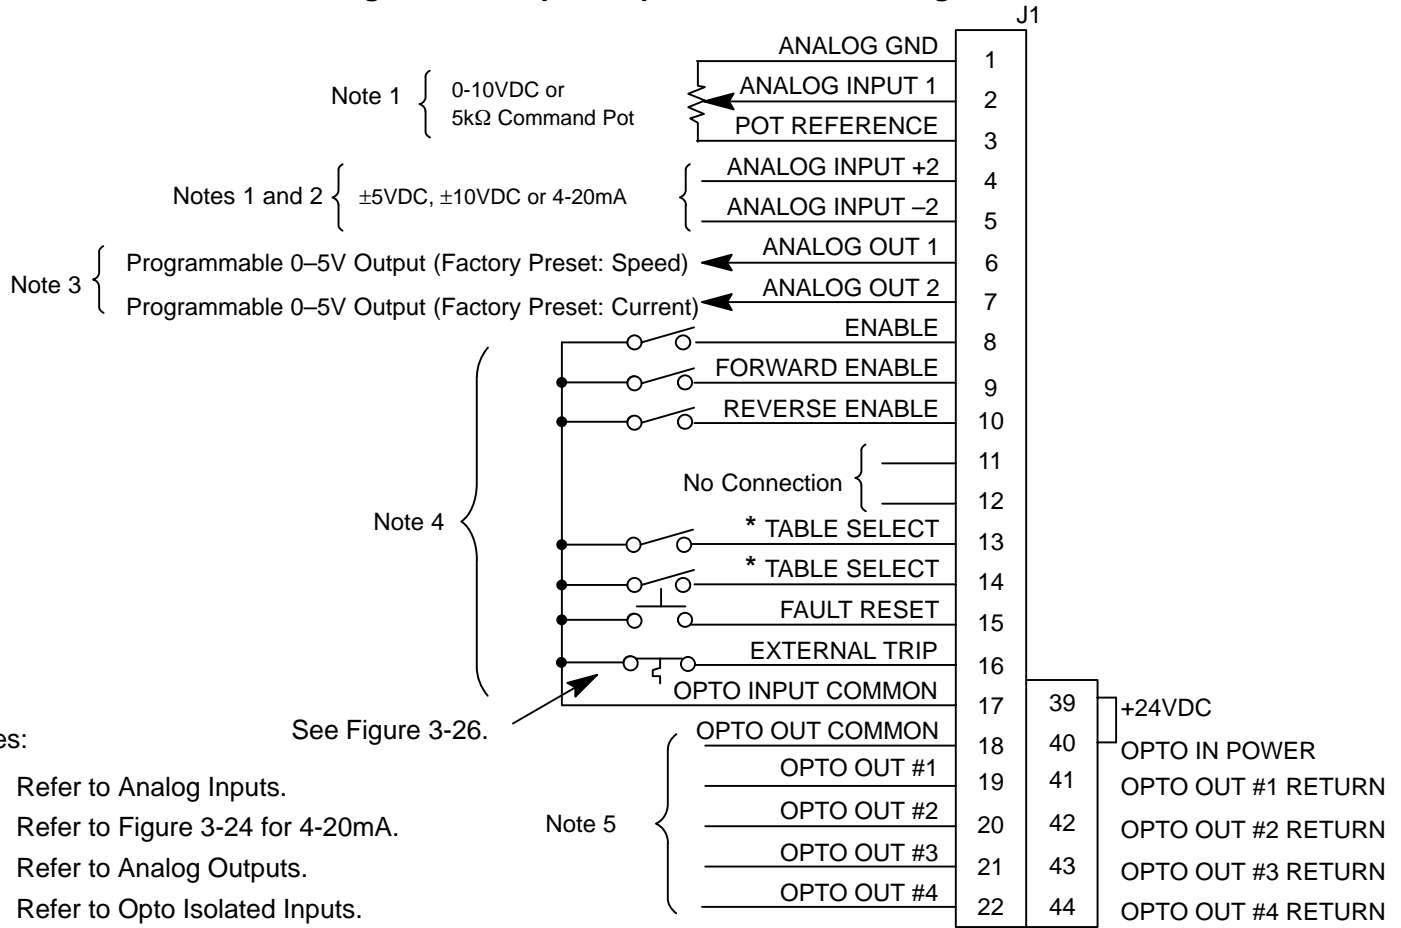

**Notes:**

1. Refer to Analog Inputs.
2. Refer to Figure 3-24 for 4-20mA.
3. Refer to Analog Outputs.
4. Refer to Opto Isolated Inputs.
5. Refer to Opto Isolated Outputs.

\* See Table 3-13.

Terminal Tightening Torque = 7 Lb-in (0.8 Nm).

- J1-8 OPEN disables the control & motor coasts to a stop. CLOSED allows current to flow in the motor and produce torque.
- J1-9 CLOSED to enable operation in the Forward direction. OPEN TO DISABLE Forward operation (drive will brake to a stop if a Forward command is still present).
- J1-10 CLOSED to enable operation in the Reverse direction. OPEN to disable Reverse operation (drive will brake to a stop if a Reverse command is still present).
- J1-13 & J1-14 Select from four parameter tables as defined in Table 3-13.
- J1-15 OPEN to run, Momentary CLOSED to reset fault condition.
- J1-16 OPEN causes an external trip to be received by control. The control will disable and display external trip when programmed "ON". When this occurs, the drive is disabled and an external trip fault is displayed on the keypad display (also logged into the fault log). If J1-16 is connected, you must set Level 2 Protection block, External Trip to "ON".
- J1-39 & 40 Jumper as shown to power the Opto Inputs from the internal +24VDC supply.

---

**Process Mode Connections** The process control mode provides an auxiliary closed loop general purpose PID set point control that is shown in Figure 3-20. The process control loop may be configured in either of two ways.

1. Using two (2) inputs; a set point and a process feedback input. The error signal (between the setpoint and the feedback signals) adjusts the speed of the motor to eliminate error.
2. Using three (3) inputs; a setpoint, process feedback and feedforward inputs. Instead of waiting for an error signal to develop between the setpoint and the process feedback signals, the feedforward signal adjusts the speed of the motor to reduce the amount of error that will develop between the feedback and setpoint inputs.

The objective of either method is to force the process feedback to be as close to the setpoint as possible and eliminate process error. Table 3-14 shows a matrix of Process Mode Input Signal Compatibility for the Setpoint Source, Process Feedback and Feedforward signals. Be sure to use this information to select the signal types and expansion boards for your application.

#### **Two Input Configuration**

For 2 input operation, several parameters must be set as follows:

1. Level 2 Process Control block, "Process Feedback" parameter must be set to the type of feedback signal used. The process feedback signal can be any Analog input available at the J1 terminal strip or expansion board. These and additional selections are shown in Figure 3-20.
2. Level 2 Process Control block, "Setpoint Source" parameter must be set to the type of set point being used.
  - A. A fixed value setpoint is a keypad programmed parameter value. To program a fixed setpoint, do the following:
    - i. Set the Level 2 Process Control block, "Setpoint Source" parameter to Setpoint CMD.
    - ii. Set the Level 2 Process Control block, "Setpoint CMD" parameter to a value between -100% to +100% of the process feedback input.
  - B. If a variable value setpoint is used, the Setpoint Source must be set to any available terminal strip or expansion board input not being used for the process feedback input. Selections are shown in Figure 3-20.
3. Level 1 Input block "Command Select" parameter must be set to "None".

#### **Three Input Configuration**


For 3 input operation, several parameters must be set as follows:

1. Level 2 Process Control block "Process Feedback" parameter must be set to the type of feedback signal used. The process feedback signal can be any Analog input available at the J1 terminal strip or expansion board. These and additional selections are shown in Figure 3-20.
2. Level 2 Process Control block "Setpoint Source" parameter must be set to the type of set point being used.
  - A. If a fixed value setpoint is used, set the Level 2 Process Control block, Setpoint Source parameter to "Setpoint CMD". Set the Level 2 Process Control block "Setpoint Command" parameter to a value between -100% to +100% of the process feedback.
  - B. If a variable value setpoint is used, set the Level 2 Process Control block, Setpoint Source parameter to any Analog1, Analog2 or expansion board input not being used for the process feedback or the feedforward input. Selections are shown in Figure 3-20.

- Level 1 Input block "Command Select" parameter must be set to the feedforward signal type. This signal may be any Analog1, Analog2 or expansion board input not being used for the process feedback or setpoint source inputs. Selections are shown in Figure 3-20.



Note: An input can only be used only one time: for Process Feedback, **OR** Setpoint Source, **OR** Feedforward.

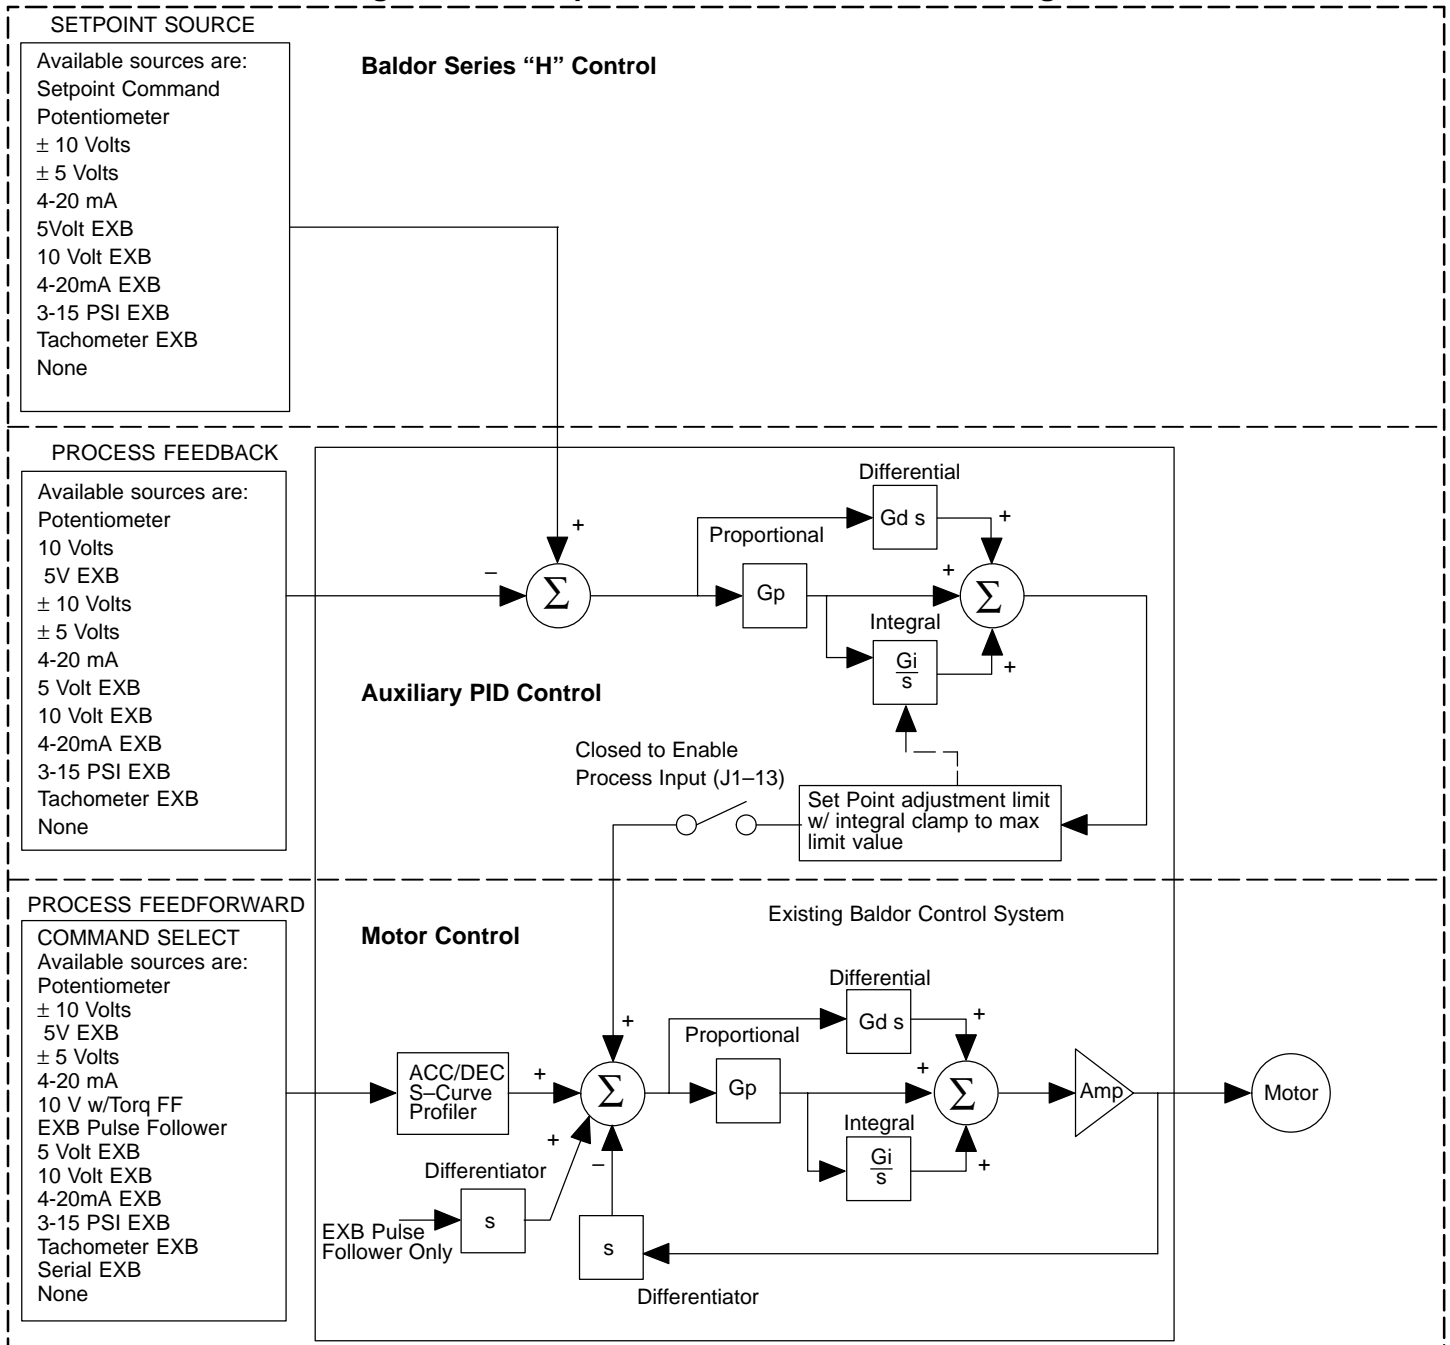**Figure 3-20 Simplified Process Control Block Diagram**



**Table 3-14 Process Mode Input Signal Compatibility**

Setpoint or Feedforward	Feedback						
	J1-1 & 2	J1-4 & 5	5V EXB <sup>①</sup>	10V EXB <sup>①</sup>	4-20mA EXB <sup>①</sup>	3-15 PSI EXB <sup>②</sup>	DC Tach EXB <sup>③</sup>
J1-1 & 2							
J1-4 & 5							
5V EXB <sup>①</sup>							
10V EXB <sup>①</sup>							
4-20mA EXB <sup>①</sup>							
3-15 PSI EXB <sup>②</sup>							
DC Tach EXB <sup>③</sup>							
MPR/F EXB <sup>④ ① ⑤</sup>							
Serial EXB <sup>⑤ ① ⑥</sup>							

- ① Requires expansion board EXB007A01 (High Resolution Analog I/O EXB).
  - ② Requires expansion board EXB004A01 (4 Output Relays/3-15 PSI Pneumatic Interface EXB).
  - ③ Requires expansion board EXB006A01 (DC Tachometer Interface EXB).
  - ④ Requires expansion board EXB005A01 (Master Pulse Reference/Isolated Pulse Follower EXB).
  - ⑤ Used for Feedforward only. Must not be used for Setpoint Source or Feedback.
  - ⑥ Requires expansion board EXB001A01 (RS232 Serial Communication EXB). or Requires expansion board EXB002A01 (RS422/RS485 High Speed Serial Communication EXB).
-  Conflicting inputs. Do not use same input signal multiple times.
-  Conflicting level 1 or 2 expansion boards. Do not use!

**Specific Process Mode Outputs**


**Process Mode Only, Analog Monitoring Outputs**

<u>Name</u>	<u>Description</u>
Process FDBK	Process Feedback scaled input. Useful for observing or tuning the process control loop.
Setpoint CMD	Setpoint Command scaled input. Useful for observing or tuning the process control loop.
Speed Command	Commanded Motor Speed. Useful for observing or tuning the output of the control loop.

**Process Mode Only, Opto Isolated Outputs**

<u>Name</u>	<u>Description</u>
Process Error	CLOSED when the Process Feedback is within the specified tolerance band. OPEN when the Process Feedback is greater than the specified tolerance band. The width of the tolerance band is adjusted by the Level 2 Process Control block Process ERR TOL parameter value.

**Figure 3-21 Process Mode Connection Diagram**

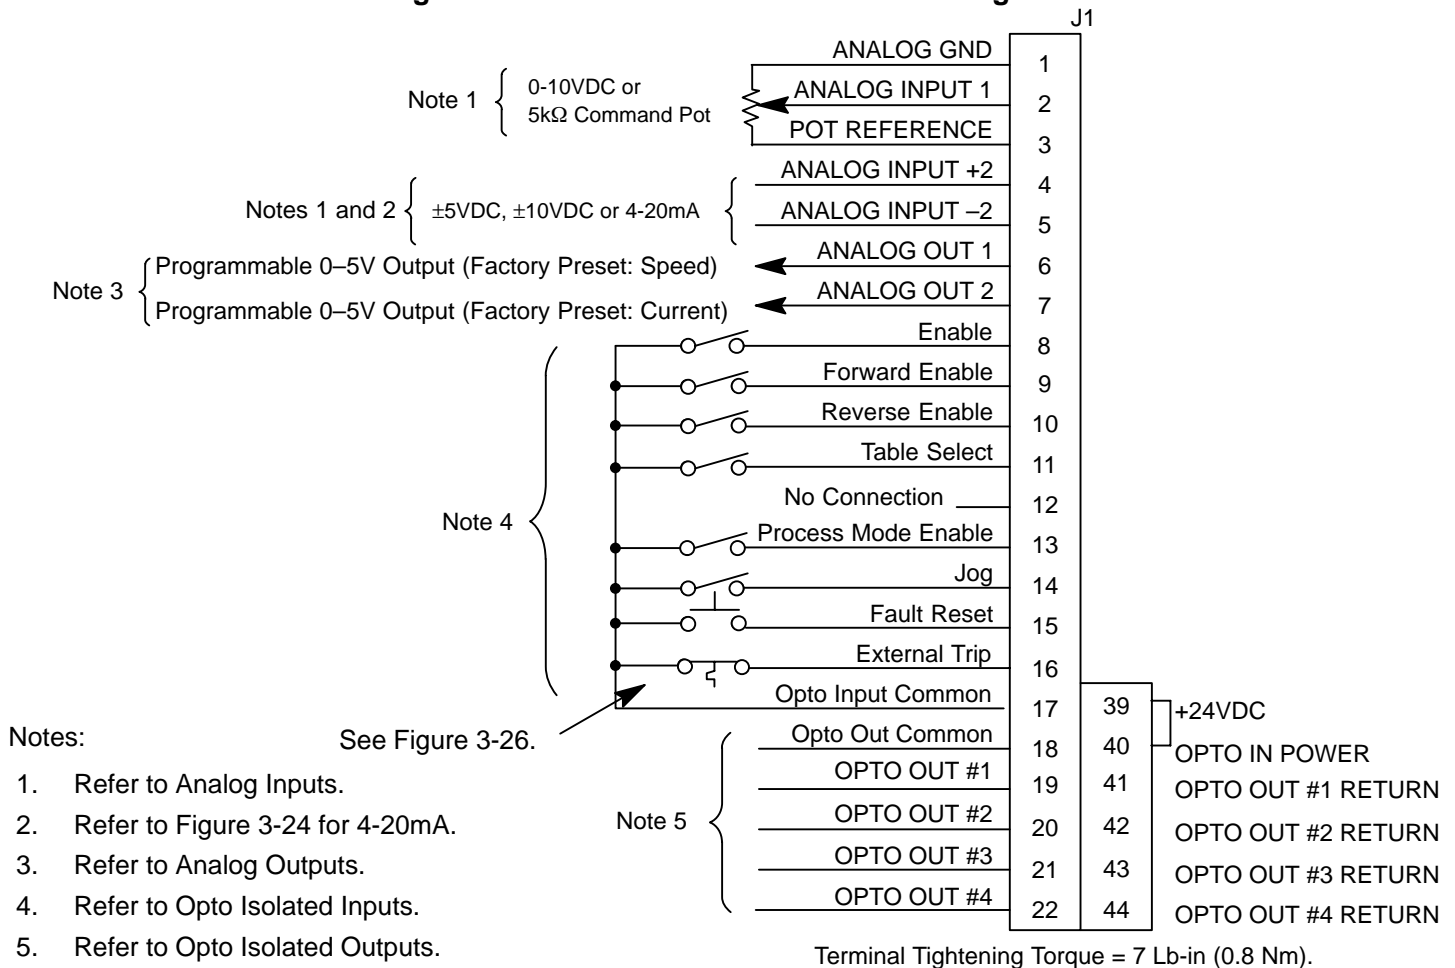

- J1-8 CLOSED allows current to flow in the motor and produce torque. OPEN disables the control & motor coasts to a stop.
- J1-9 CLOSED to enable operation in the Forward direction. OPEN TO DISABLE Forward operation.
- J1-10 CLOSED to enable operation in the Reverse direction. OPEN to disable Reverse operation.
- J1-11 OPEN = TABLE 0, CLOSED = TABLE 1
- J1-13 CLOSED to enable the Process Mode.
- J1-14 CLOSED places control in JOG mode. The control will only JOG in the forward direction.
- J1-15 CLOSED to reset a fault condition. OPEN to run.
- J1-16 OPEN causes an external trip to be received by control. The control will disable and display external trip when programmed "ON". When this occurs, the drive is disabled and an external trip fault is displayed on the keypad display (also logged into the fault log). If J1-16 is connected, you must set Level 2 Protection block, External Trip to "ON".
- J1-39 & 40 Jumper as shown to power the Opto Inputs from the internal +24VDC supply.


---

## Analog Inputs and Outputs

### Analog Inputs

Two analog inputs are available: analog input #1 (J1-1 and J1-2) and analog input #2 (J1-4 and J1-5) as shown in Figure 3-22. Either analog input #1 or #2 may be grounded provided the common mode range is not exceeded. Either analog input may be selected in the Level 1 INPUT block, Command Select parameter value. Analog input #1 is selected if parameter value “Potentiometer” is selected. Analog input #2 is selected if parameter value “+/-10Volts, +/-5 Volts or 4-20mA” is selected. Figure 3-23 shows the equivalent circuits of the Analog Inputs.

**Figure 3-22 Analog Inputs and Outputs**

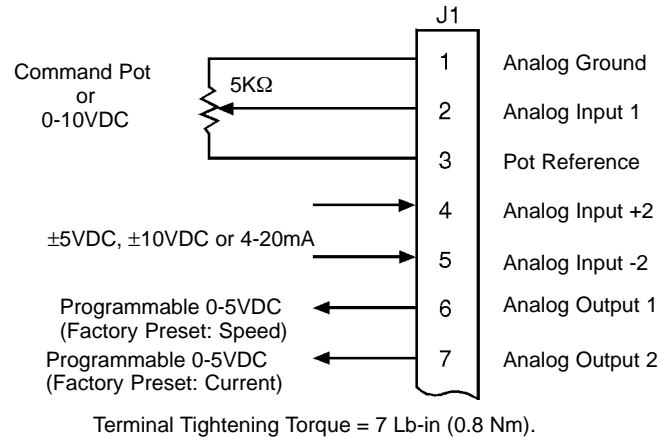

### Analog Input #1

The single ended analog input #1 is used when the controller is set to Standard 3 Wire, Fan Pump 2 or 3 Wire, Process, or Bipolar control (not Keypad or 15 Speed 2 Wire). When using a potentiometer as the speed command, process feedback or setpoint source, the respective parameter must be set to “POTENTIOMETER”.

1. Connect the wires from the 5KΩ pot as shown in Figure 3-22. One end of the pot is connected to J1-1 (analog ground) and the other end is connected to J1-3 (reference voltage).
2. Connect the wiper of the pot to J1-2. The voltage across terminals J1-1 and J1-2 is the speed command input.
3. A 0-10VDC speed command signal may be connected across J1-1 and J1-2 instead of a 5KΩ pot.

---

## Analog Input #2

Analog input #2 accepts a 0-5 or 0-10VDC, 4-20mA,  $\pm 5$ VDC or  $\pm 10$ VDC command input. The operating mode is defined in the of the Level 1 Input block OPERATING MODE parameter.


Note: Analog Input #2 is used with Standard Run 3-Wire, Fan Pump 2 or 3 Wire or Bipolar Control modes and not used for the 15 Speed 2 Wire or the Serial operating modes.

1. Connect the Analog Input +2 wire to J1-4 and the -2 wire to J1-5.
2. If using a 4-20 mA command signal, jumper JP1 located on the main control board must be on pins 2 & 3. For voltage input, JP1 must be on pins 1 & 2. Refer to Figure 3-24 for jumper position information.


Note: Analog Input #2 can be connected for single ended operation by grounding either of the inputs, provided the common mode voltage range is not exceeded. The common mode voltage can be measured with a voltmeter. Apply the maximum command voltage to analog input 2 (J1-4, 5). Measure the AC and DC voltage across J1-1 to J1-4. Add the AC and DC readings together. Measure the AC and DC voltage from J1-1 to J1-5. Add the AC and DC readings together.

If either of these measurement totals exceeds a total of  $\pm 15$  volts, then the common mode voltage range has been exceeded. If the common mode voltage range has been exceeded, the solution is either to change the command voltage source or isolate the command voltage with a commercially available signal isolator.

**Figure 3-23 Analog Inputs Equivalent Circuits**

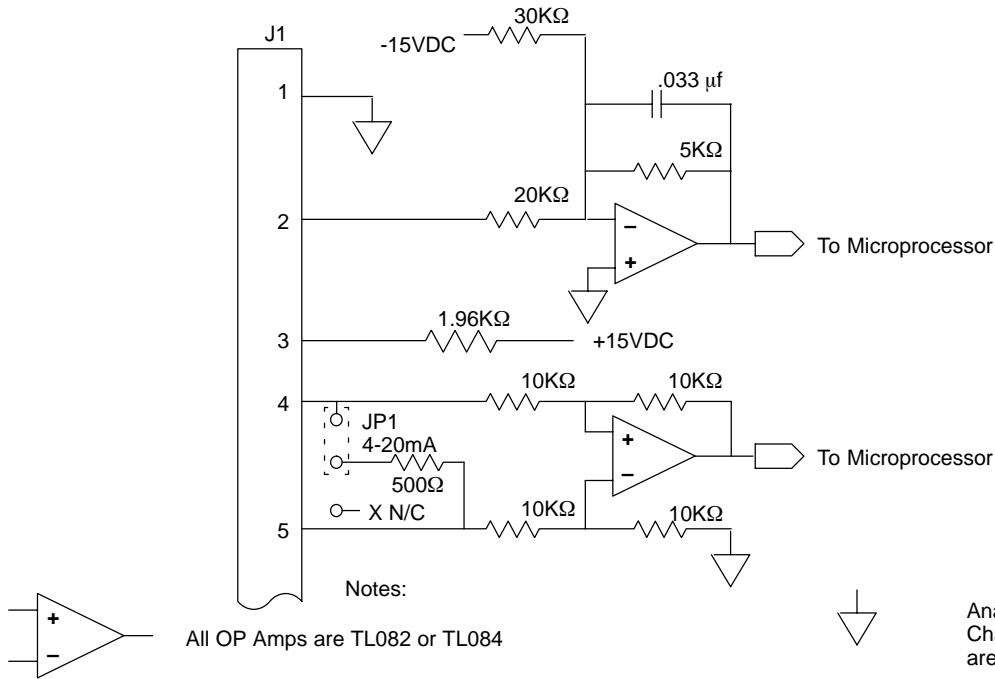

**Figure 3-24 Series 17H Control**

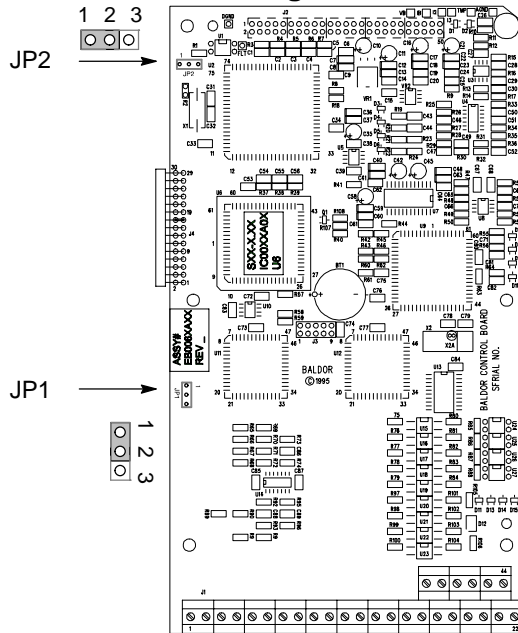

Refer to Table 3-15 for jumper position information.

Terminal Tightening Torque = 7 Lb-in (0.8 Nm).

**Table 3-15 Control Board Jumpers**

Jumper	Jumper Position	Description of Jumper Position Setting
JP1	1-2	Voltage Speed Command Signal. (Factory Setting)
	2-3	4-20mA input at Analog #2
JP2	1-2	Factory Setting
	2-3	Not used.


## Analog Outputs

Two programmable analog outputs are provided on J1-6 and J1-7. See Figure 3-25. These outputs are scaled 0 - 5 VDC (1mA maximum output current) and can be used to provide real-time status of various control conditions. The output conditions are defined in Table NO TAG of Section 4 of this manual.

The return for these outputs is J1-1 analog ground. Each output is programmed in the Level 1 Output block.

1. Connect the Output #1 wires to J1-6 and J1-1.
2. Connect the Output #2 wires to J1-7 and J1-1.

**Figure 3-25 Analog Outputs Equivalent Circuits**

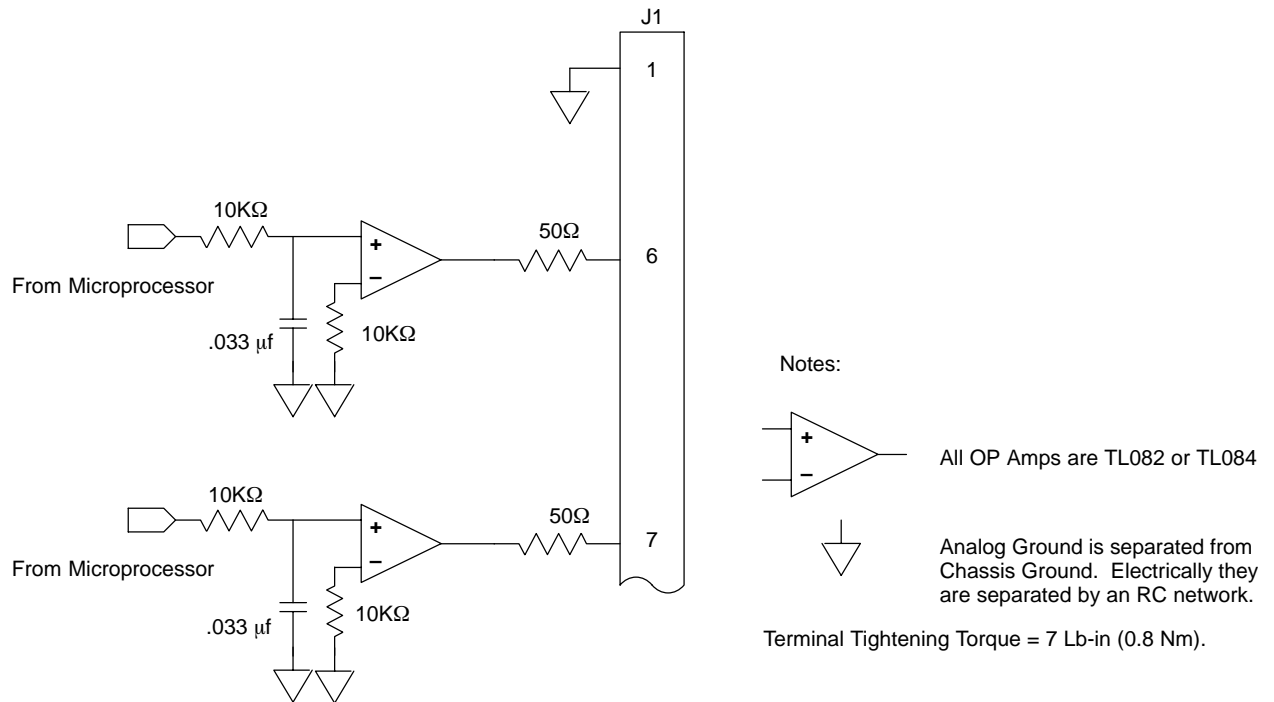


## External Trip Input

Terminal J1-16 is available for connection to a normally closed thermostat or overload relay in all operating modes as shown in Figure 3-26. The thermostat or overload relay should be a dry contact type with no power available from the contact. If the motor thermostat or overload relay activates the control will automatically shut down and give an External Trip fault.

Connect the External Trip Input wires to J1-16 and J1-17. Do not place these wires in the same conduit as the motor power leads.

To activate the External Trip input, the External Trip parameter in the programming Protection Block must be set to "ON".


**Figure 3-26 Motor Temperature Relay**

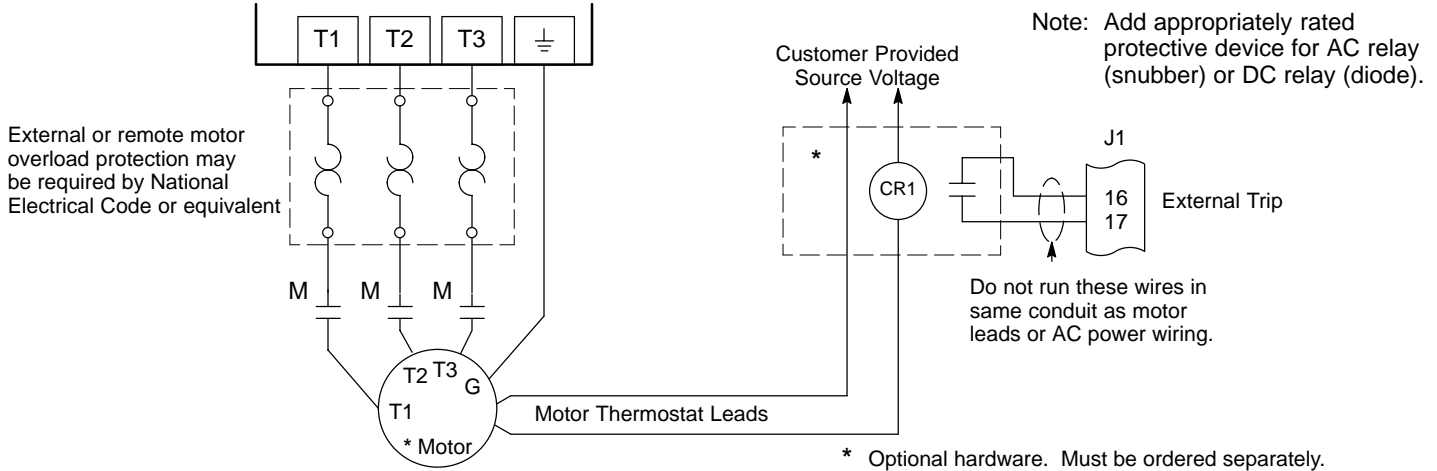



## Opto-Isolated Inputs

The equivalent circuit for the nine Opto inputs is shown in Figure 3-27. The function of each input depends on the operating mode selected. Refer to the operating mode connection diagrams shown previously in this section.

**Figure 3-27 Opto-Input Equivalent Circuit (Using Internal Supply)**

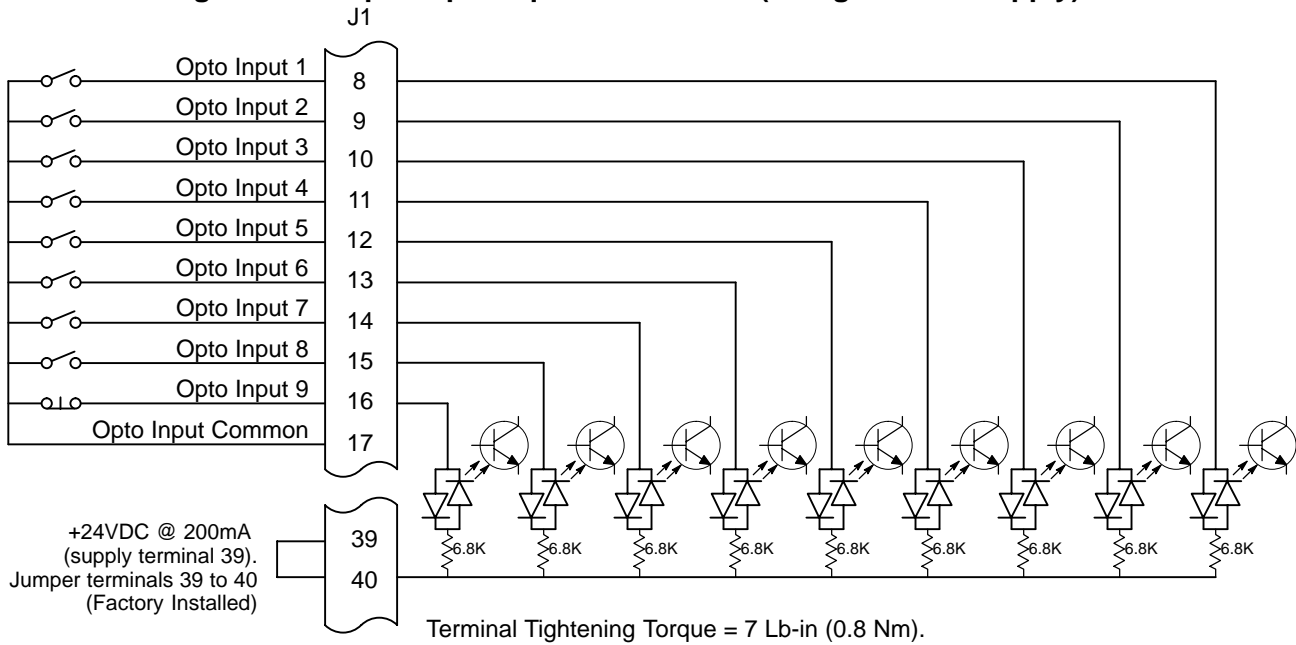

**Figure 3-28 Opto-Input Equivalent Circuit (Using External Supply)**

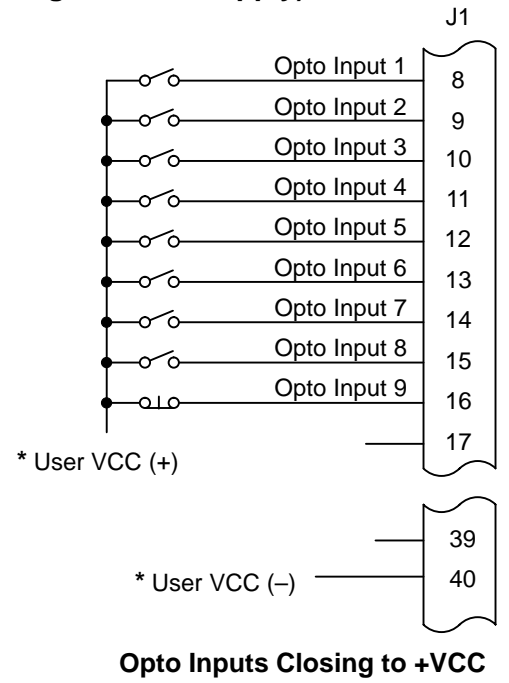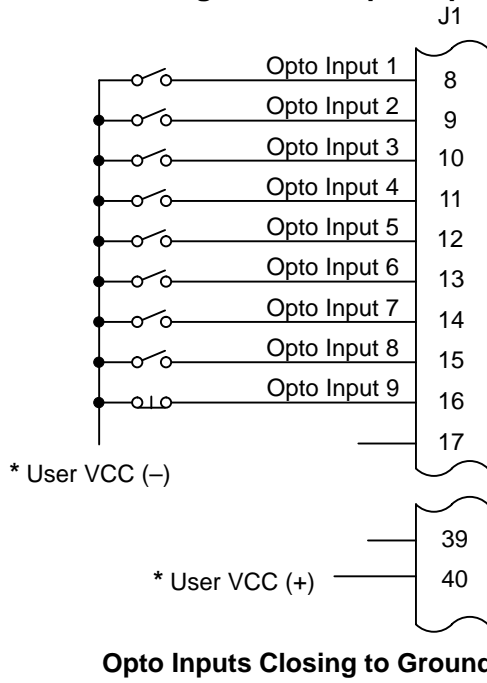

\* User VCC = 10 - 30VDC  
 External Power Source

Terminal Tightening Torque = 7 Lb-in (0.8 Nm).

## Opto-Isolated Outputs

Four programmable Opto-isolated outputs are available at terminals J1-19 through J1-22. See Figure 3-29. Each output may be programmed to represent one output condition. The output conditions are defined in Table NO TAG of Section 4 of this manual.

The Opto-isolated outputs may be configured for sinking or sourcing 50 mA each. However, all must be configured the same. The maximum voltage from opto output to common when active is 1.0 VDC (TTL compatible). The Opto-isolated outputs may be connected in different ways as shown in Figure 3-29. The equivalent circuit for the Opto-isolated outputs is shown in Figure 3-30.


If the opto outputs are used to directly drive a relay, a flyback diode rated at 1A, 100 V (IN4002) minimum should be connected across the relay coil.

See Electrical Noise Considerations in Section 5 of this manual.

1. Connect OPTO OUT #1 wires to J1-19 and J1-41.
2. Connect OPTO OUT #2 wires to J1-20 and J1-42.
3. Connect OPTO OUT #3 wires to J1-21 and J1-43.
4. Connect OPTO OUT #4 wires to J1-22 and J1-44.


Each Opto Output is programmed in the Output programming block.

**Figure 3-29 Opto-isolated Output Configurations**

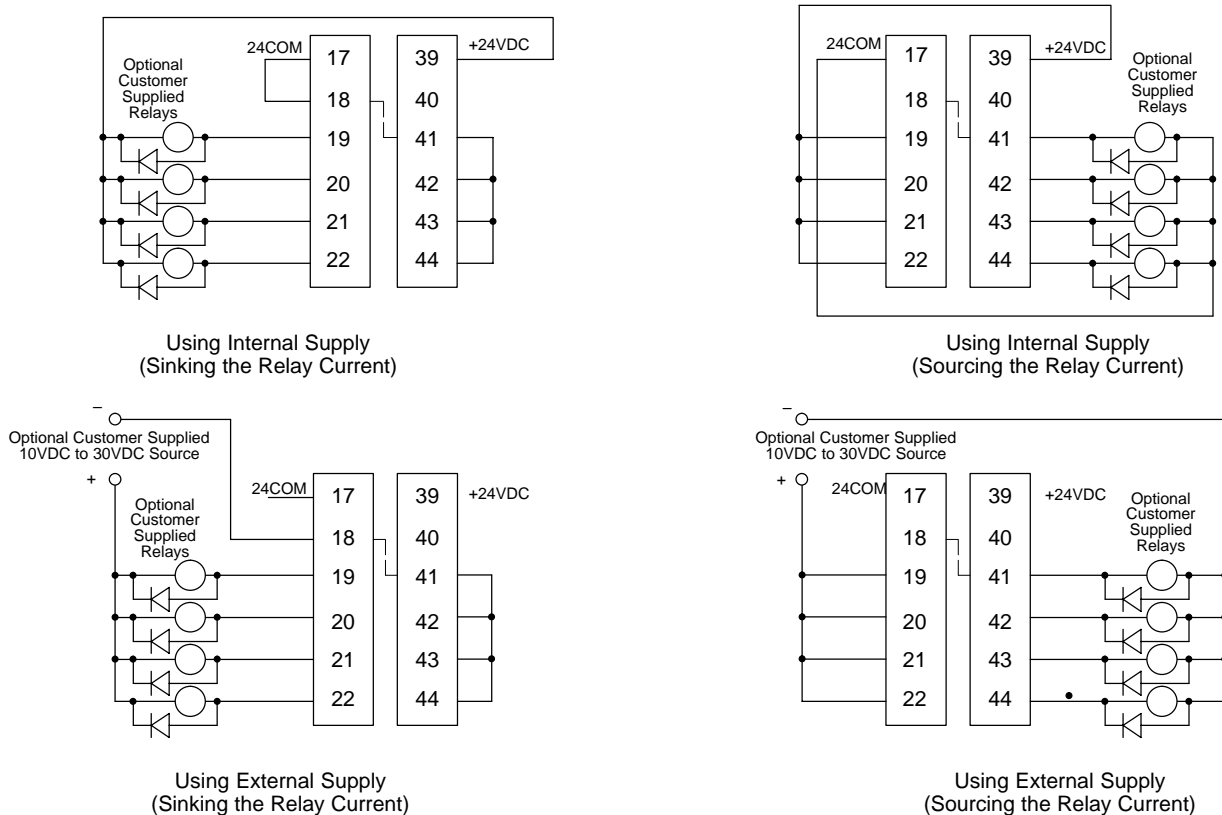

Terminal Tightening Torque = 7 Lb-in (0.8 Nm).

**Figure 3-30 Opto-Output Equivalent Circuit**

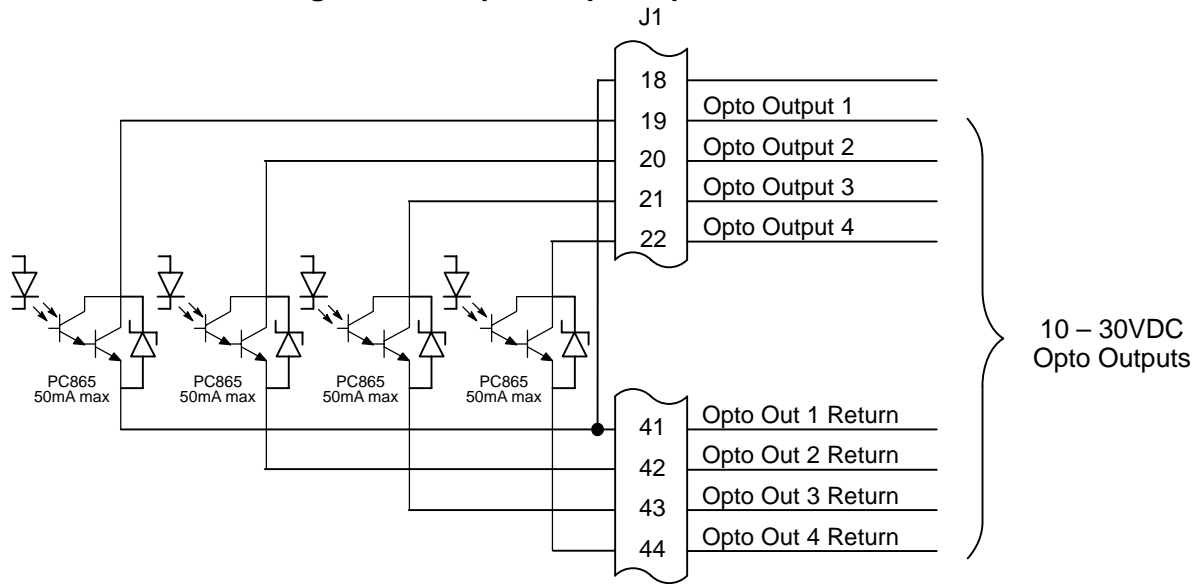

Terminal Tightening Torque = 7 Lb-in (0.8 Nm).

**Pre-Operation Checklist**

Check of Electrical Items

**⚠ CAUTION:** After completing the installation but before you apply power, be sure to check the following items.

1. Verify AC line voltage at source matches control rating.
2. Inspect all power and logic connections for accuracy, workmanship and tightness and compliance to codes.
3. Verify control and motor are grounded to each other and the control is connected to earth ground.
4. Check all signal wiring for accuracy.
5. Be certain all brake coils, contactors and relay coils have noise suppression. This should be an R-C filter for AC coils and reverse polarity diodes for DC coils. MOV type transient suppression is not adequate.

**⚠ WARNING:** Make sure that unexpected operation of the motor shaft during start up will not cause injury to personnel or damage to equipment.

**Check of Motors and Couplings**

1. Verify freedom of motion for all motor shafts and that all motor couplings are tight without backlash.
2. Verify the holding brakes if any, are properly adjusted to fully release and set to the desired torque value.

---

## **Power-Up Procedure**

This procedure will help get your system up and running in the keypad mode quickly. This will allow you to prove the motor and control operation. This procedure assumes that the Control, Motor and Dynamic Brake hardware are correctly installed (see Section 3 for procedures) and that you have an understanding of the keypad programming & operation procedures. It is not necessary to wire the terminal strip to operate the motor in the Keypad mode.

### **Initial Conditions**

Be sure the Control, Motor and Dynamic Brake hardware are wired according to the procedures described previously in this manual. Become familiar with the keypad programming and keypad operation of the control as described in Section 4 of this manual.

1. Verify that any enable inputs to J1-8 are open.
2. Turn power on. Be sure no errors are displayed.
3. Set the Level 1 Input block, Operating Mode parameter to "KEYPAD".
4. Be sure the Level 2 Protection block, Local Enable INP parameter is OFF and the Level 2 Protection block, External Trip parameter is OFF.
5. Set the Level 2 Output Limits block, "OPERATING ZONE" parameter as desired (STD CONST TQ, STD VAR TQ, QUIET CONST TQ or QUIET VAR TQ).
6. Enter the following motor data in the Level 2 Motor Data block parameters:  
Motor Voltage (Nameplate, VOLTS)  
Motor Rated Amps (Nameplate, FLA)  
Motor Rated Speed (Nameplate, RPM)  
Motor Rated Frequency (Nameplate, HZ)  
Motor Mag Amps (Nameplate, NLA)
7. At the Level 2 Motor Data block, press ENTER, at CALC PRESETS select YES (using the ▲ key) and let the control calculate preset values for the parameters that are necessary for control operation.
8. Disconnect the motor from the load (including coupling or inertia wheels). If the load can not be disconnected, refer to Section 6 and manually tune the control. After manual tuning, perform steps 10, 11, 15 and 16.

**⚠ WARNING: The motor shaft will rotate during this procedure. Be certain that unexpected motor shaft movement will not cause injury to personnel or damage to equipment.**

9. Go to Level 2 Autotune block, and perform the following tests:  
CMD OFFSET TRIM  
STATOR R1  
FLUX CUR SETTING
10. Set the Level 2 Output Limits block, "MIN OUTPUT SPEED" parameter.
11. Set the Level 2 Output Limits block, "MAX OUTPUT SPEED" parameter.
12. Remove all power from the control.
13. Couple the motor to its load.
14. Turn power on. Be sure no errors are displayed.
15. Run the drive from the keypad using one of the following: the arrow keys for direct speed control, a keypad entered speed or the JOG mode.
16. Select and program additional parameters to suit your application.

The control is now ready for use in the keypad mode. If a different operating mode is desired, refer to Section 3 Control Connections and Section 4 Programming and Operation.



# Section 4

## Programming and Operation

### Overview

The keypad is used to program the control parameters, operate the motor and monitor the status and outputs of the control by accessing the display options, diagnostic menus and the fault log.

**Figure 4-1 Keypad**

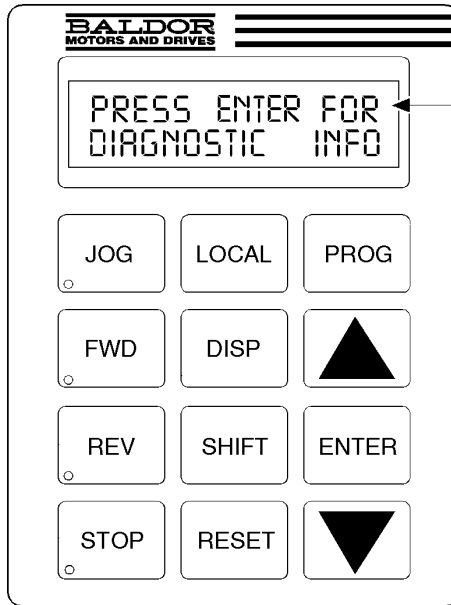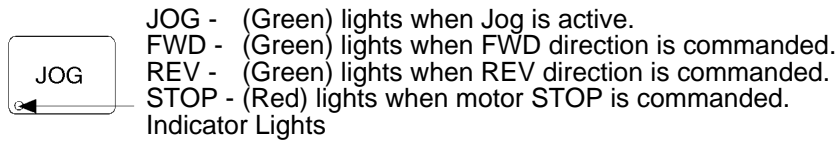

**Keypad Display** - Displays status information during Local or Remote operation. It also displays information during parameter setup and fault or Diagnostic Information.

**JOG** - Press JOG to select the preprogrammed jog speed. After the jog key has been pressed, use the FWD or REV keys to run the motor in the direction that is needed. The JOG key is only active in the local mode.

**FWD** - Press FWD to initiate forward rotation of the motor. This key is active only in the Keypad, local mode, Fan Pump 3 Wire and Fan Pump 2 Wire modes.

**REV** - Press REV to initiate reverse rotation of the motor. This key is active only in the Keypad, local mode, Fan Pump 3 Wire and Fan Pump 2 Wire modes.

**STOP** - Press STOP one time to initiate a stop sequence. Depending on the Keypad Stop Mode, the motor will either REGEN or COAST to a stop. This key is operational in all modes of operation unless disabled by the Keypad Stop parameter in the Keypad (programming) Setup Block. Press STOP twice to disable control (coast to stop).

**LOCAL** - Press LOCAL to change between the local (keypad) and remote operation. When the control is in the local mode all other external commands to the J1 terminal strip will be ignored with the exception of the external trip input.

**DISP** - Press DISP to return to display mode from programming mode. Provides operational status and advances to the next display menu item including the Diagnostic Screens.

**SHIFT** - Press SHIFT in the program mode to control cursor movement. Pressing the SHIFT key once moves the blinking cursor one character position to the right. While in program mode, a parameter value may be reset to the factory preset value by pressing the SHIFT key until the arrow symbols at the far left of the keypad display are flashing, then press an arrow key. In the display mode the SHIFT key is used to adjust the keypad contrast.

**RESET** - Press RESET to clear all fault messages (in local mode). Can also be used to return to the top of the block programming menu without saving any parameter value changes.

**PROG** - Press PROG to enter the program mode. While in the program mode the PROG key is used to edit a parameter setting.

**▲ - (UP Arrow).**  
 Press ▲ to change the value of the parameter being displayed. Pressing ▲ increments the value to the next greater value. Also, when the fault log or parameter list is displayed, the ▲ key will scroll upward through the list. In the local mode pressing the ▲ key will increase motor speed to the next greater value.

**ENTER** - Press ENTER to save parameter value changes and move back to the previous level in the programming menu. In the display mode the ENTER key is used to directly set the local speed reference. It is also used to select other operations when prompted by the keypad display.

**▼ - (Down Arrow)**  
 Press ▼ to change the value of the parameter being displayed. Pressing ▼ decrements the value to the next lesser value. Also, when the fault log or parameter list is displayed, the ▼ key will scroll downward through the list. In the local mode pressing the ▼ key will decrease motor speed to the next lower value.

## Display Mode

The control is in the DISPLAY MODE at all times except when parameter values are changed (Programming mode). The Keypad Display shows the status of the control as in the following example.



The DISPLAY MODE is used to view operating status, Diagnostic INFO, the Fault Log and to adjust the Display contrast. The description of how to do these tasks are described on the following pages.

**Adjusting Display Contrast** When AC power is applied to the control, the keypad should display the status of the control. If there is no visible display, use the following procedure to adjust the contrast of the display.

(Contrast may be adjusted in display mode when motor is stopped or running).

Action	Description	Display	Comments
Apply Power	No visible display	<b>BLANK</b>	
Press DISP Key	Places control in display mode	<b>BLANK</b>	
Press SHIFT SHIFT	Allows display contrast adjustment	<b>ADJUST CONTRAST</b> ⬇ (ENTER) TO SAVE	
Press ▲ or ▼ Key	Adjusts display intensity	<b>ADJUST CONTRAST</b> ⬇ (ENTER) TO SAVE	
Press ENTER	Saves level of contrast and exits to display mode	<b>STP MOTOR SPEED</b> <b>LOCAL 0 RPM</b>	Typical display

Display Mode Continued







Display Screens & Diagnostic Information Access

Action	Description	Display	Comments
Apply Power		BALDOR MOTORS & DRIVES	Logo display for 5 seconds.
	Display mode showing motor speed.	STOP MOTOR SPEED LOCAL 0 RPM	No faults present. Local keypad mode. If in remote/serial mode, press local for this display.
Press DISP key 6 times	Scroll to Diagnostic Information screen	PRESS ENTER FOR DIAGNOSTIC INFO	Diagnostic Access screen.
Press ENTER key	Access diagnostic information.	STOP SPEED REF LOCAL 0 RPM	First Diagnostic Information screen.
Press DISP key	Display mode showing control temperature.	STOP CONTROL TEMP LOCAL 0.0° C	
Press DISP key	Display mode showing bus voltage.	STOP BUS VOLTAGE LOCAL XXXV	
Press DISP key	Display mode showing % overload current remaining.	STOP OVRLD LEFT LOCAL 100.00%	
Press DISP key	Display mode showing opto inputs & outputs states. (0=Open, 1=Closed.)	DIGITAL I/O 00000000 0000	Opto Inputs states (Left); Opto Outputs states (Right).
Press DISP key	Display mode showing actual time the drive has been powered up.	TIME FROM PUR UP 0000000.01.43	HR.MIN.SEC format.
Press DISP key	Display mode showing operating zone, voltage and control type.	QUIET VAR TQ XXXV ENCODERLESS	Typical display.
Press DISP key	Display mode showing continuous amps; PK amps rating; amps/volt scale of feedback, power base ID.	XXA X.X APK X.XX A/V ID:XXX	
Press DISP key	Display mode showing which Group1 or 2 expansion boards are installed and recognized.	G1 NOT INSTALLED G2 NOT INSTALLED	In this case, no expansion boards are installed.
Press DISP key	Display mode showing parameter table selected.	STOP TABLE LOCAL 0	
Press DISP key	Display mode showing software version and revision installed in the control.	SOFTWARE VERSION SXX-X.XX	
Press DISP key	Displays exit choice.	PRESS ENTER FOR DIAGNOSTIC EXIT	Press ENTER to exit diagnostic information.

**Display Mode** Continued

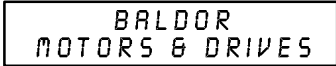**Fault Log Access**

When a fault condition occurs, motor operation stops and a fault code is displayed on the Keypad display. The control keeps a log of up to the last 31 faults. If more than 31 faults have occurred the oldest fault will be deleted from the fault log to make room for the newest fault. To access the fault log perform the following procedure:

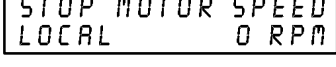Action	Description	Display	Comments
Apply Power			Logo display for 5 seconds.
	Display mode showing motor speed.		Display mode.
Press DISP key 5 times	Scroll to the Fault Log screen		Fault Log access screen.
Press ENTER key	Display first fault type and time fault occurred.		1=Most recent fault displayed. 2=Second most recent fault, etc.
Press ▲ key	Scroll through fault messages.		If no messages, the fault log exit choice is displayed.
Press ENTER key	Return to display mode.		Display mode stop key LED is on.


## Program Mode

The Program Mode is used to:

1. Enter motor data.
2. Autotune the drive.
3. Customize the drive (Control and Motor) parameters to your application.

From the Display Mode press the PROG key to access the Program Mode.

Note: When a parameter is selected, alternately pressing the Disp and Prog keys will toggle between the Display Mode and the selected parameter. When a parameter is selected for programming, the keypad display gives you the following information:

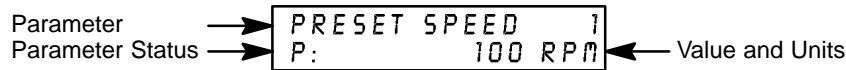

**Parameter Status.** All programmable parameters are displayed with a “P:” in the lower left corner of the keypad display. If a parameter is displayed with a “V:”, the parameter value may be viewed but not changed while the control is enabled. If the parameter is displayed with an “L:”, the value is locked and the security access code must be entered before its’ value can be changed.

## Parameter Blocks Access for Programming

Use the following procedure to access parameter blocks to program the control.

Action	Description	Display	Comments
Apply Power	Keypad Display shows this opening message.	<pre>BALDOR MOTORS &amp; DRIVES</pre>	Logo display for 5 seconds.
	If no faults and programmed for LOCAL operation.	<pre>STOP MOTOR SPEED LOCAL 0 RPM</pre>	Display mode.
	If no faults and programmed for REMOTE operation.	<pre>STOP MOTOR SPEED REMOTE 0 RPM</pre>	If fault is displayed, refer to the Troubleshooting section of this manual.
Press PROG key		<pre>PRESS ENTER FOR PRESET SPEEDS</pre>	Press ENTER to access Preset Speed parameters.
Press ▲ or ▼ key	Scroll to the ACCEL/DECEL block.	<pre>PRESS ENTER FOR ACCEL/DECEL RATE</pre>	Press ENTER to access Accel and Decel rate parameters.
Press ▲ or ▼ key	Scroll to the Level 2 Block.	<pre>PRESS ENTER FOR LEVEL 2 BLOCKS</pre>	Press ENTER to access Level 2 Blocks.
Press ENTER key	First Level 2 block display.	<pre>PRESS ENTER FOR OUTPUT LIMITS</pre>	
Press ▲ or ▼ key	Scroll to Programming Exit menu.	<pre>PRESS ENTER FOR PROGRAMMING EXIT</pre>	Press ENTER to return to Display mode.
Press ENTER key	Return to display mode.	<pre>STOP MOTOR SPEED LOCAL 0 RPM</pre>	

**Program Mode** Continued

**Changing Parameter Values when Security Code Not Used**

Use the following procedure to program or change a parameter already programmed into the control when a security code is not being used.

The example shown changes the operating mode from Keypad to Bipolar.

Action	Description	Display	Comments
Apply Power	Keypad Display shows this opening message.		Logo display for 5 seconds.
	If no faults and programmed for LOCAL operation.		Display mode. Stop LED on.
Press PROG key	Access programming mode.		
Press ▲ or ▼ key	Scroll to Level 1 Input Block.		Press ENTER to access INPUT block parameter.
Press ENTER key	Access Input Block.		Keypad mode shown is the factory setting.
Press ENTER key	Access Operating Mode parameter.		Keypad mode shown is the factory setting.
Press ▲ key	Scroll to change selection.		At flashing cursor, select desired mode, BIPOLAR in this case.
Press ENTER	Save selection to memory.		Press ENTER to save selection.
Press ▲ key	Scroll to menu exit.		
Press ENTER key	Return to Input Block.		
Press DISP key	Return to Display Mode.		Typical display mode.

**Program Mode** Continued

**Reset Parameters to Factory Settings**

Sometimes it is necessary to restore the parameter values to the factory settings. Follow this procedure to do so. Be sure to change the Level 2 Motor Data block "Motor Rated Amps" to the correct value after this procedure (restored factory setting is 999.9).

Note: All specific application parameters already programmed will be lost when resetting the control to factory settings.

Note: After factory settings have been restored, the drive must again be tuned.

Action	Description	Display	Comments
Apply Power	Keypad Display shows this opening message.	<pre>BALDOR MOTORS &amp; DRIVES</pre>	Logo display for 5 seconds.
	If no faults and programmed for LOCAL operation.	<pre>STOP MOTOR SPEED LOCAL          0 RPM</pre>	Display mode. Stop LED on.
Press PROG key	Enter program mode.	<pre>PRESS ENTER FOR PRESET   SPEEDS</pre>	
Press ▲ or ▼ key	Scroll to Level 2 Blocks.	<pre>PRESS ENTER FOR LEVEL 2   BLOCKS</pre>	
Press ENTER key	Select Level 2 Blocks.	<pre>PRESS ENTER FOR OUTPUT LIMITS</pre>	
Press ▲ or ▼ key	Scroll to the Miscellaneous block.	<pre>PRESS ENTER FOR MISCELLANEOUS</pre>	
Press ENTER key	Select Miscellaneous block.	<pre>RESTART AUTO/MAN P:          MANUAL</pre>	
Press ▲ key	Scroll to Factory Settings parameter.	<pre>FACTORY SETTINGS P:          NO</pre>	
Press ENTER key	Access Factory Settings parameter.	<pre>FACTORY SETTINGS ⬆️ □          NO</pre>	<input type="checkbox"/> represents blinking cursor.
Press ▲ key	Scroll to YES, to choose original factory settings.	<pre>FACTORY SETTINGS ⬆️ □          YES</pre>	
Press ENTER key	Restores factory settings.	<pre>FACTORY SETTINGS P:LOADING PRESETS</pre>	"Loading Presets" is first message "Operation Done" is next "No" is displayed last.
Press ▲ key	Scroll to menu exit.	<pre>PRESS ENTER FOR MENU EXIT</pre>	Exit Level 2 blocks.
Press ENTER key	Return to Level 1 blocks.	<pre>PRESS ENTER FOR LEVEL 2   BLOCKS</pre>	Exit Level 2 blocks.
Press ▲ or ▼ key	Scroll to Programming exit.	<pre>PRESS ENTER FOR PROGRAMMING EXIT</pre>	Exit Programming mode and return to Display mode.
Press ENTER key	Return to display mode.	<pre>STOP MOTOR SPEED LOCAL          0 RPM</pre>	Display mode. Stop LED on.

Note: After factory settings are restored, the drive must be autotuned.

**Program Mode** Continued

**Initialize New Software**

When new software is installed, the control must be initialized to the new software version and memory locations. Use the following procedure to Initialize the software.

Action	Description	Display	Comments
Apply Power	Keypad Display shows this opening message.	<pre>BALDOR MOTORS &amp; DRIVES</pre>	Logo display for 5 seconds.
	If no faults and programmed for LOCAL operation.	<pre>STOP MOTOR SPEED LOCAL          0 RPM</pre>	Display mode. Stop LED on.
Press PROG key	Enter program mode.	<pre>PRESS ENTER FOR PRESET   SPEEDS</pre>	
Press ▲ or ▼ key	Scroll to Level 2 Blocks.	<pre>PRESS ENTER FOR LEVEL 2   BLOCKS</pre>	
Press ENTER key	Select Level 2 Blocks.	<pre>PRESS ENTER FOR OUTPUT LIMITS</pre>	
Press ▲ or ▼ key	Scroll to the Miscellaneous block.	<pre>PRESS ENTER FOR MISCELLANEOUS</pre>	
Press ENTER key	Select Miscellaneous block.	<pre>RESTART AUTO/MAN P:          MANUAL</pre>	
Press ▲ key	Scroll to Factory Settings parameter.	<pre>FACTORY SETTINGS P:          NO</pre>	
Press ENTER key	Access Factory Settings parameter.	<pre>FACTORY SETTINGS ⬆️ □ NO</pre>	<input type="checkbox"/> represents blinking cursor.
Press ▲ key	Scroll to YES, to choose original factory settings.	<pre>FACTORY SETTINGS ⬆️ □ YES</pre>	
Press ENTER key	Restores factory settings.	<pre>FACTORY SETTINGS P:LOADING PRESETS</pre>	"Loading Presets" is first message "Operation Done" is next "No" is displayed last.
Press ▲ key	Scroll to menu exit.	<pre>PRESS ENTER FOR MENU EXIT</pre>	
Press ENTER key	Return to display mode.	<pre>STOP MOTOR SPEED LOCAL          0 RPM</pre>	Display mode. Stop LED on.
Press ▲ key	Scroll to diagnostic info block.	<pre>PRESS ENTER FOR DIAGNOSTIC INFO</pre>	
Press ENTER key	Access diagnostic information.	<pre>STOP SPEED   REF LOCAL        0 RPM</pre>	Displays commanded speed, direction of rotation, Local/ Remote and motor speed.
Press DISP key	Display mode showing software version and revision installed in the control.	<pre>SOFTWARE VERSION XXX-X.XX</pre>	Verify new software version.
Press DISP key	Displays exit choice.	<pre>PRESS ENTER FOR DIAGNOSTIC EXIT</pre>	Press ENTER to exit diagnostic information.

## Parameter Definitions

To make programming easier, parameters have been arranged into the two level structure shown in Table 4-1. Press the PROG key to enter the programming mode and the "Preset Speeds" programming block will be displayed. Use the Up (▲) and Down (▼) arrows to scroll through the parameter blocks. Press ENTER to access parameters within a programming block.

Tables 4-2 and 4-3 provide an explanation of each parameter. A complete Parameter Block Values list is located at the end of this manual. This list defines the programmable range and factory preset value for each parameter. The list has a space to record your settings for future reference.


**Table 4-1 List of Parameters**

LEVEL 1 BLOCKS		LEVEL 2 BLOCKS	
<b>Preset Speeds</b>	<b>Input</b>	<b>Output Limits</b>	<b>Brake Adjust</b>
Preset Speed #1	Operating Mode	Operating Zone	Resistor Ohms
Preset Speed #2	Command Select	Min Output Speed	Resistor Watts
Preset Speed #3	ANA CMD Inverse	Max Output Speed	DC Brake Current
Preset Speed #4	ANA CMD Offset	PK Current Limit	
Preset Speed #5	ANA 2 Deadband	PWM Frequency	<b>Process Control</b>
Preset Speed #6	ANA 1 CUR Limit	CUR Rate Limit	Process Feedback
Preset Speed #7			Process Inverse
Preset Speed #8	<b>Output</b>	<b>Custom Units</b>	Setpoint Source
Preset Speed #9	Opto Output #1	Decimal Places	Setpoint Command
Preset Speed #10	Opto Output #2	Value at Speed	Set PT ADJ Limit
Preset Speed #11	Opto Output #3	Units of Measure	Process ERR TOL
Preset Speed #12	Opto Output #4		Process PROP Gain
Preset Speed #13	Zero SPD Set PT	<b>Protection</b>	Process INT Gain
Preset Speed #14	At Speed Band	Overload	Process DIFF Gain
Preset Speed #15	Set Speed	External Trip	Follow I:O Ratio
	Analog Out #1	Local Enable INP	Master Encoder
<b>Accel / Decel Rate</b>	Analog Out #2	Following Error	
Accel Time #1	Analog #1 Scale	Torque Proving	<b>Communications</b>
Decel Time #1	Analog #2 Scale		Protocol
S-Curve #1		<b>Miscellaneous</b>	Baud Rate
Accel Time #2	<b>Vector Control</b>	Restart Auto/Man	Drive Address
Decel Time #2	Ctrl Base Speed	Restart Fault/Hr	
S-Curve #2	Current PROP Gain	Restart Delay	<b>Synchro Start</b>
	Speed PROP Gain	Factory Settings	Synchro Starts
<b>Jog Settings</b>	Speed INT Gain		Sync Start Speed
Jog Speed	Slip Frequency	<b>Security Control</b>	Sync Scan Time
Jog Accel Time	Stator R1	Security State	Sync Direction
Jog Decel Time	Stator X1	Access Timeout	
Jog S-Curve Time		Access Code	<b>Auto-Tuning</b>
<b>Keypad Setup</b>		<b>Motor Data</b>	CALC Presets
Keypad Stop Key		Motor Voltage	CMD Offset Trim
Keypad Stop Mode		Motor Rated Amps	STATOR R1
Keypad Run Fwd		Motor Rated SPD	Flux CUR Setting
Keypad Run Rev		Motor Rated Freq	
Keypad Jog Fwd		Motor Mag Amps	
Keypad Jog Rev		CALC Presets	

**Table 4-2 Level 1 Parameter Block Definitions**

Block Title	Parameter	Description
PRESET SPEEDS	Preset Speeds #1 – #15	Allows selection of 15 predefined motor operating speeds. Each speed may be selected using external switches connected to J1-11, J1-12, J1-13 and J1-14 when Operating Mode is set to 15 Speed. For motor operation, a motor direction command must be given along with a preset speed command.
ACCEL/DECCEL RATE	Accel Time #1,2 Decel Time #1,2 S-Curve #1,2	<p>Accel time is the number of seconds required for the motor to increase at a linear rate from 0 RPM to the RPM specified in the “Max Output Speed” parameter in the Level 2 Output Limits block.</p> <p>Decel time is the number of seconds required for the motor to decrease at a linear rate from the speed specified in the “Max Output Speed” parameter to 0 RPM.</p> <p>S-Curve is a percentage of the total Accel and Decel time and provides smooth starts and stops. Half of programmed S-Curve % applies to Accel and half to Decel ramps. 0% represents no “S” and 100% represents full “S” with no linear segment.</p> <p>Note: Accel #1, Decel #1 and S-Curve #1 are associated together. Likewise, Accel #2, Decel #2 and S-Curve #2 are associated together. These associations can be used to control any Preset Speed or External Speed command.</p> <p>Note: If drive faults occur during rapid Accel or Decel, selecting an S-curve may eliminate the faults.</p>
JOG SETTINGS	Jog Speed  Jog Accel Time Jog Decel Time Jog S-Curve	<p>Jog Speed is the programmed speed used for jog. Jog can be initiated from the keypad or terminal strip. At the Keypad, press the JOG key then press and hold the FWD or REV key. At the terminal strip, close the JOG input (J1-12) then close the FWD or REV input (J1-9 or J1-10).</p> <p>To cause motor to operate at Jog Speed the FWD or REV key must be pressed or external command Forward (J1-9) or Reverse (J1-10). The exception to this is the Process Mode, if the Jog key is pressed or J1-12 is closed the drive will move in the direction of the error.</p> <p>Jog Accel Time changes the Slope of the Jog Accel ramp. It is the time in seconds from zero speed to maximum speed.</p> <p>Jog Decel Time changes the Slope of the Jog Decel ramp. It is the time in seconds from maximum speed to zero speed.</p> <p>Jog S-Curve changes the S-Curve to a new preset value for jog mode.</p>

**Figure 4-2 40% S-Curve Example**

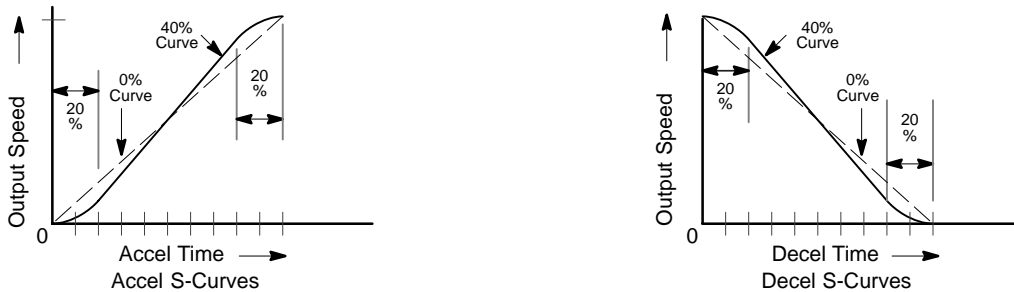

**Table 4-2 Level 1 Parameter Block Definitions - Continued**

Block Title	Parameter	Description
KEYPAD SETUP	Keypad Stop Key	Stop Key - Allows keypad "STOP" key to initiate motor stop during remote or serial operation (if Stop key is set to Remote ON in Standard Run, 15 Speed, Bipolar, Serial and Process Control modes). If active, pressing "STOP" automatically selects Local mode and initiates the stop command.
	Keypad Stop Mode	Stop Mode - Selects if the Stop command causes the motor to "COAST" to a stop or "REGEN" to a stop. In COAST, the motor is turned off and allowed to coast to a stop. In REGEN, the voltage and frequency to the motor is reduced at a rate set by "Decel Time".
	Keypad Run FWD	Run FWD - ON makes the keypad "FWD" key active in Local mode.
	Keypad Run REV	Run REV - ON makes the keypad "REV" key active in Local mode.
	Keypad Jog FWD	Jog FWD - ON makes the keypad "FWD" key active in Local Jog mode.
	Keypad Jog REV	Jog REV - ON makes the keypad "REV" key active in Local Jog mode.
	INPUT	Operating Mode
Command Select		Selects the external speed reference to be used. The easiest method of speed control is to select POTENTIOMETER and connect a 5K $\Omega$ pot to J1-1, J1-2, and J1-3. $\pm 5$ , $\pm 10$ VDC or 4-20mA input command can be applied to J1-4 and J1-5. If long distance is required between the external speed control and the control, the 4-20mA selections at J1-4 and J1-5 should be considered. Current loop allows long cable lengths without attenuation of the command signal. 10 VOLT W/TORQ FF - when a differential command is present at J1-4 and 5, allows additional 5V torque feedforward input at J1-1, 2 and 3 to set a predetermined amount of torque inside the rate loop with high gain settings. EXB PULSE FOL - selects optional Master Pulse Reference/Isolated Pulse Follower expansion board if installed. 5VOLT EXB - selects optional High Resolution I/O expansion board if installed. 10VOLT EXB - selects optional High Resolution I/O expansion board if installed. 3-15 PSI EXB selects optional 3-15 PSI expansion board if installed. Tachometer EXB- selects optional DC Tachometer expansion board if installed. Serial -selects optional Serial Communications expansion board if installed. None - Used in Process Control mode, two input configuration with no Feedforward input. Note: When using the 4-20mA input, the JP2 jumper on the main control board must be moved to the left two pins "A".
ANA CMD Inverse		"OFF" will cause a low input voltage (e.g. 0VDC) to be a low motor speed command and a maximum input voltage (e.g. 10VDC) to be a maximum motor speed command. "ON" will cause a low input voltage (e.g. 0VDC) to be a maximum motor speed command and a maximum input voltage (e.g. 10VDC) to be a low motor speed command.
ANA CMD Offset		Provides an offset to the Analog Input to minimize signal drift. For example, if the minimum speed signal is 1VDC (instead of 0VDC) the ANA CMD Offset can be set to -10% so the minimum voltage input is seen by control as 0VDC. The value of this parameter is automatically adjusted during Autotune "CMD Offset Trim" test.
ANA 2 Deadband		Allows a defined range of voltage to be a deadband. A command signal within this range will not affect the control output. The deadband value is the voltage above and below the zero command signal level.
ANA 1 CUR Limit		Allows the 5V input at J1-2 (referenced to J1-1) to be used for reduction of the programmed current limit parameter for torque trimming during operation.

**Table 4-2 Level 1 Parameter Block Definitions - Continued**

Block Title	Parameter	Description																														
OUTPUT	OPTO OUTPUT #1 – #4	<p>Four optically isolated digital outputs that have two operating states, logical High or Low. Each output may be configured to any of the following conditions:</p> <table border="0"> <thead> <tr> <th data-bbox="573 373 686 405">Condition</th> <th data-bbox="781 373 914 405">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="573 415 654 447">Ready -</td> <td data-bbox="781 415 1369 447">Active when power is applied and no faults are present.</td> </tr> <tr> <td data-bbox="573 457 711 489">Zero Speed -</td> <td data-bbox="781 457 1471 510">Active when motor RPM is below the value of the Level 1 Output “Zero SPD Set Pt” parameter.</td> </tr> <tr> <td data-bbox="573 520 686 552">At Speed -</td> <td data-bbox="781 520 1450 573">Active when output speed is within the speed range defined by the Level 1 Output “At Speed Band” parameter.</td> </tr> <tr> <td data-bbox="573 583 686 615">Overload -</td> <td data-bbox="781 583 1401 636">Active during an Overload fault caused by a time out when output current is greater than Rated Current.</td> </tr> <tr> <td data-bbox="573 646 751 678">Keypad Control -</td> <td data-bbox="781 646 1271 678">Active when control is in Local keypad control.</td> </tr> <tr> <td data-bbox="573 688 727 720">At Set Speed -</td> <td data-bbox="781 688 1417 741">Active when output speed is at or above the Level 1 Output “Set Speed” parameter.</td> </tr> <tr> <td data-bbox="573 751 638 783">Fault -</td> <td data-bbox="781 751 1206 783">Active when a fault condition is present.</td> </tr> <tr> <td data-bbox="573 793 743 825">Following ERR -</td> <td data-bbox="781 793 1401 846">Active when the motor speed is outside the user specified tolerance band defined by the At Speed Band parameter.</td> </tr> <tr> <td data-bbox="573 856 751 888">Motor Direction -</td> <td data-bbox="781 856 1471 909">Active High when REV direction command received. Active Low when FWD direction command received.</td> </tr> <tr> <td data-bbox="573 919 686 951">Drive On -</td> <td data-bbox="781 919 1471 972">Active when control is “Ready” (has reached excitation level and capable of producing torque).</td> </tr> <tr> <td data-bbox="573 982 743 1014">CMD Direction -</td> <td data-bbox="781 982 1417 1035">Active at all times. Logical output state indicates Forward or Reverse direction. High=FWD, Low=REV.</td> </tr> <tr> <td data-bbox="573 1045 760 1077">Over Temp Warn -</td> <td data-bbox="781 1045 1401 1077">Active when control heat sink is within 3°C of Int Overtemp.</td> </tr> <tr> <td data-bbox="573 1087 735 1119">Process Error -</td> <td data-bbox="781 1087 1417 1182">Active when process feedback signal is outside the range specified by the Level 2 Process Control block, AT Setpoint Band parameter. Turns off when process feedback error is eliminated.</td> </tr> <tr> <td data-bbox="573 1192 686 1224">Drive Run -</td> <td data-bbox="781 1192 1471 1245">Active when drive is Ready, Enabled, Speed or Torque command received with FWD/REV direction issued.</td> </tr> </tbody> </table>	Condition	Description	Ready -	Active when power is applied and no faults are present.	Zero Speed -	Active when motor RPM is below the value of the Level 1 Output “Zero SPD Set Pt” parameter.	At Speed -	Active when output speed is within the speed range defined by the Level 1 Output “At Speed Band” parameter.	Overload -	Active during an Overload fault caused by a time out when output current is greater than Rated Current.	Keypad Control -	Active when control is in Local keypad control.	At Set Speed -	Active when output speed is at or above the Level 1 Output “Set Speed” parameter.	Fault -	Active when a fault condition is present.	Following ERR -	Active when the motor speed is outside the user specified tolerance band defined by the At Speed Band parameter.	Motor Direction -	Active High when REV direction command received. Active Low when FWD direction command received.	Drive On -	Active when control is “Ready” (has reached excitation level and capable of producing torque).	CMD Direction -	Active at all times. Logical output state indicates Forward or Reverse direction. High=FWD, Low=REV.	Over Temp Warn -	Active when control heat sink is within 3°C of Int Overtemp.	Process Error -	Active when process feedback signal is outside the range specified by the Level 2 Process Control block, AT Setpoint Band parameter. Turns off when process feedback error is eliminated.	Drive Run -	Active when drive is Ready, Enabled, Speed or Torque command received with FWD/REV direction issued.
Condition	Description																															
Ready -	Active when power is applied and no faults are present.																															
Zero Speed -	Active when motor RPM is below the value of the Level 1 Output “Zero SPD Set Pt” parameter.																															
At Speed -	Active when output speed is within the speed range defined by the Level 1 Output “At Speed Band” parameter.																															
Overload -	Active during an Overload fault caused by a time out when output current is greater than Rated Current.																															
Keypad Control -	Active when control is in Local keypad control.																															
At Set Speed -	Active when output speed is at or above the Level 1 Output “Set Speed” parameter.																															
Fault -	Active when a fault condition is present.																															
Following ERR -	Active when the motor speed is outside the user specified tolerance band defined by the At Speed Band parameter.																															
Motor Direction -	Active High when REV direction command received. Active Low when FWD direction command received.																															
Drive On -	Active when control is “Ready” (has reached excitation level and capable of producing torque).																															
CMD Direction -	Active at all times. Logical output state indicates Forward or Reverse direction. High=FWD, Low=REV.																															
Over Temp Warn -	Active when control heat sink is within 3°C of Int Overtemp.																															
Process Error -	Active when process feedback signal is outside the range specified by the Level 2 Process Control block, AT Setpoint Band parameter. Turns off when process feedback error is eliminated.																															
Drive Run -	Active when drive is Ready, Enabled, Speed or Torque command received with FWD/REV direction issued.																															
	Zero SPD Set PT	Sets the speed at which the Zero Speed opto output becomes active (turns on). When the speed is less than the ZERO SPD SET PT, the Opto Output becomes active. This is useful when a motor brake is to interlock operation with a motor.																														
	At Speed Band	<p>The At Speed Band serves two Opto Output Conditions and the Level 2 Protection block Following Error:</p> <p>Sets the speed range in RPM at which the At Speed opto output turns on and remains active within the range.</p> <p>Sets the Following Error Tolerance Band for the Level 1 OUTPUT, Opto Output condition Following ERR. The opto output is active if the motor speed is outside this band.</p> <p>Sets the no fault operating speed range of the drive. This value is used by the Level 2 Protection block, Following Error parameter (if it is set to ON). If the drive speed falls out of this band, the Level 2 Protection block, Following Error parameter will shut down the drive (if it is set to ON).</p>																														
	Set Speed	Sets the speed that the At Set Speed opto output becomes active (turns on). When the speed is greater than the Level 1 Output SET SPEED parameter, the Opto Output becomes active. This is useful when another machine must not start or stop until the motor exceeds a predetermined speed.																														

**Table 4-2 Level 1 Parameter Block Definitions - Continued**

Block Title	Parameter	Description																																														
OUTPUT (Continued)	Analog Output #1 and #2	<p>Two Analog 0-5VDC linear outputs may be configured to represent any of the following conditions:</p> <table border="0"> <thead> <tr> <th data-bbox="667 373 781 401">Condition</th> <th data-bbox="841 373 971 401">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="667 411 808 438">ABS Speed -</td> <td data-bbox="841 411 1533 466">Represents the absolute motor speed where 0VDC = 0 RPM and +5VDC = MAX RPM.</td> </tr> <tr> <td data-bbox="667 476 808 504">ABS Torque -</td> <td data-bbox="841 476 1468 531">Represents the absolute value of torque where +5VDC = Torque at CURRENT LIMIT and 0VDC=0 Torque.</td> </tr> <tr> <td data-bbox="667 541 808 569">Speed Command -</td> <td data-bbox="841 541 1511 596">Represents the absolute value of commanded speed where +5VDC = MAX RPM and 0VDC=0 RPM</td> </tr> <tr> <td data-bbox="667 606 808 634">PWM Voltage -</td> <td data-bbox="841 606 1360 661">Represents the amplitude of PWM voltage where +5VDC = MAX AC Voltage.</td> </tr> <tr> <td data-bbox="667 672 808 699">Flux Current -</td> <td data-bbox="841 672 1523 726">Represents the actual portion of total current used for excitation. 5VDC= MAX flux current.</td> </tr> <tr> <td data-bbox="667 737 808 764">CMD Flux CUR -</td> <td data-bbox="841 737 1360 791">Represents the calculated value for flux current. 5VDC= MAX commanded flux current.</td> </tr> <tr> <td data-bbox="667 802 808 829">Load Current -</td> <td data-bbox="841 802 1565 877">Represents the actual portion of total current used to produce torque (CW and CCW torque). 5V = Max. CW torque, 0V = Max. CCW torque.</td> </tr> <tr> <td data-bbox="667 888 808 915">CMD Load Current -</td> <td data-bbox="841 888 1398 942">Represents the calculated value of load current. 5V = Max. commanded load current.</td> </tr> <tr> <td data-bbox="667 953 808 980">Motor Current -</td> <td data-bbox="841 953 1544 1008">Amplitude of continuous current including motor excitation current. 5VDC = Rated Current.</td> </tr> <tr> <td data-bbox="667 1018 808 1045">Load Component -</td> <td data-bbox="841 1018 1500 1073">Amplitude of load current not including the motor excitation current. 5VDC = Rated Current.</td> </tr> <tr> <td data-bbox="667 1083 808 1110">Quad Voltage -</td> <td data-bbox="841 1083 1471 1117">Load controller output. Used to diagnose control problems.</td> </tr> <tr> <td data-bbox="667 1127 808 1155">Direct Voltage -</td> <td data-bbox="841 1127 1463 1161">Flux controller output. Used to diagnose control problems.</td> </tr> <tr> <td data-bbox="667 1171 808 1199">AC Voltage -</td> <td data-bbox="841 1171 1565 1310">A scaled AC waveform that represents the AC line to line motor terminal voltage. 0V = Neg Peak PWM voltage. 2.5V centered. 5V = Pos Peak PWM voltage. At rated motor voltage, a full 0 to 5V sinusoidal waveform should be present. This waveform should be at or greater than the motor base frequency. (At half the motor base frequency, a 1.25V to 3.75 sine wave is present.)</td> </tr> <tr> <td data-bbox="667 1320 808 1348">Bus Voltage -</td> <td data-bbox="841 1320 1349 1354">Bus voltage scaled to 0-5VDC. 5V = 1000VDC.</td> </tr> <tr> <td data-bbox="667 1365 808 1392">Torque -</td> <td data-bbox="841 1365 1528 1419">Bipolar torque output. 2.5V centered, 5V = Max Positive Torque, 0V = Max negative torque.</td> </tr> <tr> <td data-bbox="667 1430 808 1457">Power -</td> <td data-bbox="841 1430 1565 1484">Bipolar power output. 2.5V = Zero Power, 0V = negative rated peak power, +5V = Positive rated peak power.</td> </tr> <tr> <td data-bbox="667 1495 808 1522">Velocity -</td> <td data-bbox="841 1495 1479 1549">Represents motor speed scaled to 0V = negative max RPM, +2.5V = Zero Speed, +5V = positive max RPM.</td> </tr> <tr> <td data-bbox="667 1560 808 1587">Overload -</td> <td data-bbox="841 1560 1442 1593">(Accumulated current)<sup>2</sup> x (time), Overload occurs at +5V.</td> </tr> <tr> <td data-bbox="667 1604 808 1631">PH 2 Current -</td> <td data-bbox="841 1604 1533 1659">Sampled AC phase 2 motor current. 2.5V = zero amps, 0V = negative rated peak amps, +5V = positive rated peak amps.</td> </tr> <tr> <td data-bbox="667 1669 808 1696">PH 1 Current -</td> <td data-bbox="841 1669 1533 1724">Sampled AC phase 1 motor current. 2.5V = zero amps, 0V = negative rated peak amps, +5V = positive rated peak amps.</td> </tr> <tr> <td data-bbox="667 1734 808 1761">Process Feedback -</td> <td data-bbox="841 1734 1430 1789">Represents the selected Process Feedback signal. 2.5V centered, 5V = 100%, 0V = -100%.</td> </tr> <tr> <td data-bbox="667 1799 808 1827">Setpoint Command -</td> <td data-bbox="841 1799 1442 1854">Represents the selected Setpoint Command signal. 2.5V centered, 5V = 100%, 0V = -100%.</td> </tr> </tbody> </table>	Condition	Description	ABS Speed -	Represents the absolute motor speed where 0VDC = 0 RPM and +5VDC = MAX RPM.	ABS Torque -	Represents the absolute value of torque where +5VDC = Torque at CURRENT LIMIT and 0VDC=0 Torque.	Speed Command -	Represents the absolute value of commanded speed where +5VDC = MAX RPM and 0VDC=0 RPM	PWM Voltage -	Represents the amplitude of PWM voltage where +5VDC = MAX AC Voltage.	Flux Current -	Represents the actual portion of total current used for excitation. 5VDC= MAX flux current.	CMD Flux CUR -	Represents the calculated value for flux current. 5VDC= MAX commanded flux current.	Load Current -	Represents the actual portion of total current used to produce torque (CW and CCW torque). 5V = Max. CW torque, 0V = Max. CCW torque.	CMD Load Current -	Represents the calculated value of load current. 5V = Max. commanded load current.	Motor Current -	Amplitude of continuous current including motor excitation current. 5VDC = Rated Current.	Load Component -	Amplitude of load current not including the motor excitation current. 5VDC = Rated Current.	Quad Voltage -	Load controller output. Used to diagnose control problems.	Direct Voltage -	Flux controller output. Used to diagnose control problems.	AC Voltage -	A scaled AC waveform that represents the AC line to line motor terminal voltage. 0V = Neg Peak PWM voltage. 2.5V centered. 5V = Pos Peak PWM voltage. At rated motor voltage, a full 0 to 5V sinusoidal waveform should be present. This waveform should be at or greater than the motor base frequency. (At half the motor base frequency, a 1.25V to 3.75 sine wave is present.)	Bus Voltage -	Bus voltage scaled to 0-5VDC. 5V = 1000VDC.	Torque -	Bipolar torque output. 2.5V centered, 5V = Max Positive Torque, 0V = Max negative torque.	Power -	Bipolar power output. 2.5V = Zero Power, 0V = negative rated peak power, +5V = Positive rated peak power.	Velocity -	Represents motor speed scaled to 0V = negative max RPM, +2.5V = Zero Speed, +5V = positive max RPM.	Overload -	(Accumulated current) <sup>2</sup> x (time), Overload occurs at +5V.	PH 2 Current -	Sampled AC phase 2 motor current. 2.5V = zero amps, 0V = negative rated peak amps, +5V = positive rated peak amps.	PH 1 Current -	Sampled AC phase 1 motor current. 2.5V = zero amps, 0V = negative rated peak amps, +5V = positive rated peak amps.	Process Feedback -	Represents the selected Process Feedback signal. 2.5V centered, 5V = 100%, 0V = -100%.	Setpoint Command -	Represents the selected Setpoint Command signal. 2.5V centered, 5V = 100%, 0V = -100%.
Condition	Description																																															
ABS Speed -	Represents the absolute motor speed where 0VDC = 0 RPM and +5VDC = MAX RPM.																																															
ABS Torque -	Represents the absolute value of torque where +5VDC = Torque at CURRENT LIMIT and 0VDC=0 Torque.																																															
Speed Command -	Represents the absolute value of commanded speed where +5VDC = MAX RPM and 0VDC=0 RPM																																															
PWM Voltage -	Represents the amplitude of PWM voltage where +5VDC = MAX AC Voltage.																																															
Flux Current -	Represents the actual portion of total current used for excitation. 5VDC= MAX flux current.																																															
CMD Flux CUR -	Represents the calculated value for flux current. 5VDC= MAX commanded flux current.																																															
Load Current -	Represents the actual portion of total current used to produce torque (CW and CCW torque). 5V = Max. CW torque, 0V = Max. CCW torque.																																															
CMD Load Current -	Represents the calculated value of load current. 5V = Max. commanded load current.																																															
Motor Current -	Amplitude of continuous current including motor excitation current. 5VDC = Rated Current.																																															
Load Component -	Amplitude of load current not including the motor excitation current. 5VDC = Rated Current.																																															
Quad Voltage -	Load controller output. Used to diagnose control problems.																																															
Direct Voltage -	Flux controller output. Used to diagnose control problems.																																															
AC Voltage -	A scaled AC waveform that represents the AC line to line motor terminal voltage. 0V = Neg Peak PWM voltage. 2.5V centered. 5V = Pos Peak PWM voltage. At rated motor voltage, a full 0 to 5V sinusoidal waveform should be present. This waveform should be at or greater than the motor base frequency. (At half the motor base frequency, a 1.25V to 3.75 sine wave is present.)																																															
Bus Voltage -	Bus voltage scaled to 0-5VDC. 5V = 1000VDC.																																															
Torque -	Bipolar torque output. 2.5V centered, 5V = Max Positive Torque, 0V = Max negative torque.																																															
Power -	Bipolar power output. 2.5V = Zero Power, 0V = negative rated peak power, +5V = Positive rated peak power.																																															
Velocity -	Represents motor speed scaled to 0V = negative max RPM, +2.5V = Zero Speed, +5V = positive max RPM.																																															
Overload -	(Accumulated current) <sup>2</sup> x (time), Overload occurs at +5V.																																															
PH 2 Current -	Sampled AC phase 2 motor current. 2.5V = zero amps, 0V = negative rated peak amps, +5V = positive rated peak amps.																																															
PH 1 Current -	Sampled AC phase 1 motor current. 2.5V = zero amps, 0V = negative rated peak amps, +5V = positive rated peak amps.																																															
Process Feedback -	Represents the selected Process Feedback signal. 2.5V centered, 5V = 100%, 0V = -100%.																																															
Setpoint Command -	Represents the selected Setpoint Command signal. 2.5V centered, 5V = 100%, 0V = -100%.																																															
	Analog Scale #1 & #2	Scale factor for the Analog Output voltage. Useful to set the zero value or full scale range for external meters.																																														

---


**Table 4-2 Level 1 Parameter Block Definitions - Continued**

<b>Block Title</b>	<b>Parameter</b>	<b>Description</b>
Vector Control	CTRL BASE Speed	Sets the speed in RPM at which the saturation voltage of the control is reached. Above this RPM value the control will output constant voltage and variable frequency.
	Current PROP Gain	Sets the current loop proportional gain.
	Speed PROP Gain	Sets the speed (velocity) loop proportional gain.
	Speed INT Gain	Sets the speed (velocity) loop integral gain.
	Slip Frequency	Sets the rated slip frequency of the motor.
	Stator R1	Stator resistance in ohms. If set too high, the motor will tend to stall at zero speed when reversing or accelerating from low speed. Reducing this value will eliminate the problem. When too low, speed regulation may suffer.
	Stator X1	Stator leakage reactance, in ohms at 60Hz. This parameter has most impact when reversing motor rotation at full current limit. If set too low, the true decel time will tend to increase.
LEVEL 2 BLOCK		ENTERS LEVEL 2 MENU

**Table 4-3 Level 2 Parameter Block Definitions**

Block Title	Parameter	Description
OUTPUT LIMITS	Operating Zone	Sets the PWM operating zone to Standard 2.5KHz or Quiet 8.0KHz output carrier frequency. Two operating modes are also selectable: Constant Torque and Variable Torque. Constant Torque allows 170 - 200% for 3 seconds overload or 150% for 60 seconds overload. Variable Torque allows 115% peak overload for 60 seconds.
	MIN Output Speed	Sets the minimum motor speed in RPM. During operation, the motor speed will not be allowed to go below this value except for motor starts from 0 RPM or during dynamic braking to a stop or in Process mode.
	MAX Output Speed	Sets the maximum motor speed in RPM.
	PK Current Limit	The maximum output peak current to the motor. Values above 100% of the rated current are available depending upon the operating zone selected.
	PWM Frequency	The frequency that the output transistors are switched. PWM frequency is also referred to as "Carrier" frequency. PWM should be as low as possible to minimize stress on the output transistors and motor windings. It is recommended that the PWM frequency be set to approximately 15 times the maximum output frequency of the control. Ratios less than 15 will result in non-Sinusoidal current waveforms. See Figure 4-3.
	Current Rate Limit	Limits the rate of torque change in response to a torque command.
CUSTOM UNITS	Decimal Places	The number of decimal places of the Output Rate display on the Keypad display. This value will be automatically reduced for large values. The output rate display is only available if the Value At Speed parameter value is non zero.
	Value At Speed	Sets the desired output rate per RPM of motor speed. Two numbers are displayed on the keypad display (separated by a slash "/"). The first number (left most) is the value you want the keypad to display at a specific motor speed. The second number (right most) is the motor RPM corresponding to the units in the first number. A decimal may be inserted into the numbers by placing the flashing cursor over the up/down arrow and using the ▲ or ▼ keys.
	Units of Measure	Allows user specified units of measure to be displayed on the Output Rate display. Use the shift and arrow keys to scroll to the first and successive characters. If the character you want is not displayed, move the flashing cursor over the special up/down character arrow on the left side of the display. Use the up/down arrows and the shift key to scroll through all 9 character sets. Use the ENTER key to save your selection.
PROTECTION	Overload	Sets the protection mode to Fault (trip off during overload condition) or to Foldback (automatically reduce the output current below the continuous output level) during an overload. Foldback is the choice if continuous operation is desired. Fault will require the control be "Reset" manually or automatically after an overload.
	External Trip	OFF - External Trip is Disabled. ON - External Trip is enabled. If a normally closed contact at J1-16 is opened, an External Trip fault will occur and cause the drive to shut down.
	Local Enable INP	OFF - Ignores J1-8 switched input when in the "LOCAL" mode. ON - Requires J1-8 Enable input to be closed to enable the control when in the "LOCAL" mode.
	Following Error	This parameter determines if the control is to monitor the amount of following error that occurs in an application. Following Error is the programmable tolerance for the AT Speed Opto output as defined by the Level 1 Output block, AT Speed Band parameter. Operation outside the speed range will cause a fault and the drive will shut down.
	Torque Proving	When this parameter is set to ON the control measures output current in all three phases to the motor. If output current is unbalanced, the control will trip off generating a torque proving fault. In a hoist application, for example, this is useful to ensure that motor torque exists before the fail safe brake is released. "Drive On" output, if programmed, will not close (will not release brake) if torque proving fails.

**Figure 4-3 Maximum Output Frequency vs PWM Frequency**

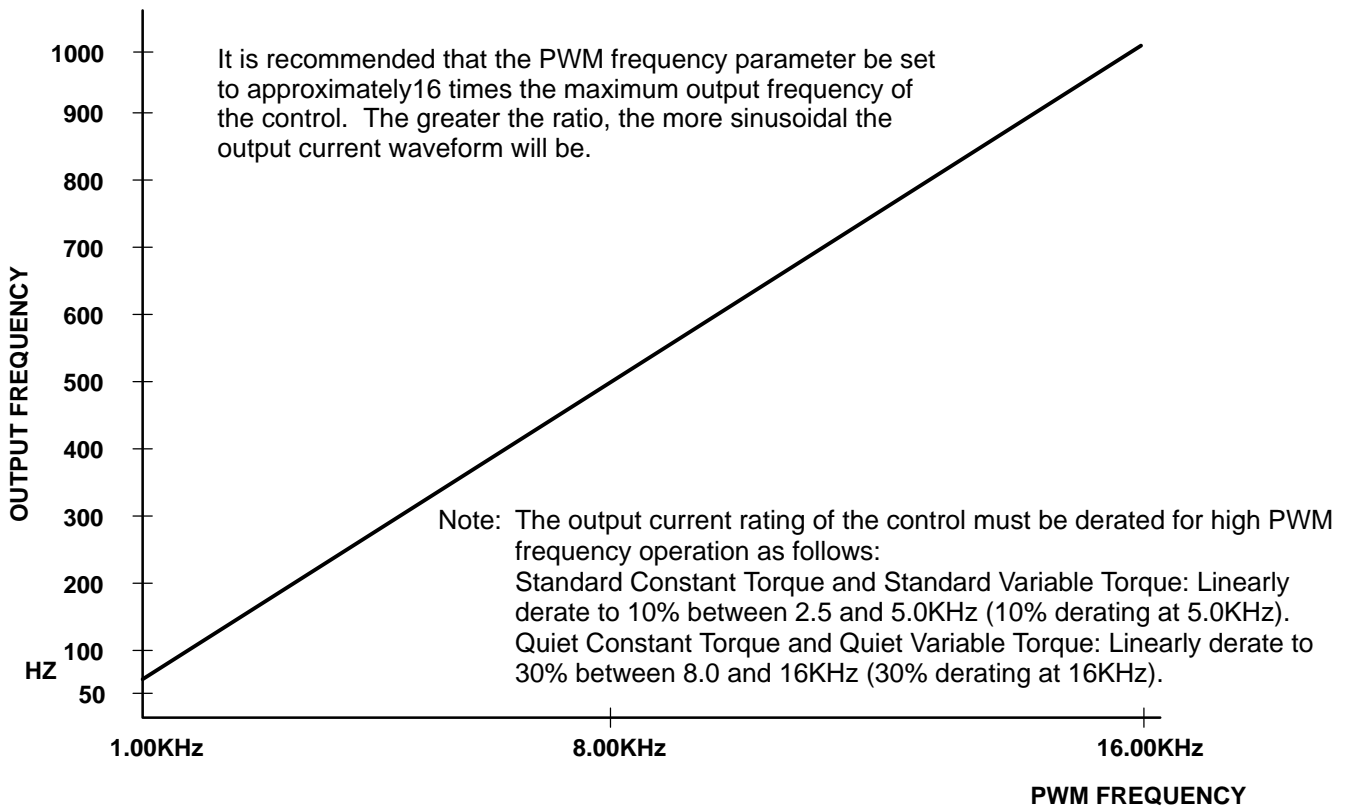

**⚠ Caution:** If an automatic restart of the motor control could cause injury to personnel, the automatic restart feature should be disabled by changing the Level 2 Miscellaneous block, Restart Auto/Man parameter to manual.

**Table 4-3 Level 2 Parameter Block Definitions** Continued

Block Title	Parameter	Description
MISCELLANEOUS	Restart Auto/Man	Manual - If a fault or power loss occurs, the control must be manually reset to resume operation. Automatic - If a fault or power loss occurs, the control will automatically reset to resume operation.
	Restart Fault/Hr	The maximum number of automatic restart attempts before requiring a manual restart. After one hour without reaching the maximum number of faults or if power is turned off and on again, the fault count is reset to zero.
	Restart Delay	The amount of time allowed after a fault condition for an automatic restart to occur. Useful to allow sufficient time to clear a fault before restart is attempted.
	Factory Settings	Restores factory settings for all parameter values. Select YES and press "ENTER" key to restore factory parameter values. The keypad Display will show "Operation Done" then return to "NO" when completed.  Note: When factory settings are reset, the Motor Rated Amps value is reset to 999.9 amps. This Level 2 Motor Data block parameter value must be changed to the correct value (located on the motor rating plate) before attempting to start the drive.

**Table 4-3 Level 2 Parameter Block Definitions** Continued

Block Title	Parameter	Description
SECURITY CONTROL	Security State	<p>Off - No security Access Code required to change parameter values.</p> <p>Local - Requires security Access Code to be entered before changes can be made using the Keypad.</p> <p>Serial - Requires security Access Code to be entered before changes can be made using the Serial Link.</p> <p>Total - Requires security Access Code to be entered before changes can be made using the Keypad or serial link.</p> <p>Note: If security is set to Local, Serial or Total you can press PROG and scroll through the parameter values that are programmed but you are not allowed to change them unless you enter the correct access code.</p>
	Access Timeout	<p>The time in seconds the security access remains enabled after leaving the programming mode. If you exit and go back into the program Mode within this time limit, the security Access Code does not have to be re-entered. This timer starts when leaving the Program Mode (by pressing DISP). Access Timeout is operational only in Local security mode.</p> <p>Note: This feature is not available when using the Serial operating mode or if power is cycled.</p>
	Access Code	<p>A 4 digit number code. Only persons that know the code can change secured Level 1 and Level 2 parameter values. A loss of power to the control will automatically require the secured access code for parameter adjustments.</p> <p>Note: Please record your access code and store it in a safe place. If you cannot gain entry into parameter values to change a protected parameter, please contact Baldor. Be prepared to give the 5 digit code shown on the lower right side of the Keypad Display at the Security Control Access Code parameter prompt.</p>
MOTOR DATA	Motor Voltage	The rated voltage of the motor (listed on the motor nameplate).
	Motor Rated Amps	The full load motor current (listed on the motor nameplate). If the motor current exceeds this value for a period of time, an Overload fault will occur.
	Motor Rated SPD	The rated speed of the motor (listed on the motor nameplate). If Motor Rated SPD = 1750 RPM and Motor Rated Freq = 60 Hz, the Keypad Display will show 1750 RPM at 60 Hz and 875 RPM at 30Hz.
	Motor Rated Freq	The rated frequency of the motor (listed on the motor nameplate).
	Motor Mag Amps	The motor magnetizing current value (listed on some motor nameplates). Also called no load current. Measured using a clamp on amp meter at the AC power line while the motor is running at line frequency with no load connected to the motor shaft.
	Calc Presets	Loads operating values into memory. These values are based on information programmed into the Level 2 Output Limits and Motor Data parameter values. CALC Presets must be run before Autotuning or manually tuning the drive.

**Table 4-3 Level 2 Parameter Block Definitions** Continued

Block Title	Parameter	Description
BRAKE ADJUST	Resistor Ohms	The dynamic braking resistor value in ohms. Refer to dynamic braking manual or call Baldor for additional information.
	Resistor Watts	The dynamic braking resistor watts rating. Refer to dynamic braking manual or call Baldor for additional information.
	DC Brake Current	The amount of DC injection brake current. 0% = Flux current, 100% = Motor rated current.
PROCESS CONTROL	Process Feedback	Sets the type of signal used for the process feedback signal.
	Process Inverse	Causes the process feedback signal to be inverted. Used with reverse acting processes that use a unipolar signal such as 4-20mA. If "ON", 20mA will decrease motor speed and 4mA will increase motor speed.
	Setpoint Source	Sets the source input signal to which the process feedback will be compared. If "Setpoint CMD" is selected, the fixed value of the set point is entered in the Setpoint Command parameter value.
	Setpoint Command	Sets the value of the setpoint the control will try to maintain by adjusting motor speed. This is only used when the Setpoint Source is a fixed value "Setpoint CMD" under Setpoint Source.
	Set PT ADJ Limit	Sets the maximum speed correction value to be applied to the motor (in response to the maximum feedback setpoint error). For example, if the max motor speed is 1750 RPM, the setpoint feedback error is 100% and the setpoint adjustment limit is 10%, the maximum speed the motor will run in response to the setpoint feedback error is $\pm 175$ RPM. If at the process setpoint, the motor speed is 1500 RPM, the maximum speed adj limits is then 1325 to 1675 RPM.
	Process ERR TOL	Sets the width of the comparison band (% of setpoint) with which the process input is compared. The result is that if the process input is within the comparison band the corresponding Opto Output will become active.
	Process PROP Gain	Sets the PID loop proportional gain. This determines how much adjustment to motor speed (within the Set PT ADJ Limit) is made to move the analog input to the setpoint.
	Process INT Gain	Sets the PID loop Integral gain. This determines how quickly the motor speed is adjusted to correct long term error.
	Process DIFF Gain	Sets the PID loop differential gain. This determines how much adjustment to motor speed (within the Set PT ADJ Limit) is made for transient error.
	Follow I:O Ratio	Sets the ratio of the Master to the Follower in Master/Follower configurations. Requires the Master Pulse Reference/ Isolated Pulse Follower expansion board. For example, the master encoder you want to follow is a 1024 count encoder. The follower motor you wish to control also has a 1024 count encoder on it. If you wish the follower to run twice the speed of the master, a 1:2 ratio is entered. Fractional ratios such as 0.5:1 are entered as 1:2. Ratio limits are (1-65,535) : (1-20).  Note: The Master Encoder parameter must be defined if a value is entered in the Follow I:O Ratio parameter.  Note: When using Serial Communications to operate the control, this value is the MASTER portion of the ratio. The FOLLOWER portion of the ratio is set in the Follow I:O Out parameter.
	Follow I:O Out	This parameter is visible for use only when Serial Communication is used to operate the control. A Master Pulse Reference/ Isolated Pulse Follower expansion board is required. This parameter represents the FOLLOWER portion of the ratio. The MASTER portion of the ratio is set in the Follow I:O Ratio parameter.
Master Encoder	Only used if an optional Master Pulse Reference/Isolated Pulse Follower expansion board is installed. Defines the number of pulses per revolution of the master encoder. Only used for follower drives.	
COMMUNICATIONS	Protocol	Sets the type of communication the control is to use RS-232 or RS-485 ASCII (text) protocol.
	Baud Rate	Sets the speed at which communication is to occur.
	Drive Address	Sets the address of the control for communication.

**Table 4-3 Level 2 Parameter Block Definitions** Continued

<b>Block Title</b>	<b>Parameter</b>	<b>Description</b>
SYNCHRO STARTS	Synchro Starts	Used when the motor shaft is rotating at the time the inverter applies power to the motor. If set to Restarts Only, allows Synchro Starts after a fault condition is reset. If set to All Starts, allows Synchro Starts at all fault resets as well as restarts after power failure or after a run command.
	Sync Start Speed	Allows the Synchro Start feature to begin scanning motor RPM at the selected motor RPM.
	Sync Scan Time	The time allowed for Synchro Start to scan and detect motor speed. Scanning begins at the Sync Start speed and decreases to 0 RPM. Generally, the shorter the Sync Scan Time the more likely a false Synchro Start will be detected. This value should be set high enough to eliminate false Synchro Starts.
	Sync Direction	Allows Synchro Starts in either or both motor rotational directions. If the application requires motor shaft rotation in one direction only, scanning in that direction only will minimize Sync Scan Time.
AUTO TUNING		The Auto Tune procedure is used to automatically measure and calculate certain parameter values. Occasionally, the Auto Tune procedure cannot be run due to various circumstances such as the load cannot be uncoupled from the motor. The control can be manually tuned by entering the parameter values based on calculations you have made. Refer to "Manually Tuning the Control" in the Troubleshooting section of this manual.
	CALC Presets	Loads operating values into memory. These values are based on information programmed into the Level 2 Output Limits and Motor Data parameter values. CALC Presets must be run before Autotuning or manually tuning the drive.
	CMD Offset Trim Stator R1	This procedure trims out voltage offsets for the differential analog input at J1-4 and J1-5. Measures motor stator resistance.
	Flux CUR Setting	Sets motor magnetizing current by running motor at near rated speed.
LEVEL 1 BLOCK		ENTERS LEVEL 1 MENU



## Section 5 Troubleshooting

### Overview

The Baldor Series 17H Encoderless Vector Control requires very little maintenance and should provide years of trouble free operation when installed and applied correctly. Occasional visual inspection should be considered to ensure tight wiring connections and to avoid the build up of any dust, dirt, or foreign debris which can reduce heat dissipation.






Operational failures called "Faults" will be displayed on the Keypad Display as they occur. A comprehensive list of these faults, their meaning and how to access the fault log and diagnostic information is provided later in this section. Troubleshooting information is provided in table format with corrective actions is also provided later in this section.

Before attempting to service this equipment, all input power must be removed from the control to avoid the possibility of electrical shock. The servicing of this equipment should be handled by a qualified electrical service technician experienced in the area of high power electronics.

It is important to familiarize yourself with the following information before attempting any troubleshooting or service of the control. Most troubleshooting can be performed using only a digital voltmeter having an input impedance exceeding 1 megohm. In some cases, an oscilloscope with 5 MHz minimum bandwidth may be useful. Before consulting the factory, check that all power and control wiring is correct and installed per the recommendations given in this manual.

### No Keypad Display - Display Contrast Adjustment






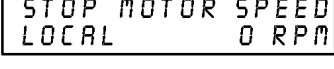
If there is no visible display, use the following procedure to adjust the contrast of the display.

Action	Description	Display	Comments
Apply Power	No visible display.		Display mode.
Press DISP key	Ensures control in Display mode.		
Press SHIFT key 2 times	Allows display contrast adjustment.		
Press ▲ or ▼ key	Adjusts display contrast (intensity).		
Press ENTER key	Saves display contrast adjustment level and exits to display mode.		











**Table 5-1 Fault Messages**

<b>FAULT MESSAGE</b>	<b>DESCRIPTION</b>
Current Sens FLT	Defective phase current sensor or open circuit detected between control board and current sensor.
DC Bus High	Bus over voltage condition occurred.
DC Bus Low	Bus under voltage condition occurred.
External Trip	An open circuit on J1-16 typically indicating an external over temperature condition occurred.
GND FLT	Low impedance path detected between an output phase and ground.
INT Over-Temp	Temperature of control heatsink exceeded safe level.
Invalid Base ID	Control does not recognize power base ID.
Inverter Base ID	Control board installed on power base without current feedback.
Line Regen FLT	Only applies to Series 21H and 22H Line Regen controls.
Logic Supply FLT	Logic power supply not working properly.
Lost User Data	Battery backed RAM parameters have been lost or corrupted. When fault cleared (Reset), the control should reset to factory preset values.
Low INIT Bus V	Insufficient bus voltage on startup.
Memory Error	EEPROM error occurred. Contact Baldor.
New Base ID	Control board sensed a different power base since last time it was powered up.
No Faults	Fault log is empty.
No EXB Installed	Programmed operating parameter requires an expansion board that is not installed or is not recognized.
Over Current FLT	Instantaneous over current condition detected by bus current sensor.
Overload - 1 min	Output current exceeded 1 minute rating.
Overload - 3 sec	Output current exceeded 3 second rating.
Over speed	Motor RPM exceeded 110% of programmed MAX Motor Speed.
µP Reset	Power cycled before the residual Bus voltage reached 0VDC.
PWR Base FLT	Desaturation of power device occurred or bus current threshold exceeded.
Regen R PWR FLT	Regen power exceeded DB resistor rating.
Torque Prove FLT	Unbalanced current between all 3 motor phases.
User Fault Text	Custom software operating fault occurred.
Co-Processor Fault	Co-Processor hardware fault occurred. Contact Baldor.

**How to Access the Fault Log** When a fault condition occurs, motor operation stops and a fault code is displayed on the Keypad display. The control keeps a log of up to the last 31 faults. If more than 31 faults have occurred the oldest fault will be deleted from the fault log to make room for the newest fault. To access the fault log use the following procedure:

Action	Description	Display	Comments
Apply Power			Logo display for 5 seconds.
	Display mode showing output frequency		Display mode.
Press DISP key 5 times	Use DISP key to scroll to the Fault Log entry point.		
Press ENTER key	Display first fault type and time fault occurred.		Typical display.
Press ▲ key	Scroll through fault messages.		If no messages, the fault log exit choice is displayed.
Press ENTER key	Return to display mode.		Display mode stop key LED is on.

**How to Clear the Fault Log** Use the following procedure to clear the fault log and reset the internal clock.

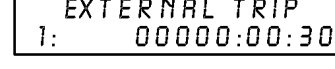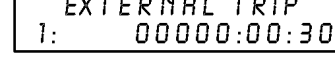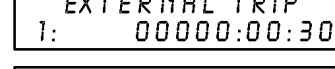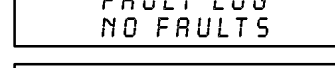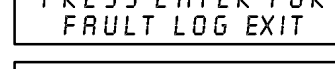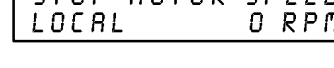Action	Description	Display	Comments
Apply Power			Logo display for 5 seconds.
	Display mode showing output frequency.		Display mode.
Press DISP key	Press DISP to scroll to the Fault Log entry point.		
Press ENTER key	Displays most recent message.		1 = most recent fault 2 = second most recent fault, etc.
Press SHIFT key			
Press RESET key			
Press SHIFT key			
Press ENTER key	Fault log is cleared.		No faults in fault log and the internal clock is reset.
Press ▲ or ▼ key	Scroll Fault Log Exit.		
Press ENTER key	Return to display mode.		

## How to Access Diagnostic Information

Action	Description	Display	Comments
Apply Power		<pre>BALDOR MOTORS &amp; DRIVES</pre>	Logo display for 5 seconds.
	Display mode showing motor speed.	<pre>STOP MOTOR SPEED LOCAL 0 RPM</pre>	No faults present. Local keypad mode. If in remote/serial mode, disable drive then press local for this display.
Press DISP key 6 times	Scroll to Diagnostic Information screen	<pre>PRESS ENTER FOR DIAGNOSTIC INFO</pre>	Diagnostic Access screen.
Press ENTER key	Access diagnostic information.	<pre>STOP SPEED REF LOCAL 0 RPM</pre>	First Diagnostic Information screen.
Press DISP key	Display showing control temperature.	<pre>STOP CONTROL TEMP LOCAL 0.0° C</pre>	
Press DISP key	Display showing bus voltage.	<pre>STOP BUS VOLTAGE LOCAL XXXV</pre>	
Press DISP key	Display showing % overload current remaining.	<pre>STOP OVRLD LEFT LOCAL 100.00%</pre>	
Press DISP key	Display showing opto inputs & outputs states. (0=Open, 1=Closed).	<pre>DIGITAL I/O 00000000 0000</pre>	Opto Inputs states (Left); Opto Outputs states (Right).
Press DISP key	Display showing actual drive running time.	<pre>TIME FROM PUR UP 0000000.01.43</pre>	HR.MIN.SEC format.
Press DISP key	Display showing operating zone, voltage and control type.	<pre>QUIET VAR TO XXXV ENCODERLESS</pre>	
Press DISP key	Display showing continuous amps; PK amps rating; amps/volt scale of feedback, power base ID.	<pre>XXA XX APK X.XX A/V ID:XXX</pre>	ID is a hexadecimal value.
Press DISP key	Display showing which Group1 or 2 expansion boards are installed and recognized.	<pre>G1 NOT INSTALLED G2 NOT INSTALLED</pre>	In this case, no expansion boards are installed.
Press DISP key	Display showing software version and revision installed in the control.	<pre>SOFTWARE VERSION XXX-X.XX</pre>	
Press DISP key	Displays exit choice.	<pre>PRESS ENTER FOR DIAGNOSTIC EXIT</pre>	Press ENTER to exit diagnostic information.

**Table 5-2 Troubleshooting**

INDICATION	POSSIBLE CAUSE	CORRECTIVE ACTION
No Display	Lack of input voltage.	Check input power for proper voltage. Verify fuses are good (or breaker is not tripped).
	Loose connections.	Check input power termination. Verify connection of operator keypad.
	Adjust display contrast.	See Adjust Display Contrast in this section.
Current Sense FLT	Open circuit between control board and current sensor.	Check connections between control board and current sensor.
	Defective current sensor.	Replace current sensor.
DC Bus High	Excessive dynamic braking power.	Increase the DECEL time. Check dynamic brake watt and resistance parameter values. Add optional dynamic braking hardware.
	Dynamic brake wiring problem.	Check dynamic brake hardware wiring.
	Input voltage too high.	Verify proper AC line voltage. Use step down isolation transformer if needed. Use line reactor to minimize spikes.
	Too fast a Decel rate.	Increase Decel time parameter value.
DC Bus Low	Input voltage too low.	Disconnect dynamic brake hardware and repeat operation. Verify proper AC line voltage. Use step up isolation transformer if needed. Check power line disturbances (sags caused by start up of other equipment). Monitor power line fluctuations with date and time imprint to isolate power problem.
External Trip	Motor ventilation insufficient.	Clean motor air intake and exhaust. Check external blower for operation. Verify motor's internal fan is coupled securely.
	Motor draws excessive current.	Check motor for overloading. Verify proper sizing of control and motor.
	No thermostat connected.	Connect thermostat. Verify connection of all external trip circuits used with thermostat. Disable thermostat input at J1-16 (External Trip Input).
	Poor thermostat connections.	Check thermostat connections.
	External trip parameter incorrect.	Verify connection of external trip circuit at J1-16. Set external trip parameter to "OFF" if no connection made at J1-16.
GND FLT	Improper wiring. Wiring shorted in conduit. Motor winding shorted.	Disconnect wiring between control and motor. Retry test. If GND FLT is cleared, reconnect motor leads and retry the test. Rewire as necessary. Repair motor. If GND FLT remains, contact Baldor.
INT Over-Temp	Drive Overloaded.	Correct motor loading. Verify proper sizing of control and motor.
	Ambient temperature too high.	Relocate control to cooler operating area. Add cooling fans or air conditioner to control cabinet.
	Cooling fans clogged or restricted air path.	Clean fans and air path.

**Table 5-2 Troubleshooting** Continued

INDICATION	POSSIBLE CAUSE	CORRECTIVE ACTION
Invalid Base ID	Control does not recognize HP and Voltage configuration.	Press "RESET" key on keypad. If fault remains, call Baldor.
Inverter Base ID	Power base with no output phase current sensors being used.	Replace power base with one that has output phase current feedback. Contact Baldor.
Logic Supply FLT	Power supply malfunctioned.	Replace logic power supply.
Lost User Data	Battery backed memory failure.	Parameter data was erased. Disconnect power to control and apply power (cycle power). Enter all parameters. Cycle power. If problem persists, contact Baldor.
Low INIT Bus V	Improper AC line voltage.	Disconnect Dynamic Brake hardware and retry test. Check input AC voltage level.
Memory Error	EEPROM memory fault occurred.	Press "RESET" key on keypad. If fault remains, call Baldor.
µP Reset	Power was cycled before Bus voltage reached 0VDC.	Press "RESET" key on keypad. Disconnect power and allow at least 5 minutes for Bus capacitors to discharge before applying power. If fault remains, call Baldor.
Motor has wrong response to Speed Command	Analog input common mode voltage may be excessive.	Connect control input source common to control common to minimize common mode voltage. Maximum common mode voltage at terminals J1-4 and J1-5 is ±15VDC referenced to chassis common.
Motor Will Not Start	Not enough starting torque.	Increase Current Limit setting.
	Motor overloaded.	Check for proper motor loading. Check couplings for binding. Verify proper sizing of control and motor.
	Control not in local mode of operation.	Place control in local mode.
	Motor may be commanded to run below minimum frequency setting.	Increase speed command or lower minimum frequency setting.
	Incorrect Command Select parameter.	Change Command Select parameter to match wiring at J1.
	Incorrect speed command.	Verify control is receiving proper command signal at J1.
Motor Will Not Reach Maximum Speed	Max Output Speed set too low.	Adjust MAX Output Speed parameter value.
	Motor overloaded.	Check for mechanical overload. If unloaded motor shaft does not rotate freely, check motor bearings.
	Improper speed command.	Verify control is set to proper operating mode to receive speed command. Verify control is receiving proper command signal at input terminals. Check velocity loop gains.
	Speed potentiometer failure.	Replace potentiometer.
Motor Will Not Stop Rotation	MIN Output Speed parameter set too high.	Adjust MIN Output Speed parameter value.
	Improper speed command.	Verify control is receiving proper command signal at input terminals. Verify control is set to receive speed command.
	Speed potentiometer failure.	Replace potentiometer.
	Analog input common mode voltage may be excessive.	Connect control input source common to control common to minimize common mode voltage. Maximum common mode voltage at terminals J1-4 and J1-5 is ±15VDC referenced to chassis common.
	Analog offset trim set incorrectly.	Adjust the Level 1 Input block, ANA CMD Offset parameter value to obtain zero speed with a zero value input command.

**Table 5-2 Troubleshooting** Continued

INDICATION	POSSIBLE CAUSE	CORRECTIVE ACTION
New Base ID	Software parameters are not initialized on newly installed control board.	Press "RESET" key on keypad to clear the fault condition. Cycle power (turn power OFF then ON). Reset parameter values to factory settings. Access diagnostics and compare power base ID number to list in Table 5-3 to ensure a match. Re-enter the Parameter Block Values you recorded in the User Settings at the end of this manual. Autotune the control.
No EXB Installed	Parameter incorrectly set.	Change Level 1 Input block, Command Select parameter and Level 2 Process Control block, Process Feedback and Setpoint Source parameters, to selections that do not require an expansion board.
	Need expansion board.	Install the correct expansion board for selected operating mode.
	Incorrect software Revision	Software does not support the revision level of the board installed. Update software.
Over Current FLT	Current Limit parameter set lower than drive rating.	Increase PK Current Limit parameter in the Level 2 Output Limits block, not to exceed drive rating.
	ACCEL/DECEL time too short.	Increase ACCEL/DEC parameters in the Level 1 ACCEL/DECEL Rate block.
	Electrical noise from external DC coils.	Install reverse biased diodes across all external DC relay coils as shown in the Opto Output circuit examples of this manual. See Electrical Noise Considerations in this Section.
	Electrical noise from external AC coils.	Install RC snubbers on all external AC coils. See Electrical Noise Considerations in this Section.
	Excessive load.	Reduce the motor load. Verify proper sizing of control and motor.
Overload - 3 Sec FLT	Peak output current exceeded 3 second rating.	Check PK Current Limit parameter in the Level 2 Output Limits block. Change Overload parameter In the Level 2 Protection block from Trip to Foldback. Check motor for overloading. Increase ACCEL time. Reduce motor load. Verify proper sizing of control and motor.
Overload - 1 Min FLT	Peak output current exceeded 1 minute rating.	Verify Level 2 Motor Data is correct. Check PK Current Limit parameter in the Level 2 Output Limits block. Change Overload parameter In the Level 2 Protection block from Trip to Foldback. Check motor for overloading. Increase ACCEL/DECEL times. Reduce motor load. Verify proper sizing of control and motor.

**Table 5-2 Troubleshooting** Continued

INDICATION	POSSIBLE CAUSE	CORRECTIVE ACTION
Power Module	Power supply failure.	Press "RESET" key on keypad. If fault remains, call Baldor.
PWR Base FLT	Improper ground	Be sure control has separate ground wire to earth ground. Panel grounding or conduit connection is not sufficient.
	Excessive current.	Disconnect motor leads from control and retry test. If fault remains, call Baldor.
	Electrical noise from external DC coils.	Install reverse biased diodes across all external DC relay coils as shown in the Opto Output circuit examples of this manual. See Electrical Noise Considerations in this Section.
	Electrical noise from external AC coils.	Install RC snubbers on all external AC coils. See Electrical Noise Considerations in this Section.
	Excessive load.	Correct motor load. Verify proper sizing of control and motor.
	Excessive power in dynamic brake circuit.	Verify proper Ohm and Watt parameters of DC Injection Braking. Increase decel time. Add optional dynamic braking hardware.
Regen R PWR FLT	Incorrect dynamic brake parameter.	Check Resistor Ohms and Resistor Watts parameters in the Level 2 Brake Adjust block.
	Regen power exceeded dynamic brake resistor rating.	Add optional dynamic braking hardware.
	Input voltage too high.	Verify proper AC line voltage. Use step down transformer if needed. Use line reactor to minimize spikes.
Torque Prove FLT	Unbalanced current in 3 motor phases.	Check continuity from control to motor windings and verify motor connections.
Unknown Fault	Fault occurred but cleared before its source could be identified.	Check AC line for high frequency noise. Check input switch connections and switching noise.
User Fault Text	Fault detected by custom software.	Refer to custom software fault list.
Co-Processor Fault	Fault detected.	Contact Baldor.

**Table 5-3 Power Base ID - Series 17H**

230VAC Catalog No.	Power Base ID				460VAC Catalog No.	Power Base ID				575VAC Catalog No.	Power Base ID			
	FIF10 / FIF40		FIF20 / FIF24			FIF10 / FIF40		FIF20 / FIF24			FIF10 / FIF40		FIF20 / FIF24	
	Bus Cur	Phase Cur	Bus Cur	Phase Cur		Bus Cur	Phase Cur	Bus Cur	Phase Cur		Bus Cur	Phase Cur	Bus Cur	Phase Cur
201-E	002	802	023	823	401-E	202	A02	23B	A3B	501-E	602	E02	61A	E1A
201-W	002	802	023	823	401-W	202	A02	23B	A3B	501-W	602	E02	61A	E1A
202-E	003	803	024	824	402-E	203	A03	23C	A3C	502-E	603	E03	61B	E1B
202-W	003	803	024	824	402-W	203	A03	23C	A3C	502-W	603	E03	61B	E1B
203-E	004	804	025	825	403-E	204	A04	23D	A3D	503-E	604	E04	61C	E1C
203-W	004	804	025	825	403-W	204	A04	23D	A3D	503-W	604	E04	61C	E1C
205-E	005	805	026	826	405-E	205	A05	241	A41	505-E	605	E05	61D	E1D
205-W	005	805	02A	82A	405-W	205	A05	241	A41	505-W	605	E05	61D	E1D
207-E	006	806	027	827	407-E	206	A06	23E	A3E	507-E	606	E06	61E	E1E
207-W	006	806	027	827	407-W	206	A06	23E	A3E	507-W	606	E06	61E	E1E
207L-E			001	801	407L-E			201	A01	510-E	607	E07	61F	E1F
210-E	007	807	028	828	410-E	207	A07	207	A07	510-W	607	E07	61F	E1F
210-W			028	828	410-W			207	A07	515-E	608	E08	620	E20
210L-E			02B	82B	410L-E			23F	A3F	515-W	608	E08	620	E20
215-E	01A	81A	01A	81A	415-E	22C	A2C	242	A42	510L				
215-W			01A	81A	415-W			242	A42	515L				
210L-ER	00C	80C			410L-ER	208	A08			520	611	E11		
215V	008	808			415V	20E	A0E			520L	60B	EOB		
215L	00A	80D			415L	20F	A0F			525	612	E12		
220	011	811			420	211	A11			525L	60C	E0C		
220L	00E	80E			420L	220	A20			530	613	E13		
225	01D	81D			425	212	A12			530L	60D	E0D		
225V	009	809			425V	20B	A0B			540	614	E14		
225L	00F	80F			425L	221	A21			540L	60E	E0E		
230	013	813			430	213	A13			550	615	E15		
230V	016	816			430V	20C	A0C			550L	60F	E0F		
230L	017	817			430L	222	A22			560	616	E16		
240	014	814			440	214	A14			575	617	E17		
240L	018	818			440L	223	A23			5100	618	E18		
250	015	815			450	215	A15			5150		E1A		
250V	00A	80A			450L	21C	A1C			5150V	619	E19		
250L	01C	81C			460	216	A16			5200		E2A		
275	829				460V	20A	A0A			5250		E3A		
					460L	224	A24			5300		EA4		
					475	217	A17			5350		EA5		
					475L	21D	A1D			5400		EA6		
					4100	218	A18							
					4100L		A2F							
					4125L		A30							
					4150		A9A							
					4150V	219	A19							
					4200		A9B							
					4250		AA5							
					4300		AAE							
					4350		AA6							
					4400		AA7							
					4450		AA9							

Note: The Power Base ID number of a control is displayed in a Diagnostic Information screen as a hexadecimal value.

---

**Electrical Noise Considerations** All electronic devices including the Series 17H Control are vulnerable to significant electronic interference signals (commonly called “Electrical Noise”). At the lowest level, noise can cause intermittent operating errors or faults. From a circuit standpoint, 5 or 10 millivolts of noise may cause detrimental operation. For example, analog speed and torque inputs are often scaled at 5 to 10 VDC maximum with a typical resolution of one part in 1,000. Thus noise of only 5 mv represents a substantial error.


At the extreme level, significant noise can cause damage to the drive. Therefore, it is advisable to prevent noise generation and to follow wiring practices that prevent noise generated by other devices from reaching sensitive circuits. In a control, such circuits include inputs for speed, torque, control logic, and speed and position feedback, plus outputs to some indicators and computers.

### Causes and Cures

Unwanted electrical noise can be produced by many sources. Depending upon the source, various methods can be used to reduce the effects of this noise and to reduce the coupling to sensitive circuits. All methods are less costly when designed into a system initially than if added after installation.

Figure 5-1 shows an oscilloscope trace of noise induced (as the coil circuit is opened) in a 1-ft. wire located next to a lead for a Size 2 contactor coil. Scope input impedance is 10K $\Omega$  for all scope traces. Maximum peak voltage is over 40V. Unless well filtered this is often enough noise to ruin the output of a productive machine.


**Figure 5-1 Electrical Noise Display**

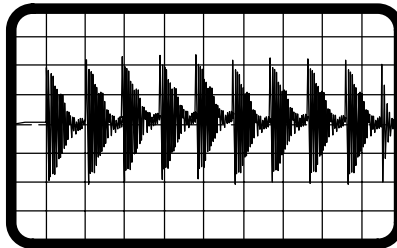

**Relay and Contactor Coils** Among the most common sources of noise are the ever-present coils of contactors and relays. When these highly inductive coil circuits are opened, transient conditions often generate spikes of several hundred volts in the control circuit. These spikes can induce several volts of noise in an adjacent wire that runs parallel to a control-circuit wire.

To suppress noise in these AC coils, add an R-C snubber across each relay and contactor coil. A snubber consisting of a 33K $\Omega$  resistor in series with a 0.47 $\mu$ f capacitor usually works well. The snubber reduces the rate of rise and peak voltage in the coil when current flow is interrupted. This eliminates arcing and reduces the noise voltage induced in adjacent wires. In our example, the noise was reduced from over 40 V<sub>peak</sub> to about 16 V<sub>peak</sub> as shown in Figure 5-2.


**Figure 5-2 R-C Snubber Circuit**

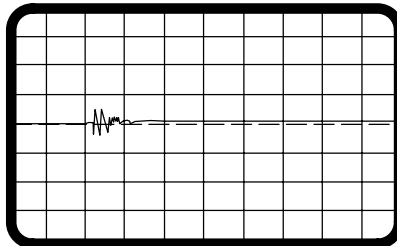

**Electrical Noise Considerations** Continued


Combining an R-C snubber and twisted-pair shielded cable keeps the voltage in a circuit to less than 2 V for a fraction of a millisecond. The waveform shown in Figure 5-3 in addition to the snubber across the coil, the adjacent wire is grounded in a twisted-pair, shielded cable. Note that the vertical scale is 1 V/div., rather than the 20 V/div. in figures 5-1 and 5-2. This shows that snubbers and twisted-pair shielded wire should be used for sensitive circuits located adjacent to coil wires.

**Figure 5-3 R-C Snubber Circuit & twisted-pair**

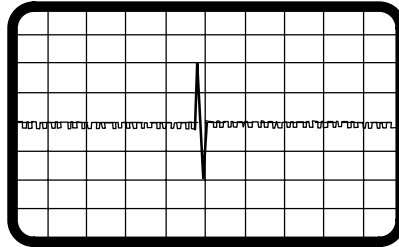

A reverse biased diode across a DC coil achieves the same result as adding an R-C snubber across an AC coil, Figure 5-4.


**Figure 5-4 AC & DC Coil Noise Suppression**

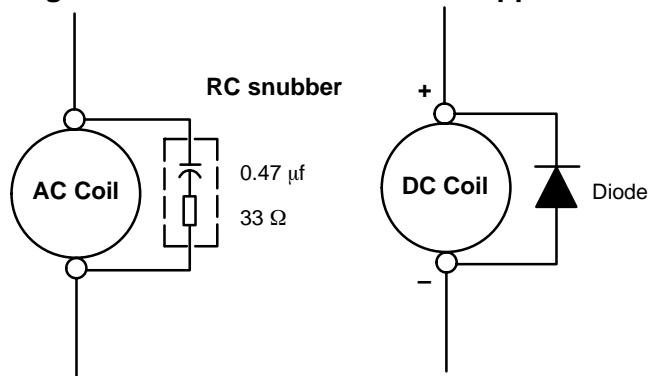

**Wires between Controls and Motors**


Output leads from a typical 460 VAC drive controller contain rapid voltage rises created by power semiconductors switching 650V in less than a microsecond, 1,000 to 10,000 times a second. These noise signals can couple into sensitive drive circuits as shown in Figure 5-5. For this waveform, a transient induced in 1 ft. of wire adjacent to motor lead of a 10 hp, 460 VAC drive. Scope is set at 5 V/div. and 2  $\mu$ sec/div.

**Figure 5-5 10HP, 460VAC Drive**

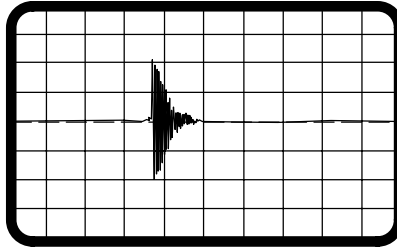


If the shielded pair cable is used, the coupling is reduced by nearly 90%, Figure 5-6.

**Figure 5-6 10HP, 460VAC Drive, Shielded**

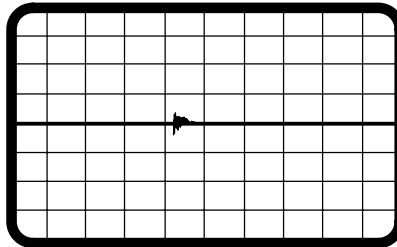


The motor leads of DC motors contain similar voltage transients. The switching rate is about 360 times a second. These noise transients can produce about 2V of noise induced in a wire adjacent to the motor lead. A 30HP, 500VDC Drive, as shown in Figure 5-7. Scope is set at 1 V/div. and 5  $\mu$ sec/div.

**Figure 5-7 30HP, 500VDC Drive**

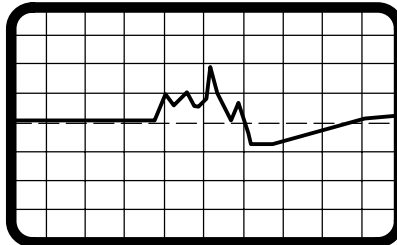

Again, Replacing a single wire with a shielded pair cable reduces the induced noise to less than 0.3 V, Figure 5-8.

**Figure 5-8 30HP, 500VDC Drive, Shielded**

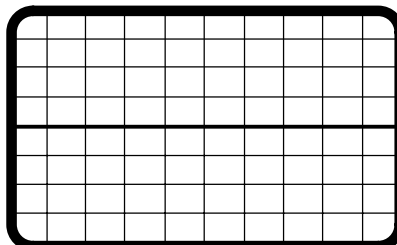


---

## Electrical Noise Considerations Continued

Even input AC power lines contain noise and can induce noise in adjacent wires. This is especially severe with SCR controlled DC drives, current-source and six-step inverters. Figure 5-9 shows a transient induced in 1-ft. wire adjacent to AC input power wire to 20 hp, DC drive. Scope is set at 500 mV/div. and 2 $\mu$ sec/div.

**Figure 5-9 30HP, 500VDC Drive, Shielded**

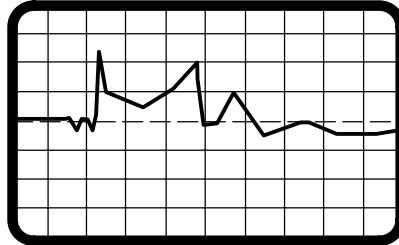

To prevent induced transient noise in signal wires, all motor leads and AC power lines should be contained in rigid metal conduit, or flexible conduit. Do not place line conductors and load conductors in same conduit. Use separate conduit for 3 phase input wires and motor leads. The conduit should be grounded to form a shield to contain the electrical noise within the conduit path. Signal wires - even ones in shielded cable should never be placed in the conduit with motor power wires.

If flexible conduit is required, the wires should be shielded twisted-pair. Although this practice gives better protection than unshielded wires, it lacks the protection offered by rigid metal conduit.

**Special Drive Situations** For severe noise situations, it may be necessary to reduce transient voltages in the wires to the motor by adding load reactors. Load reactors are installed between the control and motor. These are often required where a motor housing lacks the necessary shielding (typically linear motors mounted directly to machine frames) or where the power wires to motors are contained in flexible cables.

Reactors are typically 3% reactance and are designed for the frequencies encountered in PWM drives. For maximum benefit, the reactors should be mounted in the drive enclosure with short leads between the control and the reactors. Baldor offers a complete line of line and load reactors that will reduce ripple current and improve motor life.

### Drive Power Lines

The same type of reactor as installed on the load side of the control can also suppress transients on incoming power lines. Connected on the line side of the drive, the reactor protects the adjustable-speed drive from some transients generated by other equipment and suppresses some of the transients produced by the drive itself.

### Radio Transmitters

Not a common cause of noise, radio frequency transmitters, such as commercial broadcast stations, fixed short-wave stations, and mobile communications equipment (including walkie talkies) create electrical noise. The probability of this noise affecting an adjustable-speed drive increases with the use of open control enclosures, open wiring, and poor grounding.

---

## Electrical Noise Considerations Continued

**Control Enclosures** Motor controls mounted in a grounded enclosure should also be connected to earth ground with a separate conductor to ensure best ground connection. Often grounding the control to the grounded metallic enclosure is not sufficient. Usually painted surfaces and seals prevent solid metallic contact between the control and the panel enclosure. Likewise, conduit should never be used as a ground conductor for motor power wires or signal conductors.

**Special Motor Considerations** Motor frames are also on the required grounding list. As with control enclosures, motors should be grounded directly to the control and plant ground with as short a ground wire as possible. Here's why. Capacitive coupling within the motor windings produces transient voltages between the motor frame and ground. The severity of these voltages increases with the length of the ground wire. Installations with the motor and control mounted on a common frame, and with heavy ground wires less than 10 ft. long, rarely have a problem caused by these motor-generated transient voltages.

## Wiring Practices

The type of wire used and how it is installed for specific applications makes the difference between obtaining reliable operation and creating additional problems.

**Power Wiring** Conductors carrying power to anything (motor, heater, brake coil, or lighting units, for example) should be contained in conductive conduit that is grounded at both ends. These power wires must be routed in conduit separately from signal and control wiring.

**Control-logic Conductors** Typically, operator's controls (push buttons and switches), relay contacts, limit switches, PLC I/O's, operator displays, and relay and contactor coils operate at 115VAC or 24VDC. Although these devices usually operate at low current levels, they contain switching noise caused by contact open/closure and solid-state switch operations. Therefore, these wires should be routed away from sensitive signal wires and contained within conduits or bundled away from open power and signal wires.

**Analog Signal Wires** Analog signals generally originate from speed and torque controls, plus DC tachometers and process controllers. Reliability is often improved by the following noise reduction techniques:

- Use twisted-pair shielded wires with the shield grounded at the drive end only.
- Route analog signal wires away from power or control wires (all other wiring types).
- Cross power and control wires at right angles (90°) to minimize inductive noise coupling.

**Serial Communication Conductors** Standard serial communication cables are usually made with a shield that is connected to the connector shell at both ends. This usually grounds the data source to the grounded drive chassis. If the data source is floating, such a connection offers good data transmission. However, if the data source is grounded, adding a heavy ground wire (#14 or larger) in parallel with the communication cable between the source and the drive chassis usually reduces noise problems.

---

## **Optical Isolation**

Isolating electrical circuits with some form of light transmission reduces the electrical noise that is transmitted from one part of a circuit to another. That is, an electrical signal is converted to a light signal that is transmitted to a light receiver. This converts the light back to an electrical signal that has less noise than the input. Two methods are commonly used; optical couplers and fiber optics.

### **Optical Couplers**

Optical couplers, often referred to as opto couplers use a light transmitter and light receiver in the same unit to transmit data while electrically isolating two circuits. This isolation rejects some noise. The magnitude of noise rejection is usually specified by the "common mode rejection, dv/dt rating". Typically, low cost opto couplers have a common mode rejection of 100 to 500 V/ $\mu$  sec, which is adequate for most control logic signals. High performance opto couplers with common mode ratings up to 5,000 V/ $\mu$  sec are installed for the most severe noise environments.

### **Fiber Optics**

Special plastic fiber strands transmit light over long as well as short distances. Because the fibers are immune to electromagnetic energy, the use of fiber optic bundles eliminate the problem of coupling noise into such circuits. These noise-free fiber optic cables can be run with power or motor conductors because noise cannot be inductively or capacitively coupled into the fiber optic strands.

## **Plant Ground**

Connecting electrical equipment to a good ground is essential for safety and reliable operation. In many cases, what is perceived as a ground isn't.  
Result: equipment malfunctions or electrical shock hazard exists.

It may be necessary to retain the services of an electrical consultant, who is also a licensed professional engineer experienced in grounding practices to make the necessary measurements to establish if the plant ground is really grounded.



## Section 6

# Manual Tuning the Series 17H Control

---

**Manually Tuning the Control** In some applications the drive cannot be accurately auto-tuned. In these cases it is necessary to calculate the values needed to tune the drive and manually enter these calculated parameter values.

**Motor Mag Amps Parameter** This parameter is located in the Level 2, Motor Data Block. This parameter is normally entered using the nameplate data (motor no load amps) or auto-tuned. If no other data is available, set Motor Mag Amps parameter to about 40% of the motor rated current stated on the nameplate.

The following procedure should be used for setting the Motor Mag Amps parameter with the motor coupled to the load:

1. Adjust the Motor Mag Amps Parameter to 40% of the motor nameplate full load current rating.
2. Give the controller a speed command input of 80% of the Base Speed on motor nameplate.
3. Select motor voltage on keypad display by pressing the DISP key until the motor voltage value is displayed.
4. Observe the motor voltage. Ideally, it should read 80% of motor nameplate voltage. By raising the Motor Mag Amps parameter value, the motor voltage will raise proportionally. Continuing to raise the Motor Mag Amps parameter value will eventually saturate the motor voltage. By lowering the Motor Mag Amps parameter value, the motor voltage will lower proportionally.
5. While the motor is running adjust the Motor Mag Amps parameter until the display indicates the proper voltage (80% of motor rated).

**Slip Frequency Parameter** This parameter is located in the Level 1, Vector Control Block. The slip frequency may be calculated from nameplate data or auto tuned.

$$F_{\text{slip}} = \text{Rated Freq} - \left( \frac{(\text{Rated RPM} \times \text{Number of Motor Poles})}{120} \right) \text{ OR}$$

$$F_{\text{slip}} = \text{Rated Freq} - \left( \frac{\text{Base Speed}}{\sqrt{\text{Sync Speed}}} (\text{Rated Freq}) \right)$$

**Current Prop Gain Parameter** This parameter is located in the Level 1, Vector Control Block. The Current Prop Gain parameter is normally auto-tuned when motor inductance is not known. Where auto-tuning can't be used, the proper manual setting for the proportional gain can be calculated by:

$$\text{Current PROP Gain} = \frac{(740 \times L \times \sqrt{A/V})}{VAC}$$

Where:

L = Line to neutral leakage inductance of the motor in mH

VAC = Nominal line volts

A/V = The amps/volt scaling of the current feedback

Motor line to neutral leakage inductance can be obtained either from the motor manufacturer or by measuring the line-to-line inductance and dividing by two.

The A/V scaling for the controller can be found in the diagnostic information located in the DISPLAY MODE.

For most applications setting the Current Prop Gain parameter to a value of 20 will yield adequate performance.

---

## Speed Prop Gain Parameter

The Speed Prop Gain parameter located in the Level 1 Vector Control Block is factory set to 10. This gain may be increased or decreased to suit the application. Increasing the Speed Prop Gain parameter will result in faster response, excessive proportional gain will cause overshoot and ringing. Decreasing the Speed Prop Gain parameter will cause slower response and decrease overshoot and ringing caused by excessive proportional gain.

## Speed Int Gain Parameter

The Speed Int Gain parameter located in the Level 1 Vector Control Block is set to 3 Hz and may be set at any value from zero to 9.99 Hz. See also, PI Controller later in this section.

Setting the Speed Int Gain parameter to 0Hz removes integral compensation that results in a proportional rate loop. This selection is ideal for systems where overshoot must be avoided and substantial stiffness (ability of the controller to maintain commanded speed despite varying torque loads) isn't required.

Increasing values of the Speed Int Gain parameter increases the low frequency gain and stiffness of the controller, an excessive integral gain setting will cause overshoot for transient speed commands and may lead to oscillation. If the Speed Prop Gain parameter and the Speed Int Gain parameter are set too high, an overshoot condition can also occur.

To manually tune the control, the following procedure is used:

1. Set the speed Int Gain parameter = 0 (remove integral gain).
2. Increase the Speed Prop Gain parameter setting until adequate response to step speed commands is attained.
3. Increase the Speed Int Gain parameter setting to increase the stiffness of the drive.

Note: It is convenient to monitor speed step response with a strip chart recorder or storage oscilloscope connected to J1-6 or -7 with Level 1, Output Block Analog Out #1 or #2 set to ABS SPEED, 0 VDC = zero speed. See Section 3 for a discussion of analog outputs.

---

## PI Controller

Both the current and rate control loops are of the Proportional plus Integral type. If "E" is defined to be the error signal,

$$E = \text{Command} - \text{Feedback}$$

then the PI controller operated on "E" as

$$\text{Output} = (K_p * E) + (K_i \int E dt)$$

where  $K_p$  is the proportional gain of the system and  $K_i$  is the integral gain of the system.

The transfer function (output /E) of the controller using 1/s (Laplace Operator) to denote the integral,

$$\text{Output/E} = K_p + K_i / s = K_p (s + K_i/K_p) / s.$$

The second equation shows that the ratio of  $K_i/K_p$  is a frequency in radians/sec. In the Baldor Vector Control, the integral gain has been redefined to be,

$$K_i = (K_i / K_p) / (2\pi) \text{ Hz},$$

and the transfer function is,

$$\text{Output/E} = K_p (s + 2\pi K_i) / s.$$

This sets the integral gain as a frequency in Hz. As a rule of thumb, set this frequency about 1/10 of the bandwidth of the control loop.

The proportional gain sets the open loop gain of the system, the bandwidth (speed of response) of the system. If the system is excessively noisy, it is most likely due to the proportional gain being set too high.



## Section 7

# Specifications, Ratings & Dimensions

---

### Specifications:

Horsepower	1-50 HP @ 230VAC 1-450 HP @ 460VAC 1-150 HP @ 575VAC
Input Frequency	50/60 HZ $\pm$ 5%
Output Voltage	0 to Maximum Input VAC
Output Current	See Ratings Table
Service Factor	1.0
Duty	Continuous
Overload Capacity	Constant Torque Mode: 170-200% for 3 secs 150% for 60 secs Variable Torque Mode: 115% for 60 secs

### Operating Conditions:

Voltage Range:	230 VAC Models 460 VAC Models 575 VAC Models	180-264 VAC 3 $\emptyset$ 60 Hz / 180-230 VAC 3 $\emptyset$ 50 Hz 340-528 VAC 3 $\emptyset$ 60 Hz / 340-460 VAC 3 $\emptyset$ 50 Hz 495-660 VAC 3 $\emptyset$ 60 Hz
Input Line Impedance:		3% Minimum Required
Ambient Operating Temperature:		0 to +40 °C Derate Output 2% per °C over 40 °C to 55 °C Max
Rated Storage Temperature:		- 30 °C to +65 °C
Enclosure:		NEMA 1: E and EO (suffix) Models NEMA 4X indoor: W (suffix) Models
Humidity:		NEMA 1: 10 to 90% RH Non-Condensing NEMA 4X indoor: To 100% RH
Altitude:		Sea level to 3300 Feet (1000 Meters) Derate 2% per 1000 Feet (303 Meters) above 3300 Feet

---

## Keypad Display:

Display	Backlit LCD Alphanumeric 2 Lines x 16 Characters
Keys	12 key membrane with tactile response
Functions	Output status monitoring Digital speed control Parameter setting and display Diagnostic and Fault log display Motor run and jog Local/Remote toggle
LED Indicators	Forward run command Reverse run command Stop command Jog active
Remote Mount	100 feet (30.3m) max from control

## Control Specifications:

Control Method	PWM
Velocity Loop Bandwidth	Adjustable to 3 Hz
Current Loop Bandwidth	Adjustable to 1200 Hz
Maximum Output Frequency	1000 Hz
Quiet Frequency Version	Full rating 1-8 KHz PWM frequency, Adjustable to 16 KHz with linear derating (between 8 - 16KHz) to 30% at 16 KHz
Standard Frequency Version	Full rating 1-2.5 KHz PWM frequency, Adjustable to 5 KHz with linear derating (between 2.5 - 5KHz) to 10% at 5 KHz
Selectable Operating Modes	Keypad Standard 3 Wire Control 15 Speed 2 Wire Control Fan Pump 2 Wire Control Fan Pump 3 Wire Control Bipolar Speed Serial Process

## Differential Analog Input:

Common Mode Rejection	40 db
Full Scale Range	$\pm 5\text{VDC}$ , $\pm 10\text{VDC}$ , 4-20 mA
Auto-selectable Resolutions	9 bits + sign

---

### Other Analog Input:

Full Scale Range	0 - 10 VDC
Resolution	9 bits + sign

### Analog Outputs:

Analog Outputs	2 Assignable
Full Scale Range	0 - 5 VDC
Source Current	1 mA maximum
Resolution	8 bits

### Digital Inputs:

Opto-isolated Logic Inputs	9 Assignable
Rated Voltage	10 - 30 VDC (closed contacts std)
Input Impedance	6.8 K Ohms
Leakage Current	10 $\mu$ A maximum

### Digital Outputs:

Opto-isolated Logic Outputs	4 Assignable
ON Current Sink	50 mA Max
ON Voltage Drop	2 VDC Max
Maximum Voltage	30 VDC

### Diagnostic Indications:

No Faults	No EXB Installed	
Current Sense Fault	Overload - 1 minute	Logic Supply Fault
Ground Fault	Overload - 3 seconds	Invalid Base ID
Torque Proving FLT	Overcurrent FLT	Inverter Base ID
Line Power Loss	DC Bus High	New Base ID
Microprocessor Reset	DC Bus Low	PWR Base FLT
Coprocessor Fault	Lost User Data	Regen R PWR FLT
Over temperature (Motor or Control)	Low INIT Bus V	Line Regen FLT
Over speed	Memory Error	User FLT Text

Note: All specifications are subject to change without notice.

## Ratings Series 17H Stock Products

CATALOG NO.	INPUT VOLT	SIZE	STANDARD 2.5 kHz PWM								QUIET 8.0 kHz PWM							
			CONSTANT TORQUE				VARIABLE TORQUE				CONSTANT TORQUE				VARIABLE TORQUE			
			HP	KW	IC	IP	HP	KW	IC	IP	HP	KW	IC	IP	HP	KW	IC	IP
ZD17H201-E, -W	230	A	1	0.75	4.0	8.0	2	1.5	6.8	7.8	0.75	0.56	3.0	6.0	1	0.75	3.6	4.2
ZD17H202-E, -W	230	A	2	1.5	7.0	14	3	2.2	9.6	11	1	0.75	4.0	8.0	2	1.5	6.8	7.8
ZD17H203-E, -W	230	A	3	2.2	10	20	5	3.7	16	19	2	1.5	7.0	14	3	2.2	9.6	11
ZD17H205-E	230	A	5	3.7	16	32	7.5	5.5	22	25	3	2.2	10	20	5	3.7	16	19
ZD17H205-W	230	B	5	3.7	16	32	7.5	5.5	22	25	3	2.2	10	20	5	3.7	16	19
ZD17H207-E, -W	230	B	7.5	5.5	22	44	10	7.4	28	32	5	3.7	16	32	7.5	5.5	22	25
ZD17H210-E	230	B	10	7.4	28	56	15	11.1	42	48	7.5	5.5	22	44	10	7.4	28	32
ZD17H210-W	230	B	10	7.4	28	56	15	11.1	42	48	7.5	5.5	22	44	10	7.4	28	32
ZD17H215-E	230	B	15	11.1	42	84	15	11.1	42	48	10	7.4	28	56	15	11.1	42	48
ZD17H215-W	230	B	15	11.1	42	84	15	11.1	42	48	10	7.4	28	56	15	11.1	42	48
ZD17H215-EO	230	C	15	11.1	42	72	20	14.9	54	62	10	7.4	30	61	15	11.1	42	48
ZD17H220-EO	230	C	20	14.9	55	100	25	18.6	68	78	15	11.1	42	92	20	14.9	54	62
ZD17H225-EO	230	C	25	18.6	68	116	30	22.3	80	92	20	14.9	54	92	25	18.6	68	78
ZD17H230-EO	230	C	30	22.3	80	140	40	29.8	104	120	25	18.6	70	122	30	22.3	80	92
ZD17H230V-EO	230	C	30	22.3	80	200	40	29.8	104	120	30	22.3	80	183	40	29.8	104	120
ZD17H240-MO	230	D	40	29.8	105	200	50	37.2	130	150	30	22.3	80	160	40	29.8	104	120
ZD17H250-MO	230	D	50	37.2	130	225	50	37.2	130	150	40	29.8	105	183	50	37.2	130	150
ZD17H250V-MO	230	D	50	37.2	130	260	50	37.2	130	150	50	37.2	130	244	50	37.2	130	150
ZD17H401-E, -W	460	A	1	0.75	2.0	4.0	2	1.5	4.0	5.0	0.75	0.56	1.5	3.0	1	0.75	2.0	3.0
ZD17H402-E, -W	460	A	2	1.5	4.0	8.0	3	2.2	5.0	6.0	1	0.75	2.0	4.0	2	1.5	4.0	5.0
ZD17H403-E, -W	460	A	3	2.2	5.0	10	5	3.7	8.0	10	2	1.5	4.0	8.0	3	2.2	5.0	6.0
ZD17H405-E, -W	460	A	5	3.7	8.0	16	7.5	5.5	11	13	3	2.2	5.0	10	5	3.7	8.0	10
ZD17H407-E	460	A	7.5	5.5	11	22	10	7.4	14	17	5	3.7	8.0	16	7.5	5.5	11	13
ZD17H407-W	460	B	7.5	5.5	11	22	10	7.4	14	17	5	3.7	8.0	16	7.5	5.5	11	13
ZD17H410-E, -W	460	B	10	7.4	14	28	15	11.1	21	25	7.5	5.5	11	22	10	7.4	14	17
ZD17H415-E	460	B	15	11.1	21	42	20	14.9	27	31	10	7.4	15	30	15	11.1	21	25
ZD17H415-W	460	B	15	11.1	21	42	20	14.9	27	31	10	7.4	15	30	15	11.1	21	25
ZD17H415-EO	460	C	15	11.1	21	36	20	14.9	27	31	10	7.4	15	30	15	11.1	21	24
ZD17H420-EO	460	C	20	14.9	27	54	25	18.6	34	39	15	11.1	21	46	20	14.9	27	31
ZD17H425-EO	460	C	25	18.6	34	58	30	22.3	40	46	20	14.9	27	46	25	18.6	34	39
ZD17H430-EO	460	C	30	22.3	40	70	40	29.8	52	60	25	18.6	35	61	30	22.3	40	46
ZD17H430V-EO	460	C	30	22.3	40	100	40	29.8	52	60	30	22.3	40	92	30	22.3	40	46
ZD17H440-EO	460	D	40	29.8	55	100	50	37.2	65	75	30	22.3	40	80	40	29.8	52	60
ZD17H450-EO	460	D	50	37.2	65	115	60	44.8	80	92	40	29.8	55	92	50	37.2	65	75
ZD17H460-EO	460	D	60	44.7	80	140	75	56	100	115	50	37.2	65	122	60	44.7	80	92
ZD17H460V-EO	460	D	60	44.7	80	200	75	56	100	115	60	44.7	80	183	60	44.7	80	92
ZD17H475-EO	460	E	75	56	100	200	100	75	125	144	60	44.7	80	160	75	56	100	115
ZD17H4100-EO	460	E	100	75	125	220	125	93	160	184	75	56	100	183	100	75	125	144
ZD17H4150V-EO	460	E	150	112	180	300	150	112	180	207	100	75	125	240	125	93	160	184
ZD17H4150-EO	460	F	150	112	190	380	200	149	240	276	125	93	150	260	150	112	170	200
ZD17H4200-EO	460	F	200	149	250	500	250	186.5	310	360	150	112	190	380	175	131	210	240
ZD17H4250-EO	460	F	250	187	310	620	300	224	370	430	200	149	250	500	250	187	310	360
ZD17H4300-EO	460	G	300	224	370	630	350	261	420	490								
ZD17H4350-EO	460	G	350	261	420	720	400	298	480	560								
ZD17H4400-EO	460	G	400	298	480	820	450	336	540	620								
ZD17H4450-EO	460	G	450	336	540	920	500	373	590	680								
ZD17H501-E	575	A	1	0.75	1.5	3.0	2.0	1.5	3.0	4.0	0.75	0.56	1.1	2.2	1	0.75	1.5	1.7
ZD17H502-E	575	A	2	1.5	3.0	6.0	3	2.2	4.0	5.0	1	0.75	1.5	3.0	2	1.5	3.0	4.0
ZD17H503-E	575	A	3	2.2	4.0	8.0	5	3.7	7.0	8.0	2	1.5	3.0	6.0	3	2.2	4.0	5.0
ZD17H505-E	575	A	5	3.7	7.0	14	7.5	5.5	9.0	11	3	2.2	4.0	8.0	5	3.7	7.0	8.0
ZD17H507-E	575	A	7.5	5.5	9.0	18	10	7.4	11	13	5	3.7	7.0	14	7.5	5.5	9	11
ZD17H510-E	575	B	10	7.4	11	22	15	11.1	17	20	7.5	5.5	9	18	10	7.4	11	13
ZD17H515-EO	575	B	15	11.1	17	34	20	14.9	22	26	10	7.4	11	22	15	11.1	17	20
ZD17H520-EO	575	C	20	14.9	22	44	25	18.6	27	31	15	11.1	17	34	20	14.9	22	25
ZD17H525-EO	575	C	25	18.6	27	46	30	22.3	32	37	20	14.9	22	38	25	18.6	27	31
ZD17H530-EO	575	C	30	22.3	32	56	40	29.8	41	47	25	18.6	27	47	30	22.3	32	37
ZD17H540-EO	575	D	40	29.8	41	75	50	37.2	52	60	30	22.3	32	58	40	29.8	41	47
ZD17H550-EO	575	D	50	37.2	52	92	60	44.7	62	71	40	29.8	41	73	50	37.2	52	60
ZD17H560-EO	575	D	60	44.7	62	109	60	44.7	62	71	50	37.2	52	91	60	44.7	62	71
ZD17H575-EO	575	E	75	56	77	155	100	75	100	115								
ZD17H5100-EO	575	E	100	75	100	200	125	93	125	145								
ZD17H5150V-EO	575	E	150	112	145	260	150	112	145	166								

Note: -E, -EO= NEMA 1 Enclosure  
 -W= NEMA 4X Indoor Enclosure  
 -MO= Protected Chassis (not NEMA1)

## Ratings Series 17H Custom High Peak Current Control

CATALOG NO.	INPUT VOLT	SIZE	STANDARD 2.5 kHz PWM								QUIET 8.0 kHz PWM							
			CONSTANT TORQUE				VARIABLE TORQUE				CONSTANT TORQUE				VARIABLE TORQUE			
			HP	KW	IC	IP	HP	KW	IC	IP	HP	KW	IC	IP	HP	KW	IC	IP
ZD17H210L-ER	230	C	10	7.4	32	72	15	11.1	42	48	7.5	5.5	24	61	15	11.1	42	48
ZD17H215L-ER	230	C	15	11.1	46	108	20	14.9	54	62	10	7.4	32	92	20	14.9	54	62
ZD17H220L-ER	230	C	20	14.9	60	140	20	14.9	54	62	15	11.1	48	122	20	14.9	54	62
ZD17H225L-ER	230	C	25	18.6	75	190	25	18.6	68	78	20	14.9	60	170	20	14.9	54	62
ZD17H230L-ER	230	C	30	22.3	90	210	40	29.8	104	120	25	18.6	75	190	30	22.3	80	92
ZD17H240L-MR	230	D	40	29.8	115	270	40	29.8	115	133	30	22.3	90	240	40	29.8	104	120
ZD17H410L-ER	460	C	10	7.4	16	36	15	11.1	21	24	7.5	5.5	12	30	15	11.1	21	24
ZD17H415L-ER	460	C	15	11.1	24	54	20	14.9	27	31	10	7.4	16	46	20	14.9	27	31
ZD17H420L-ER	460	C	20	14.9	30	70	20	14.9	27	31	15	11.1	24	61	20	14.9	27	31
ZD17H425L-ER	460	C	25	18.6	38	90	25	18.6	34	38	20	14.9	30	90	20	14.9	27	31
ZD17H430L-ER	460	C	30	22.3	45	108	40	29.8	52	60	25	18.6	37	95	30	22.3	40	46
ZD17H440L-ER	460	C	40	29.8	60	140	40	29.8	60	69	30	22.3	45	122	30	22.3	40	46
ZD17H450L-ER	460	D	50	37.2	75	190	60	44.7	80	92	40	29.8	60	170	50	37.2	65	75
ZD17H460L-ER	460	D	60	44.7	90	215	75	56	100	115	50	37.2	75	190	60	44.7	80	92
ZD17H475L-EO	460	E	75	56	110	270	100	74.6	125	144	60	44.7	90	240	75	56	100	115

## Ratings Series 17H Custom Vector Control w/Internal DB Transistor

CATALOG NO.	INPUT VOLT	SIZE	STANDARD 2.5 kHz PWM								QUIET 8.0 kHz PWM							
			CONSTANT TORQUE				VARIABLE TORQUE				CONSTANT TORQUE				VARIABLE TORQUE			
			HP	KW	IC	IP	HP	KW	IC	IP	HP	KW	IC	IP	HP	KW	IC	IP
ZD17H215-ER	230	C	15	11.1	42	72	20	14.9	54	62	10	7.4	30	61	15	11.1	42	48
ZD17H220-ER	230	C	20	14.9	55	100	25	18.7	68	78	15	11.1	42	92	20	14.9	54	62
ZD17H225-ER	230	C	25	18.6	68	116	30	22.3	80	92	20	14.9	54	92	25	18.6	68	78
ZD17H230-ER	230	C	30	22.3	80	140	40	29.8	104	120	25	18.6	70	122	30	22.3	80	92
ZD17H230V-ER	230	C	30	22.3	80	200	40	29.8	104	120	30	22.3	80	183	40	29.8	104	120
ZD17H240-MR	230	D	40	29.8	105	200	50	37.2	130	150	40	29.8	105	183	50	37.2	130	150
ZD17H250V-MR	230	D	50	37.2	130	260	50	37.2	130	150	50	37.2	130	244	50	37.2	130	150
ZD17H250-MR	230	D	50	37.2	130	225	50	37.2	130	150	40	29.8	105	183	50	37.2	130	150
ZD17H415-ER	460	C	15	11.1	21	36	20	14.9	27	31	10	7.4	15	30	15	11.1	21	24
ZD17H420-ER	460	C	20	14.9	27	54	25	18.7	34	39	15	11.1	21	46	20	14.9	27	31
ZD17H425-ER	460	C	25	18.6	34	58	30	22.3	40	46	20	14.9	27	46	25	18.6	34	39
ZD17H430-ER	460	C	30	22.3	40	70	40	29.8	52	60	25	18.6	35	61	30	22.3	40	46
ZD17H430V-ER	460	C	30	22.3	40	100	40	29.8	52	60	30	22.3	40	92	30	22.3	40	46
ZD17H440-ER	460	D	40	29.8	55	100	50	37.2	65	75	30	22.3	40	80	40	29.8	52	60
ZD17H450-ER	460	D	50	37.2	65	115	60	44.8	80	92	40	29.8	55	92	50	37.2	65	75
ZD17H460-ER	460	D	60	44.7	80	140	75	56	100	115	50	37.2	65	122	60	44.7	80	92
ZD17H460V-ER	460	D	60	44.7	80	200	75	56	100	115	60	44.7	80	183	60	44.7	80	92
ZD17H515-ER	575	B	15	11.1	17	29	20	14.9	22	26	10	7.5	11	19	15	11.1	17	20
ZD17H520-ER	575	C	20	14.9	22	44	25	18.7	27	31	15	11.1	17	34	20	14.9	22	25
ZD17H525-ER	575	C	25	18.7	27	46	30	22.3	32	37	20	14.9	22	38	25	18.6	27	31
ZD17H530-ER	575	C	30	22.3	32	56	40	29.8	41	47	25	18.6	27	47	30	22.3	32	37
ZD17H540-ER	575	D	40	29.8	41	75	50	37.2	52	60	30	22.3	32	58	40	29.8	41	47
ZD17H550-ER	575	D	50	37.2	52	92	60	44.7	62	71	40	29.8	41	73	50	37.2	52	60
ZD17H560-ER	575	D	60	44.7	62	109	60	44.7	62	71	50	37.2	52	91	60	44.7	62	71

## Terminal Tightening Torque Specifications

Table 7-4 Tightening Torque Specifications

230 VAC Catalog No.	Tightening Torque									
	Power TB1		Ground		Control J1		B+/R1; B+; B-; or R2		D1/D2	
	Lb-in	Nm	Lb-in	Nm	Lb-in	Nm	Lb-in	Nm	Lb-in	Nm
ZD17H201-E or W	8	0.9	15	1.7	7	0.8	8	0.9	-	-
ZD17H202-E or W	8	0.9	15	1.7	7	0.8	8	0.9	-	-
ZD17H203-E or W	8	0.9	15	1.7	7	0.8	8	0.9	-	-
ZD17H205-E	8	0.9	15	1.7	7	0.8	8	0.9	-	-
ZD17H205-W	20	2.5	15	1.7	7	0.8	20	2.5	-	-
ZD17H207-E or W	20	2.5	15	1.7	7	0.8	20	2.5	-	-
ZD17H210-E	20	2.5	15	1.7	7	0.8	20	2.5	-	-
ZD17H210-ER	35	4	50	5.6	7	0.8	35	4	-	-
ZD17H210L-ER	35	4	50	5.6	7	0.8	35	4	-	-
ZD17H215-E	20	2.5	15	1.7	7	0.8	20	2.5	-	-
ZD17H215V-EO	35	4	50	5.6	7	0.8	35	4	3.5	0.4
ZD17H215V-ER	35	4	50	5.6	7	0.8	35	4	-	-
ZD17H215-EO	35	4	50	5.6	7	0.8	35	4	3.5	0.4
ZD17H215-ER	35	4	50	5.6	7	0.8	35	4	-	-
ZD17H215L-ER	35	4	50	5.6	7	0.8	35	4	-	-
ZD17H220-EO	35	4	22-26	2.5-3	7	0.8	35	4	3.5	0.4
ZD17H220-ER	35	4	22-26	2.5-3	7	0.8	35	4	-	-
ZD17H220L-ER	35	4	22-26	2.5-3	7	0.8	35	4	-	-
ZD17H225V-EO	35	4	50	5.6	7	0.8	35	4	3.5	0.4
ZD17H225V-ER	35	4	50	5.6	7	0.8	35	4	-	-
ZD17H225-EO	22-26	2.5-3	22-26	2.5-3	7	0.8	22-26	2.5-3	3.5	0.4
ZD17H225-ER	22-26	2.5-3	22-26	2.5-3	7	0.8	22-26	2.5-3	-	-
ZD17H225L-ER	35	4	22-26	2.5-3	7	0.8	35	4	-	-
ZD17H230-EO	22-26	2.5-3	22-26	2.5-3	7	0.8	22-26	2.5-3	3.5	0.4
ZD17H230V-EO	22-26	2.5-3	22-26	2.5-3	7	0.8	22-26	2.5-3	3.5	0.4
ZD17H230V-ER	35	4	22-26	2.5-3	7	0.8	35	4	-	-
ZD17H230L-ER	22-26	2.5-3	22-26	2.5-3	7	0.8	22-26	2.5-3	-	-
ZD17H240-MO	140	15.8	50	5.6	7	0.8	140	15.8	3.5	0.4
ZD17H240-MR	140	15.8	50	5.6	7	0.8	140	15.8	-	-
ZD17H240L-MR	140	15.8	50	5.6	7	0.8	140	15.8	-	-
ZD17H250V-MO	140	15.8	50	5.6	7	0.8	140	15.8	3.5	0.4
ZD17H250V-MR	140	15.8	50	5.6	7	0.8	140	15.8	-	-
ZD17H250-MO	140	15.8	22-26	2.5-3	7	0.8	140	15.8	3.5	0.4
ZD17H250-MR	140	15.8	22-26	2.5-3	7	0.8	140	15.8	-	-

**Table 7-4 Tightening Torque Specifications** Continued

460 VAC Catalog No.	Tightening Torque									
	Power TB1		Ground		Control J1		B+/R1; B+; B-; or R2		D1/D2	
	Lb-in	Nm	Lb-in	Nm	Lb-in	Nm	Lb-in	Nm	Lb-in	Nm
ZD17H401-E or W	8	0.9	15	1.7	7	0.8	8	0.9	-	-
ZD17H402-E or W	8	0.9	15	1.7	7	0.8	8	0.9	-	-
ZD17H403 -E or W	8	0.9	15	1.7	7	0.8	8	0.9	-	-
ZD17H405-E	8	0.9	15	1.7	7	0.8	8	0.9	-	-
ZD17H405-W	20	2.5	20	2.5	7	0.8	20	2.5	-	-
ZD17H407-E or W	20	2.5	20	2.5	7	0.8	20	2.5	-	-
ZD17H410-E	20	2.5	20	2.5	7	0.8	20	2.5	-	-
ZD17H410-ER	35	4	50	5.6	7	0.8	35	4	-	-
ZD17H415-E	35	4	50	5.6	7	0.8	35	4	-	-
ZD17H415V-EO	35	4	20	2.5	7	0.8	35	4	3.5	0.4
ZD17H415-EO	35	4	20	2.5	7	0.8	35	4	3.5	0.4
ZD17H415-ER	35	4	50	5.6	7	0.8	35	4	-	-
ZD17H415L-ER	35	4	50	5.6	7	0.8	35	4	-	-
ZD17H420-EO	35	4	50	5.6	7	0.8	35	4	3.5	0.4
ZD17H420-ER	35	4	50	5.6	7	0.8	35	4	-	-
ZD17H420L-ER	35	4	50	5.6	7	0.8	35	4	-	-
ZD17H425V-EO	35	4	50	5.6	7	0.8	35	4	3.5	0.4
ZD17H425V-ER	35	4	50	5.6	7	0.8	35	4	-	-
ZD17H425-EO	35	4	50	5.6	7	0.8	35	4	3.5	0.4
ZD17H425-ER	35	4	50	5.6	7	0.8	35	4	-	-
ZD17H425L-ER	35	4	50	5.6	7	0.8	35	4	-	-
ZD17H430V-EO	35	4	50	5.6	7	0.8	35	4	3.5	0.4
ZD17H430V-ER	35	4	50	5.6	7	0.8	35	4	-	-
ZD17H430-EO	35	4	50	5.6	7	0.8	35	4	3.5	0.4
ZD17H430L-ER	35	4	50	5.6	7	0.8	35	4	-	-
ZD17H440-EO	22-26	2.5-3	22-26	2.5-3	7	0.8	22-26	2.5-3	3.5	0.4
ZD17H440-ER	22-26	2.5-3	22-26	2.5-3	7	0.8	22-26	2.5-3	-	-
ZD17H440L-ER	35	4	50	5.6	7	0.8	35	4	-	-
ZD17H450-EO	22-26	2.5-3	22-26	2.5-3	7	0.8	22-26	2.5-3	3.5	0.4
ZD17H450-ER	22-26	2.5-3	22-26	2.5-3	7	0.8	22-26	2.5-3	-	-
ZD17H450L-ER	22-26	2.5-3	22-26	2.5-3	7	0.8	22-26	2.5-3	-	-
ZD17H460V-EO	22-26	2.5-3	22-26	2.5-3	7	0.8	22-26	2.5-3	3.5	0.4
ZD17H460V-ER	22-26	2.5-3	22-26	2.5-3	7	0.8	22-26	2.5-3	-	-
ZD17H460-EO	22-26	2.5-3	22-26	2.5-3	7	0.8	22-26	2.5-3	3.5	0.4
ZD17H460-ER	22-26	2.5-3	22-26	2.5-3	7	0.8	22-26	2.5-3	-	-
ZD17H460L-ER	22-26	2.5-3	22-26	2.5-3	7	0.8	22-26	2.5-3	-	-
ZD17H475-EO	140	15.8	50	5.6	7	0.8	140	15.8	3.5	0.4
ZD17H475L-EO	75	8.5	50	5.6	7	0.8	75	8.5	3.5	0.4

**Table 7-4 Tightening Torque Specifications** Continued


460 VAC Catalog No.  Continued	Tightening Torque									
	Power TB1		Ground		Control J1		B+/R1; B+; B-; or R2		D1/D2	
	Lb-in	Nm	Lb-in	Nm	Lb-in	Nm	Lb-in	Nm	Lb-in	Nm
ZD17H4100-EO	75	8.5	50	5.6	7	0.8	75	8.5	3.5	0.4
ZD17H4150V-EO	75	8.5	50	5.6	7	0.8	75	8.5	3.5	0.4
ZD17H4150-EO	275	31	50	5.6	7	0.8	275	31	3.5	0.4
ZD17H4200-EO	275	31	50	5.6	7	0.8	275	31	3.5	0.4
ZD17H4250-EO	375	42	375	42	7	0.8	375	42	3.5	0.4
ZD17H4300-EO	375	42	375	42	7	0.8	375	42	3.5	0.4
ZD17H4350-EO	375	42	375	42	7	0.8	375	42	3.5	0.4
ZD17H4400-EO	375	42	375	42	7	0.8	375	42	3.5	0.4
ZD17H4400-EO	375	42	375	42	7	0.8	375	42	3.5	0.4
ZD17H4450-EO	375	42	375	42	7	0.8	375	42	3.5	0.4

**Table 7-4 Tightening Torque Specifications** Continued

575 VAC Catalog No.	Tightening Torque									
	Power TB1		Ground		Control J1		B+/R1; B+; B-; or R2		D1/D2	
	Lb-in	Nm	Lb-in	Nm	Lb-in	Nm	Lb-in	Nm	Lb-in	Nm
ZD17H501-E	8	0.9	15	1.7	7	0.8	8	0.9	-	-
ZD17H502-E	8	0.9	15	1.7	7	0.8	8	0.9	-	-
ZD17H503-E	8	0.9	15	1.7	7	0.8	8	0.9	-	-
ZD17H505-E	8	0.9	15	1.7	7	0.8	8	0.9	-	-
ZD17H507-E	20	2.5	20	2.5	7	0.8	20	2.5	-	-
ZD17H510-E	20	2.5	20	2.5	7	0.8	20	2.5	-	-
ZD17H515-E	20	2.5	20	2.5	7	0.8	20	2.5	-	-
ZD17H515-EO	35	4	20	2.5	7	0.8	35	4	3.5	0.4
ZD17H515-ER	35	4	20	2.5	7	0.8	35	4	-	-
ZD17H520-EO	35	4	20	2.5	7	0.8	35	4	3.5	0.4
ZD17H520-EO	35	4	50	5.6	7	0.8	35	4	3.5	0.4
ZD17H525-EO	35	4	50	5.6	7	0.8	35	4	3.5	0.4
ZD17H525-ER	35	4	50	5.6	7	0.8	35	4	-	-
ZD17H530-EO	35	4	50	5.6	7	0.8	35	4	3.5	0.4
ZD17H530-ER	35	4	50	5.6	7	0.8	35	4	-	-
ZD17H540-EO	35	4	50	5.6	7	0.8	35	4	3.5	0.4
ZD17H540-ER	35	4	50	5.6	7	0.8	35	4	-	-
ZD17H550-EO	35	4	50	5.6	7	0.8	35	4	3.5	0.4
ZD17H550-ER	35	4	50	5.6	7	0.8	35	4	-	-
ZD17H560-EO	35	4	50	5.6	7	0.8	35	4	3.5	0.4
ZD17H560-ER	35	4	50	5.6	7	0.8	35	4	-	-
ZD17H575-EO	20 - 30	2.5 - 3.5	50	5.6	7	0.8	20 - 30	2.5 - 3.5	3.5	0.4
ZD17H5100-EO	20 - 30	2.5 - 3.5	50	5.6	7	0.8	20 - 30	2.5 - 3.5	3.5	0.4
ZD17H5150V-EO	35 - 50	4 - 5.7	50	5.6	7	0.8	35 - 50	4 - 5.7	3.5	0.4


## Dimensions

### Size A Control



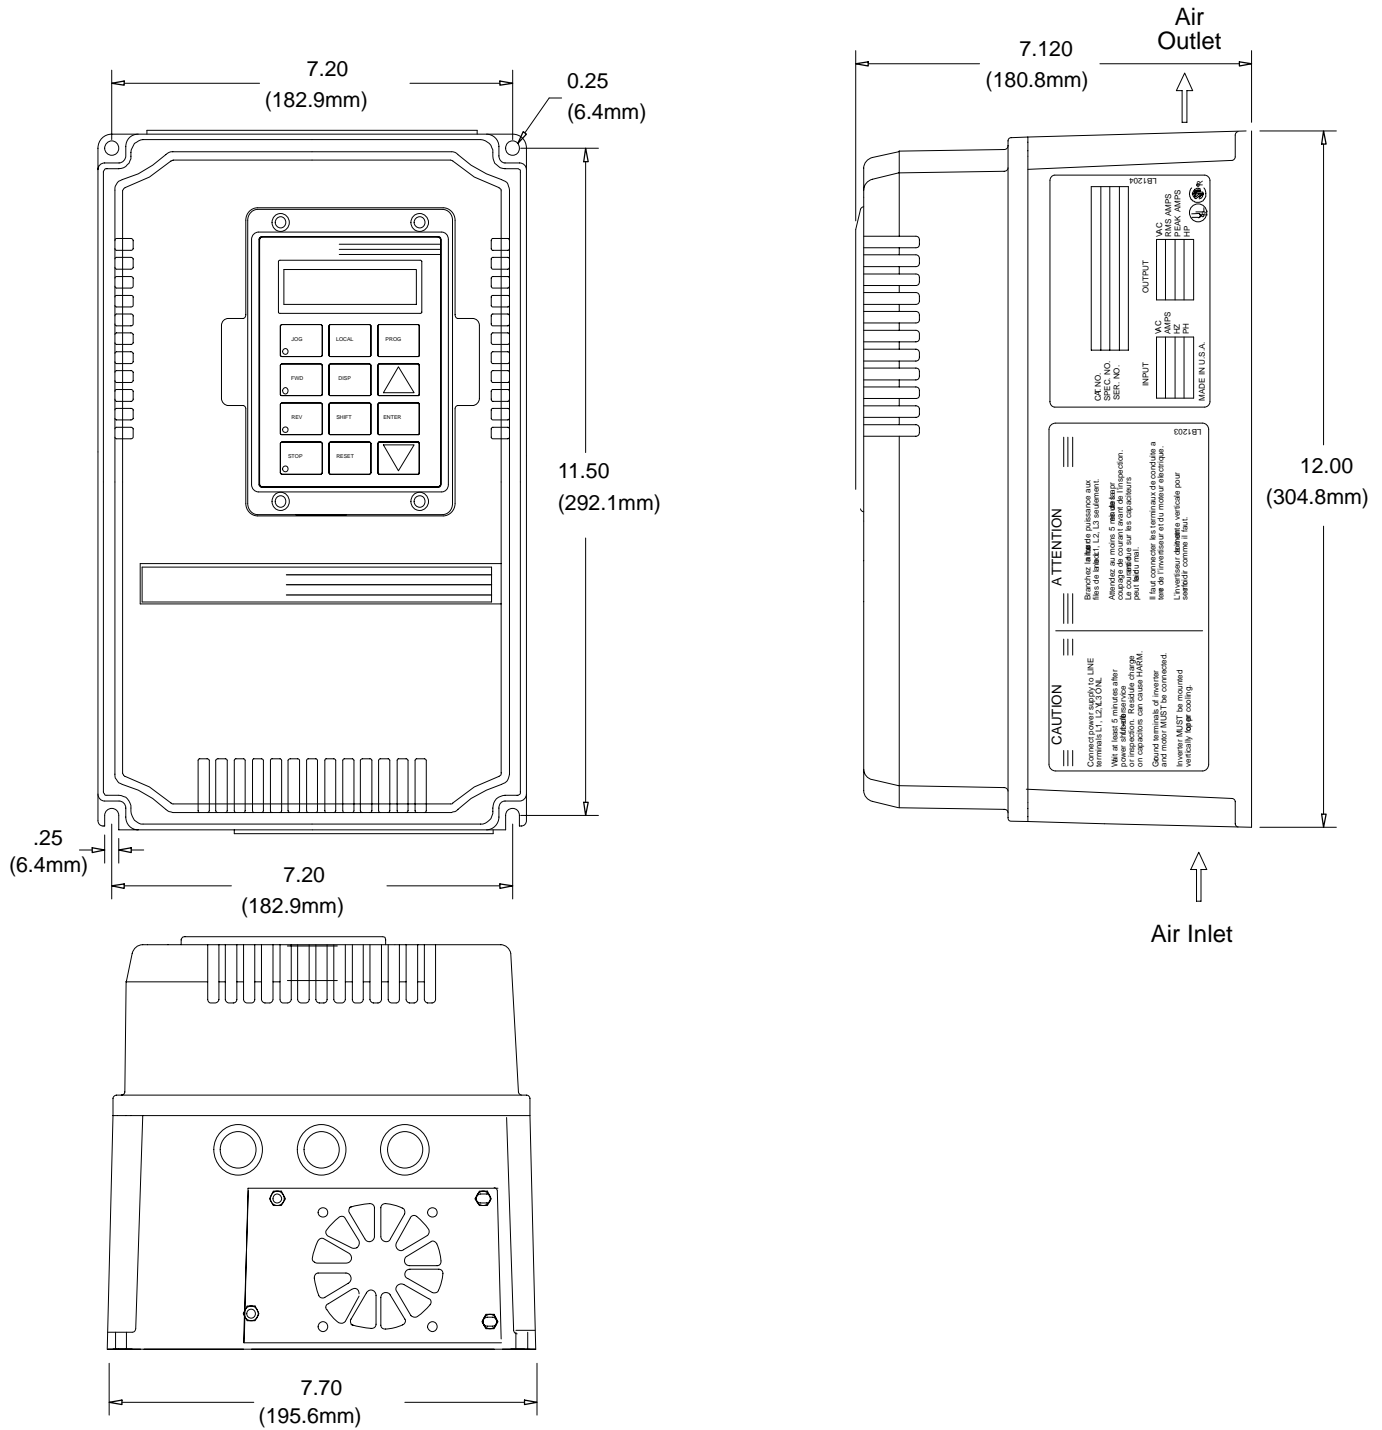


---

**Size A Control – Through-Wall Mounting** KT0000A01

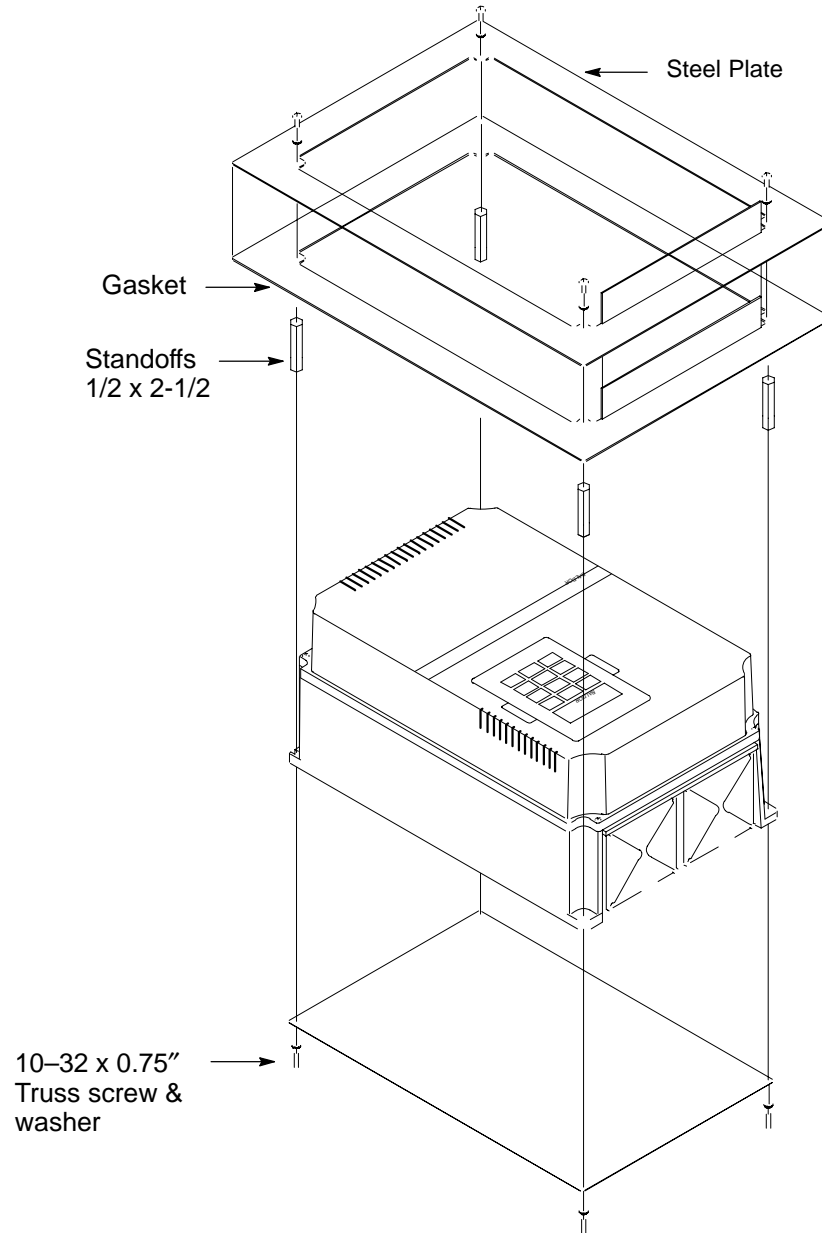


**Dimensions Continued**  
**Size B Control**

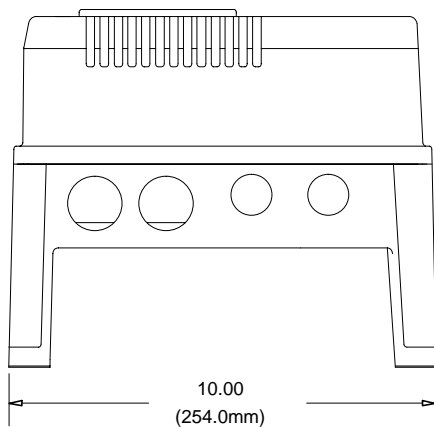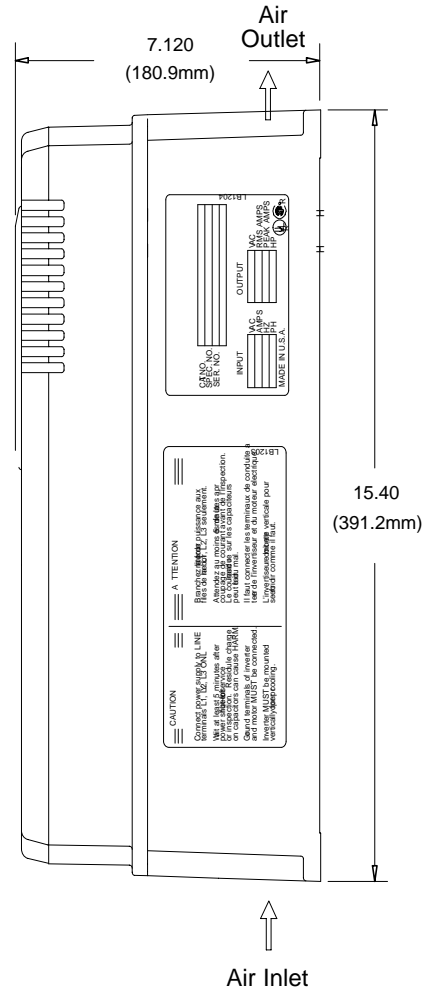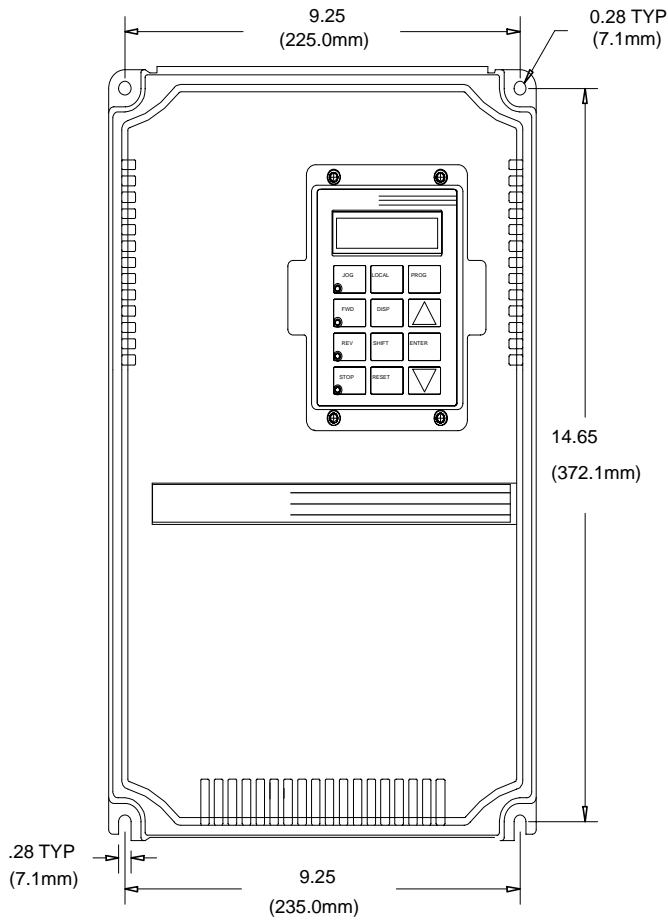


---





**Size B Control – Through-Wall Mounting** KT0000A00

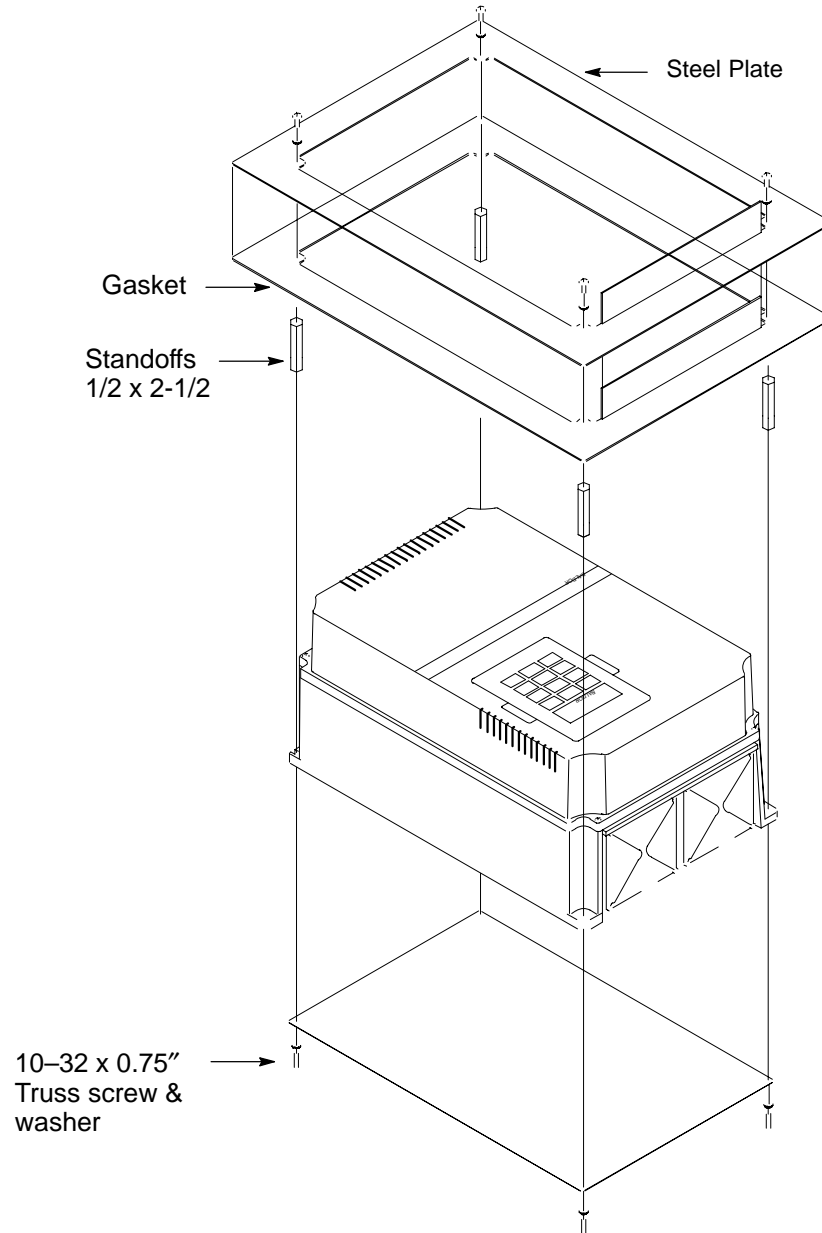


**Dimensions Continued**  
**Size C Control**

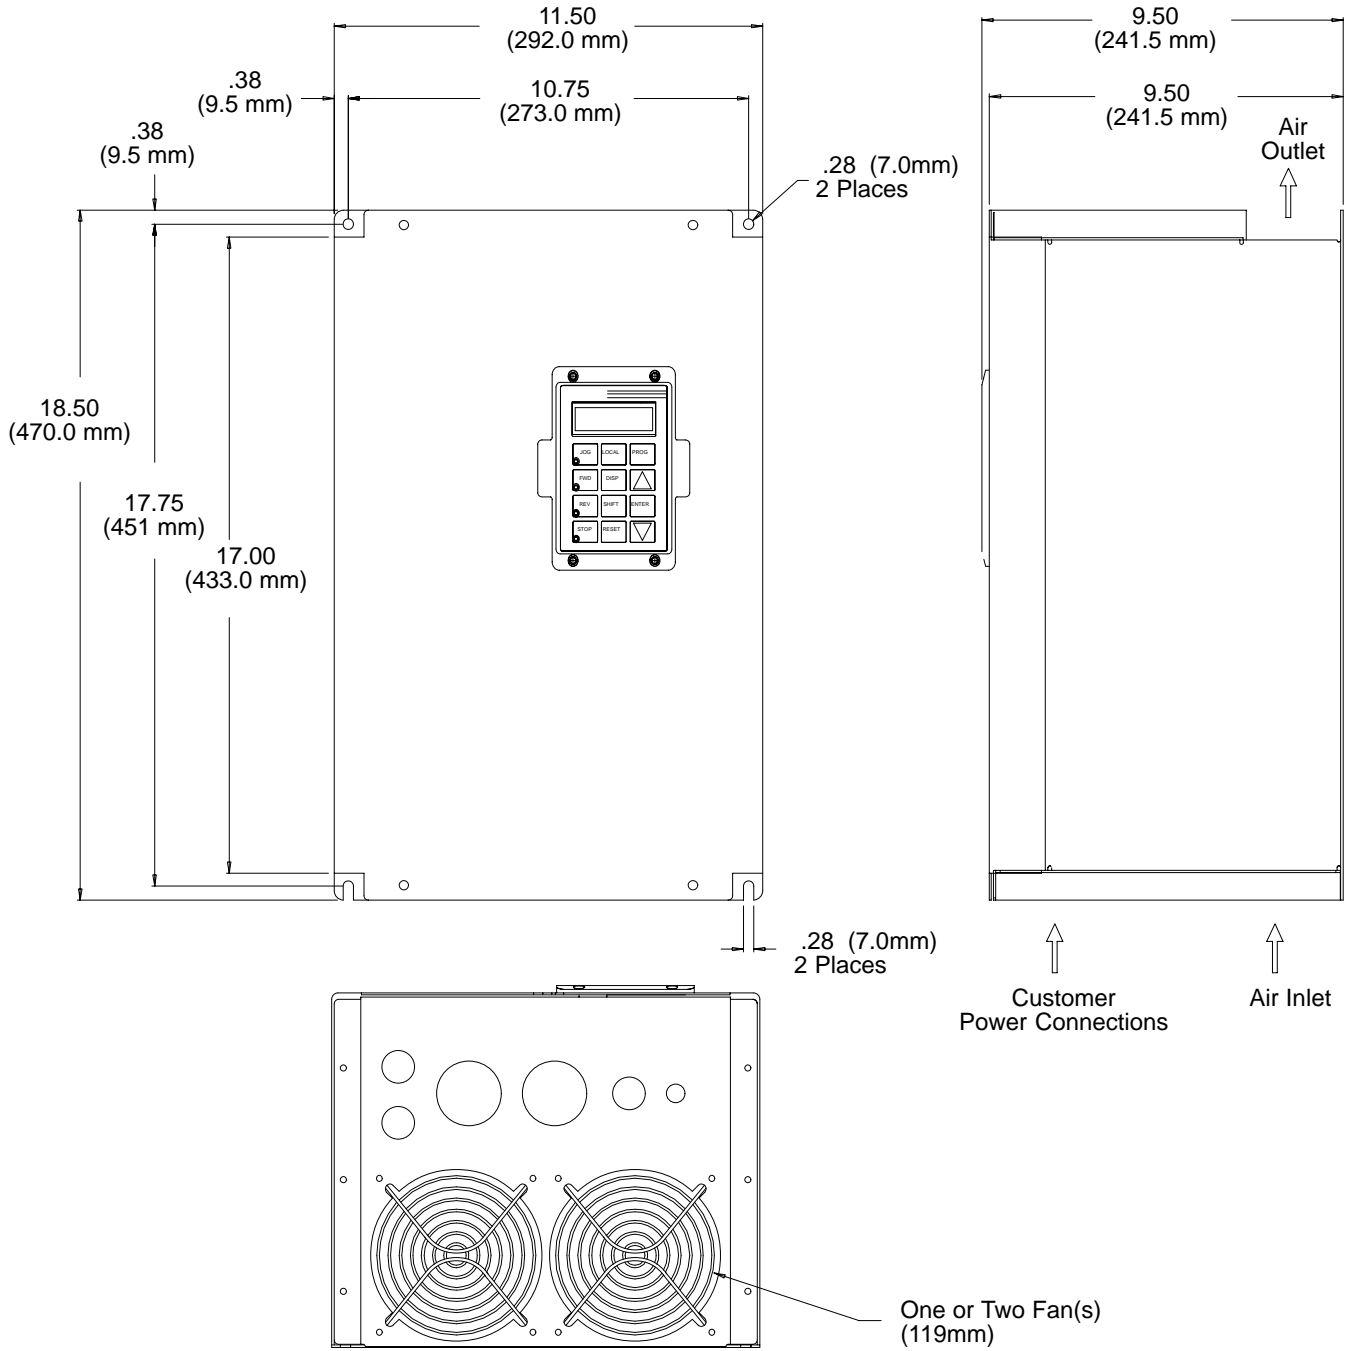

**Dimensions Continued**  
**Size D Control**

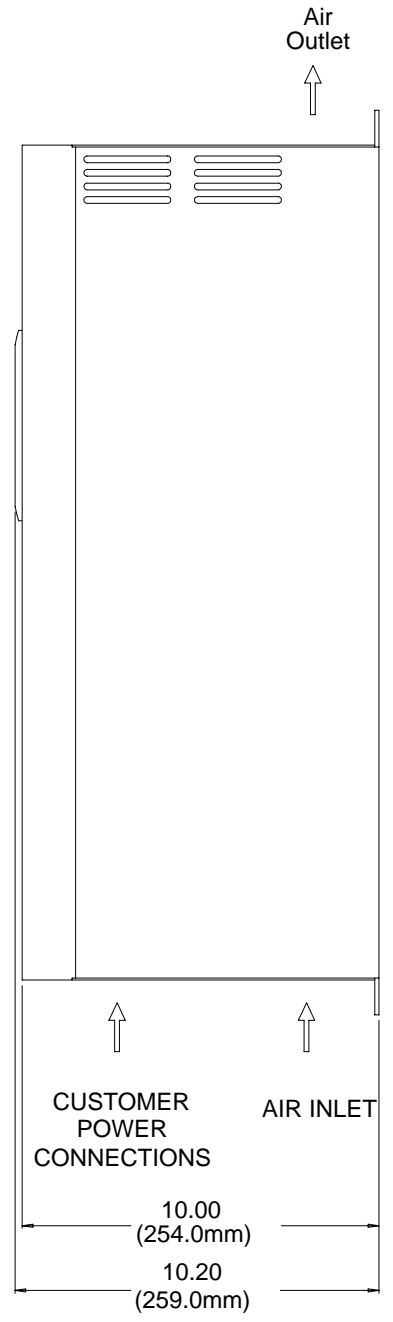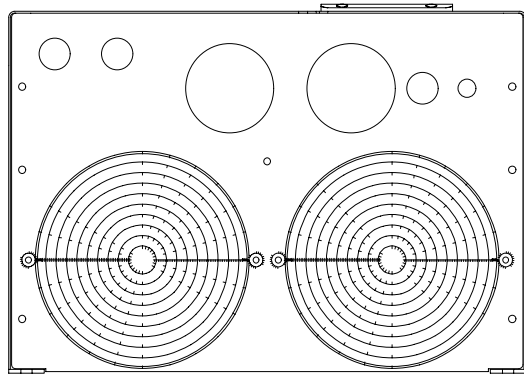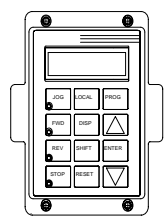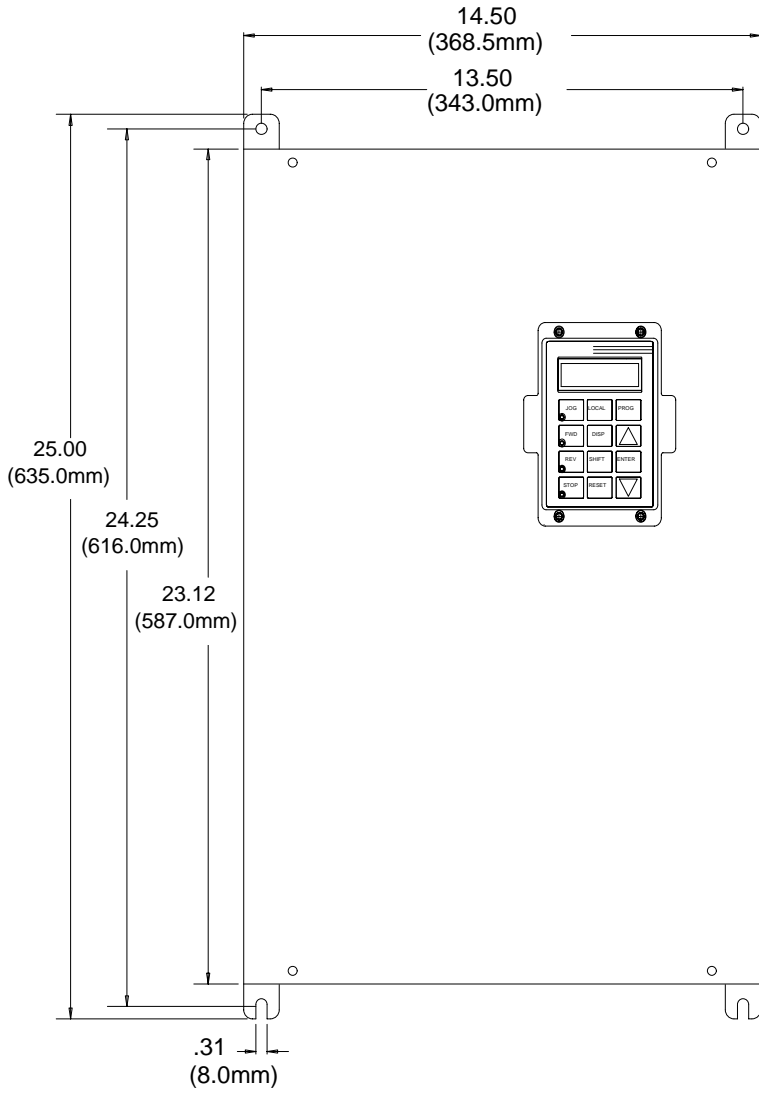


**Dimensions Continued**  
**Size E Control**

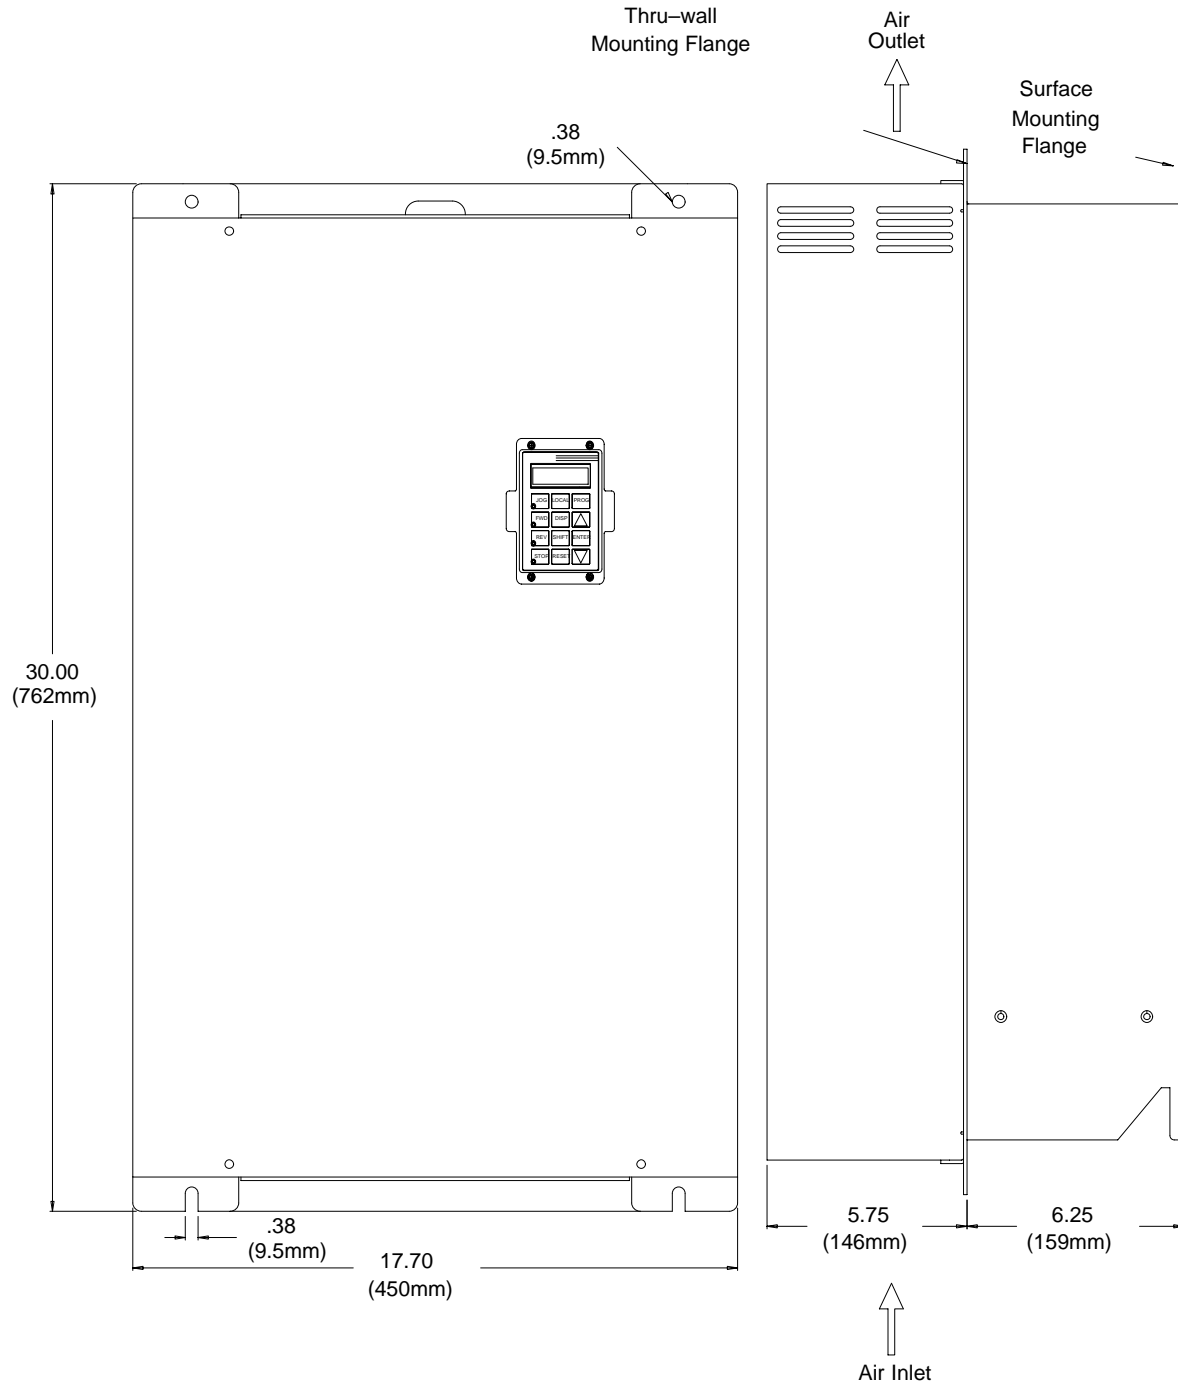

**Dimensions** Continued


**Size E Control – Through-Wall Mounting**

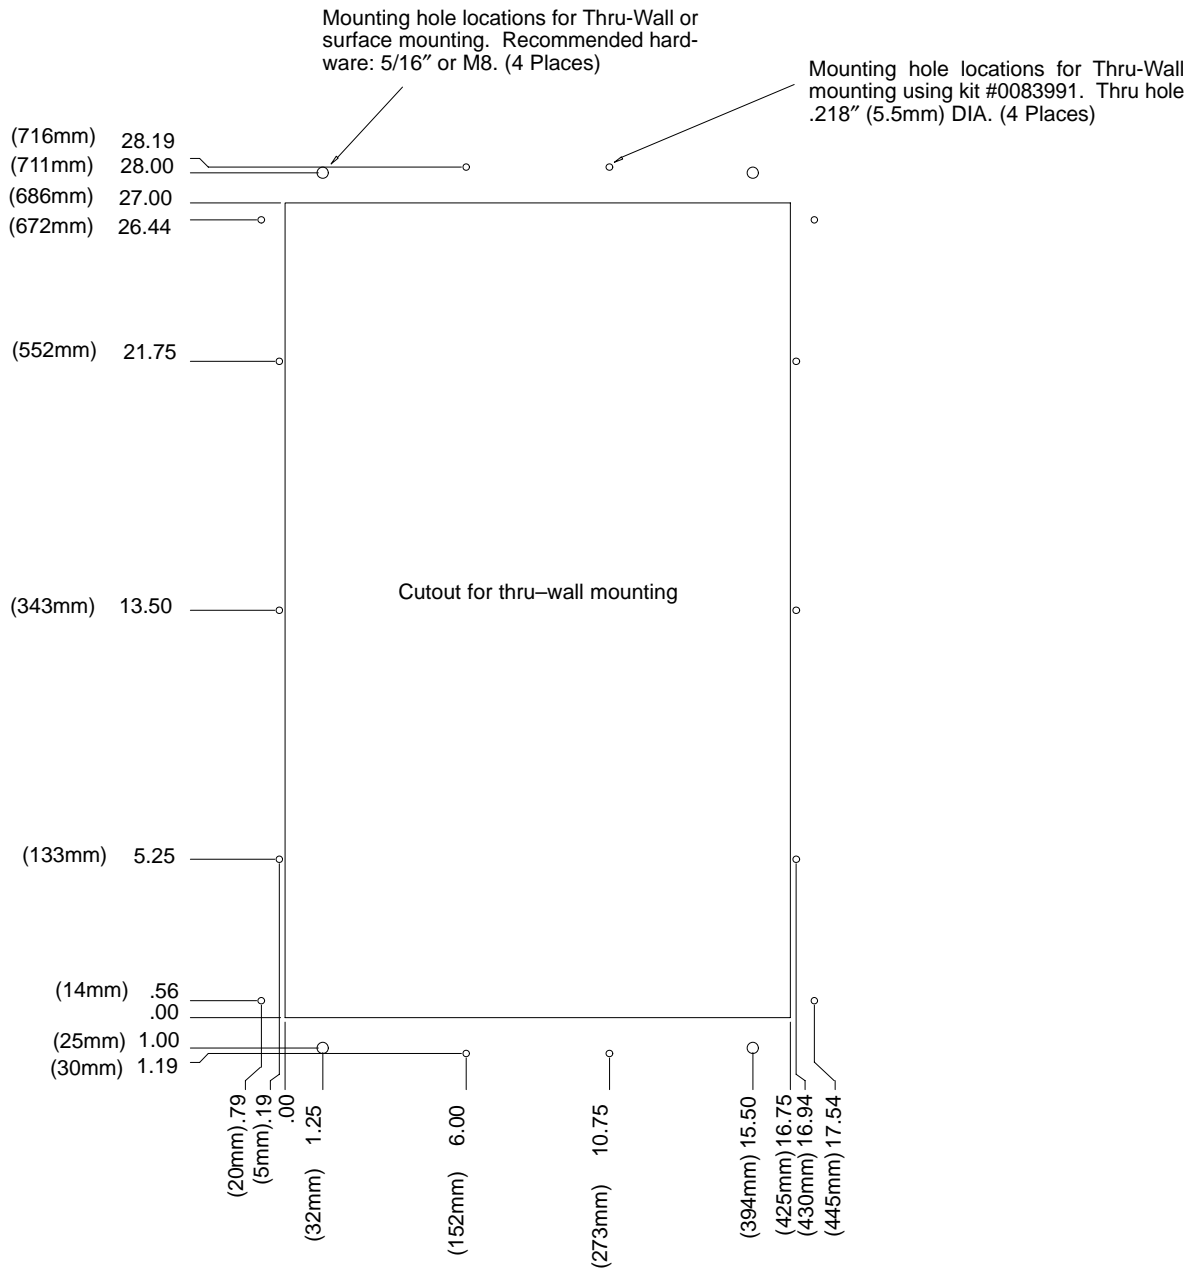

---

**Dimensions** Continued


**Size E Control – Through-Wall Mounting** Continued

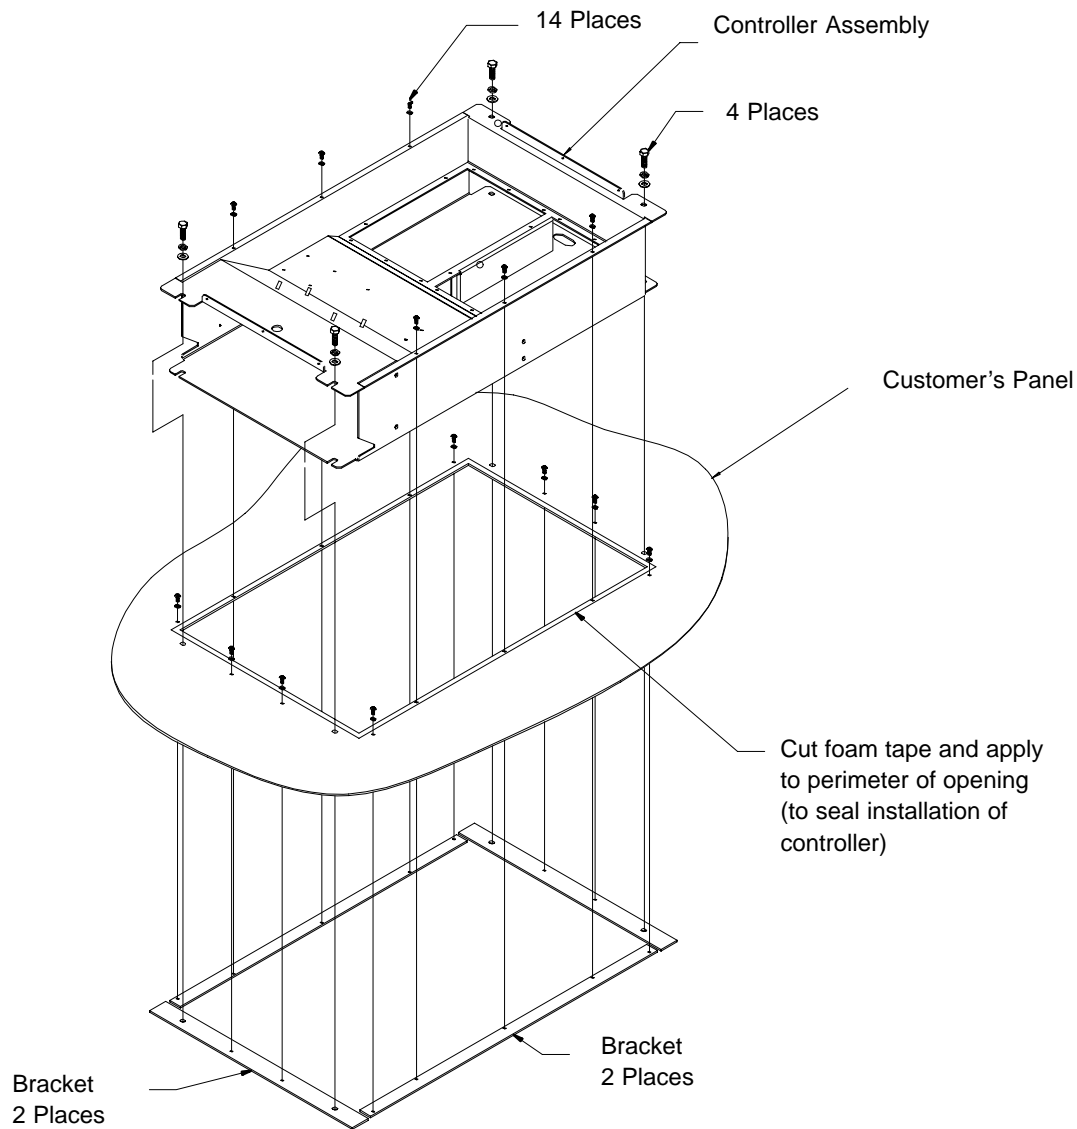

Parts List - Thru-Wall Mounting Kit No. V0083991

<b>QTY</b>	<b>Part No.</b>	<b>Description</b>
2	V1083991	Bracket, small (left & right)
2	V1083992	Bracket, Large (top & bottom)
14	V6300710	Screw, 10-32 x 5/8
14	V6420010	Lock Washer No. 10
4	V6390205	Hex Bolt 5/16-18 x 5/8
4	V6420032	Lock Washer 5/16
4	V6410132	Flat Washer 5/16
1	C6990204	Tape, Single coated vinyl – 3.0 Yards (2.74m)

**Dimensions Continued**  
**Size F Control**

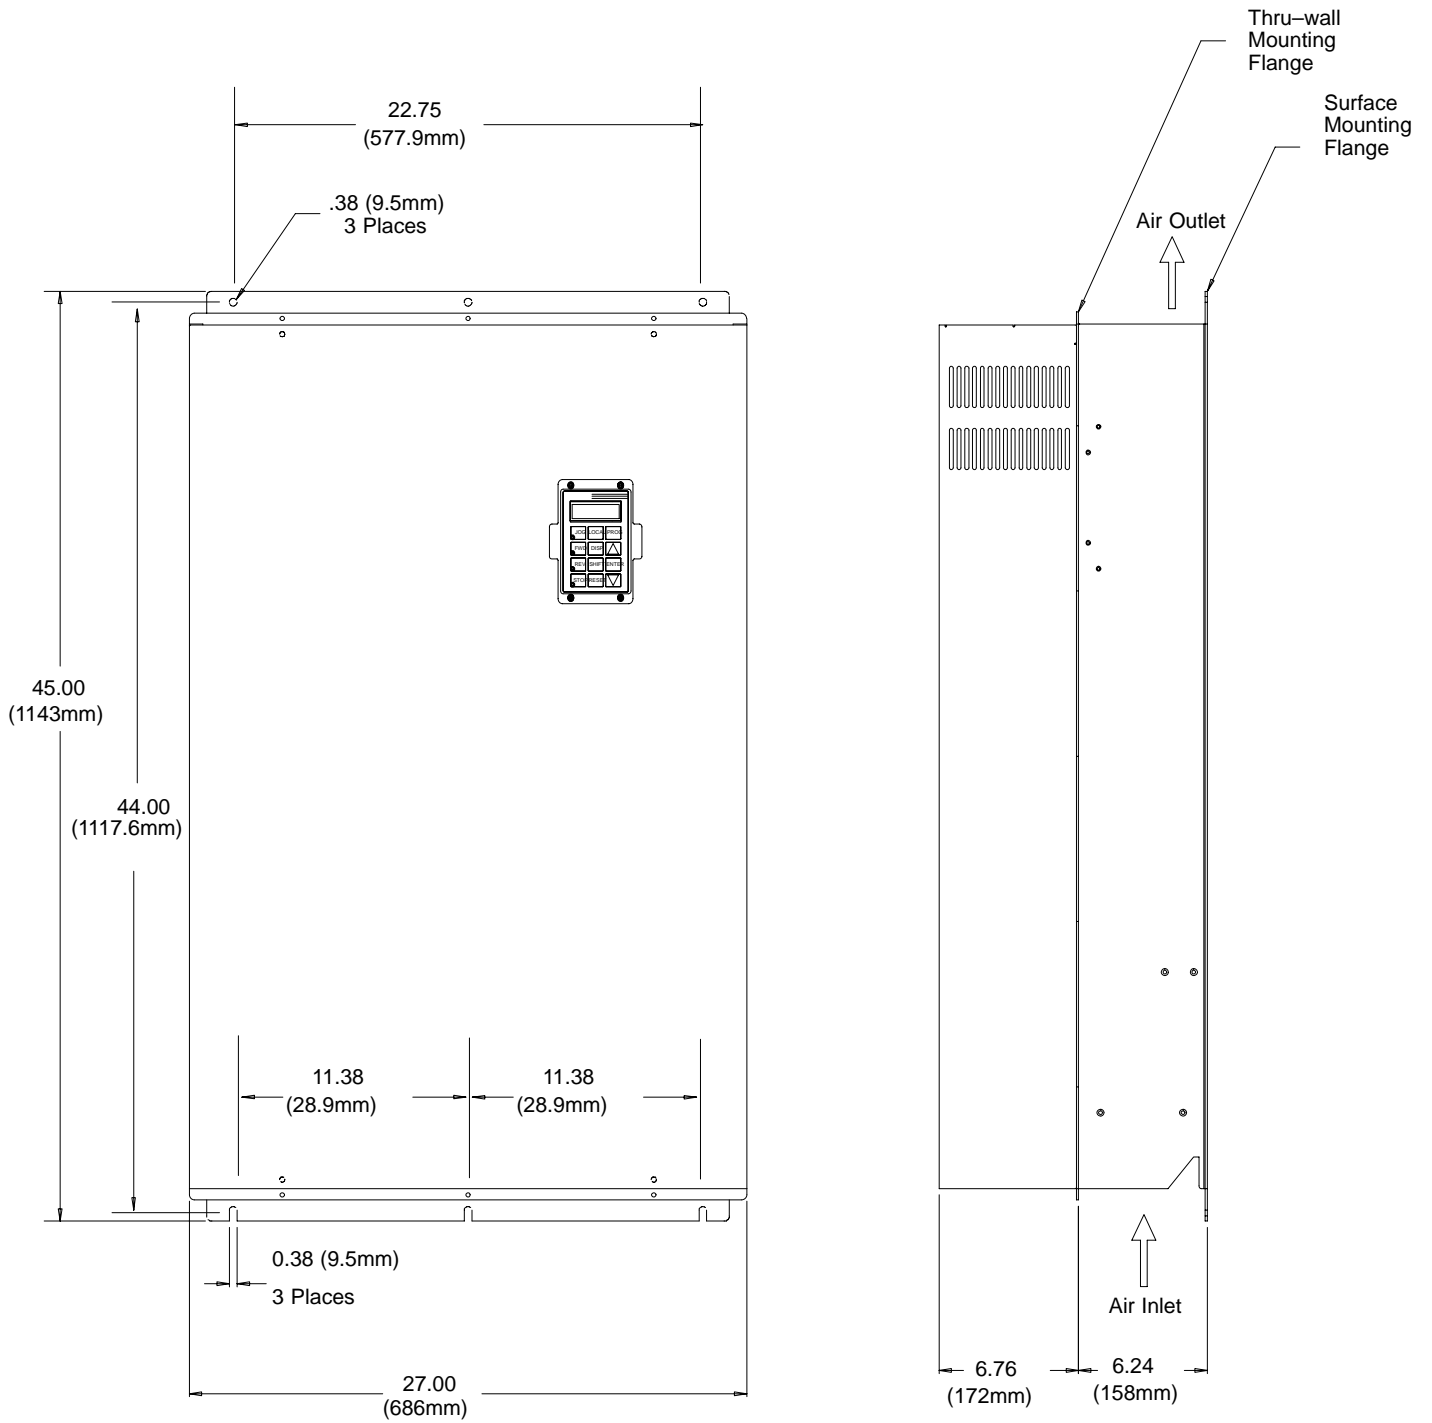


**Dimensions** Continued

**Size F Control – Through-Wall Mounting**


Mounting hole locations for Thru-Wall mounting or without thru-wall mounting kit #0084001. Thru hole .218" (5.5mm) DIA. (16 Places, coded A)

Mounting hole locations for Thru-Wall mounting using kit #0084001. Thru hole .218" (5.5mm) DIA. (18 Places, coded B)

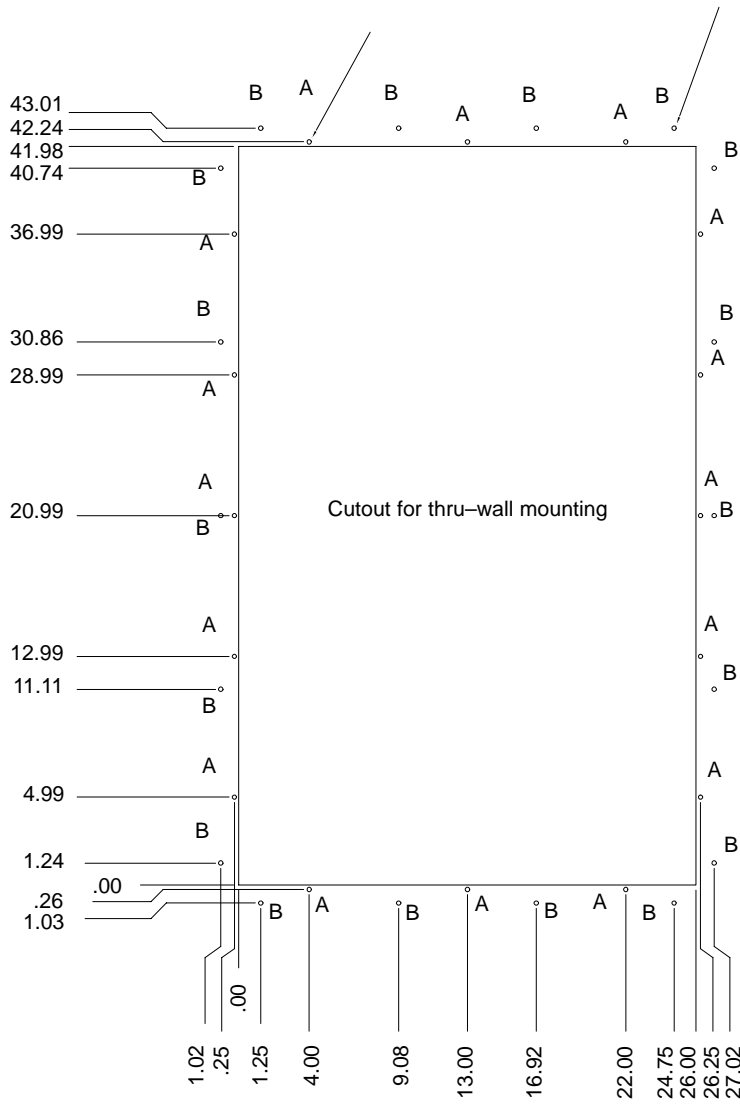

**Dimensions** Continued

**Size F Control – Through-Wall Mounting** Continued

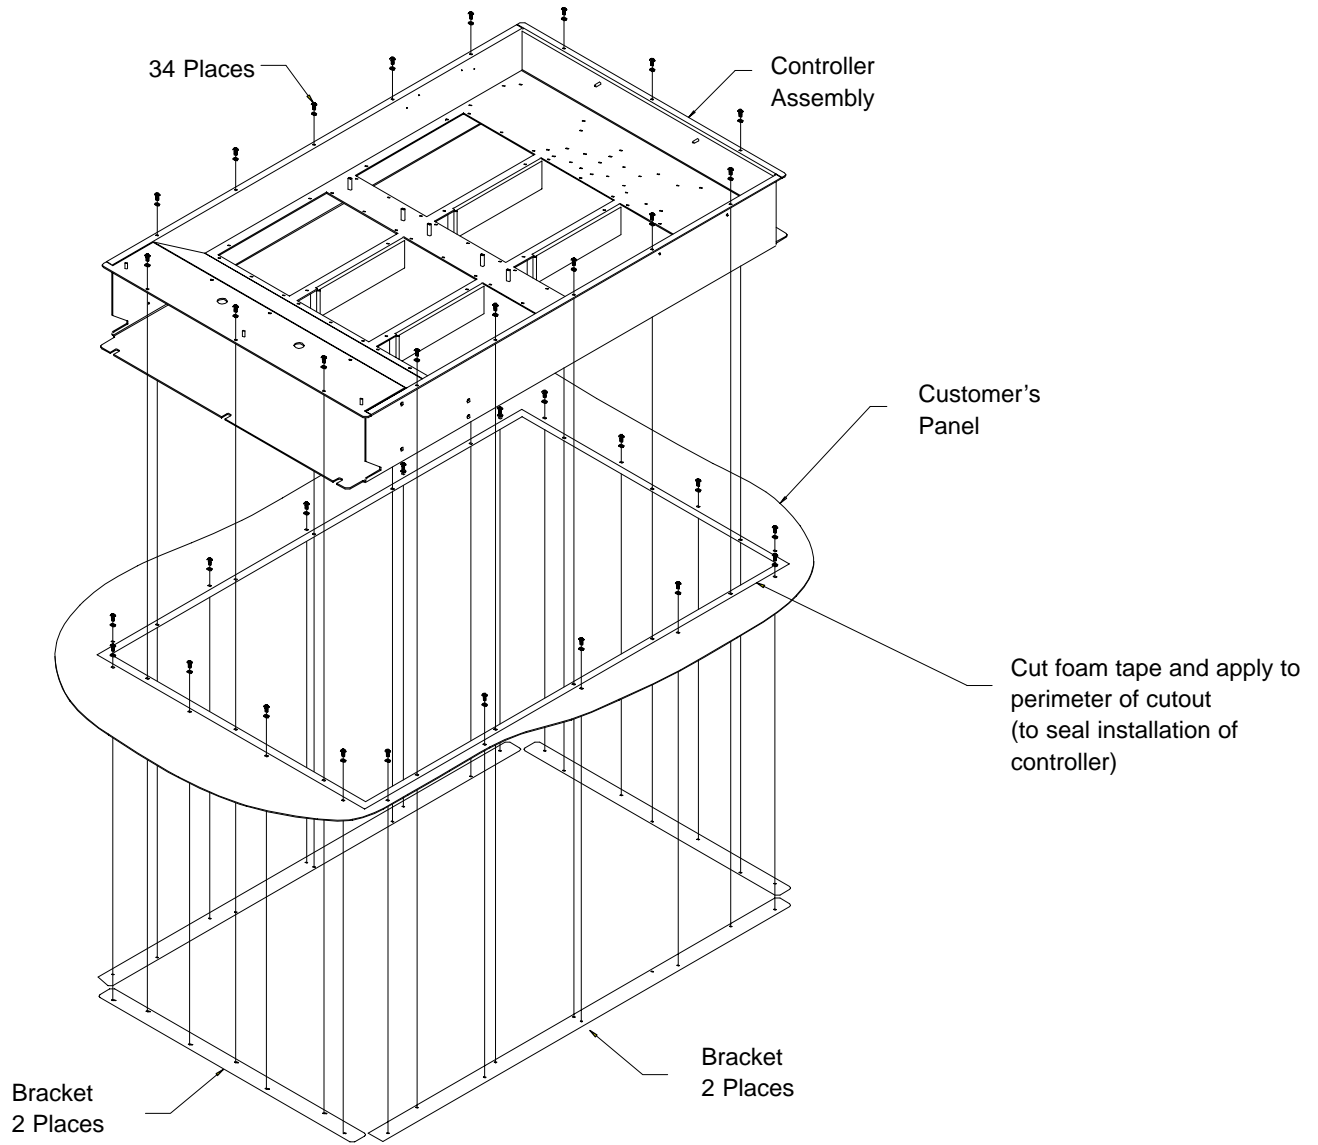


Parts List - Thru-Wall Mounting Kit No. V0084001

<b>QTY</b>	<b>Part No.</b>	<b>Description</b>
2	V1084002	Bracket, small (left & right)
2	V1084001	Bracket, Large (top & bottom)
34	V6300710	Screw, 10-32 x 5/8
34	V6420010	Lock Washer No. 10
1	C6990204	Tape, Single coated vinyl – 4.0 Yards (3.65m)

**Dimensions Continued**

**Size G Control**

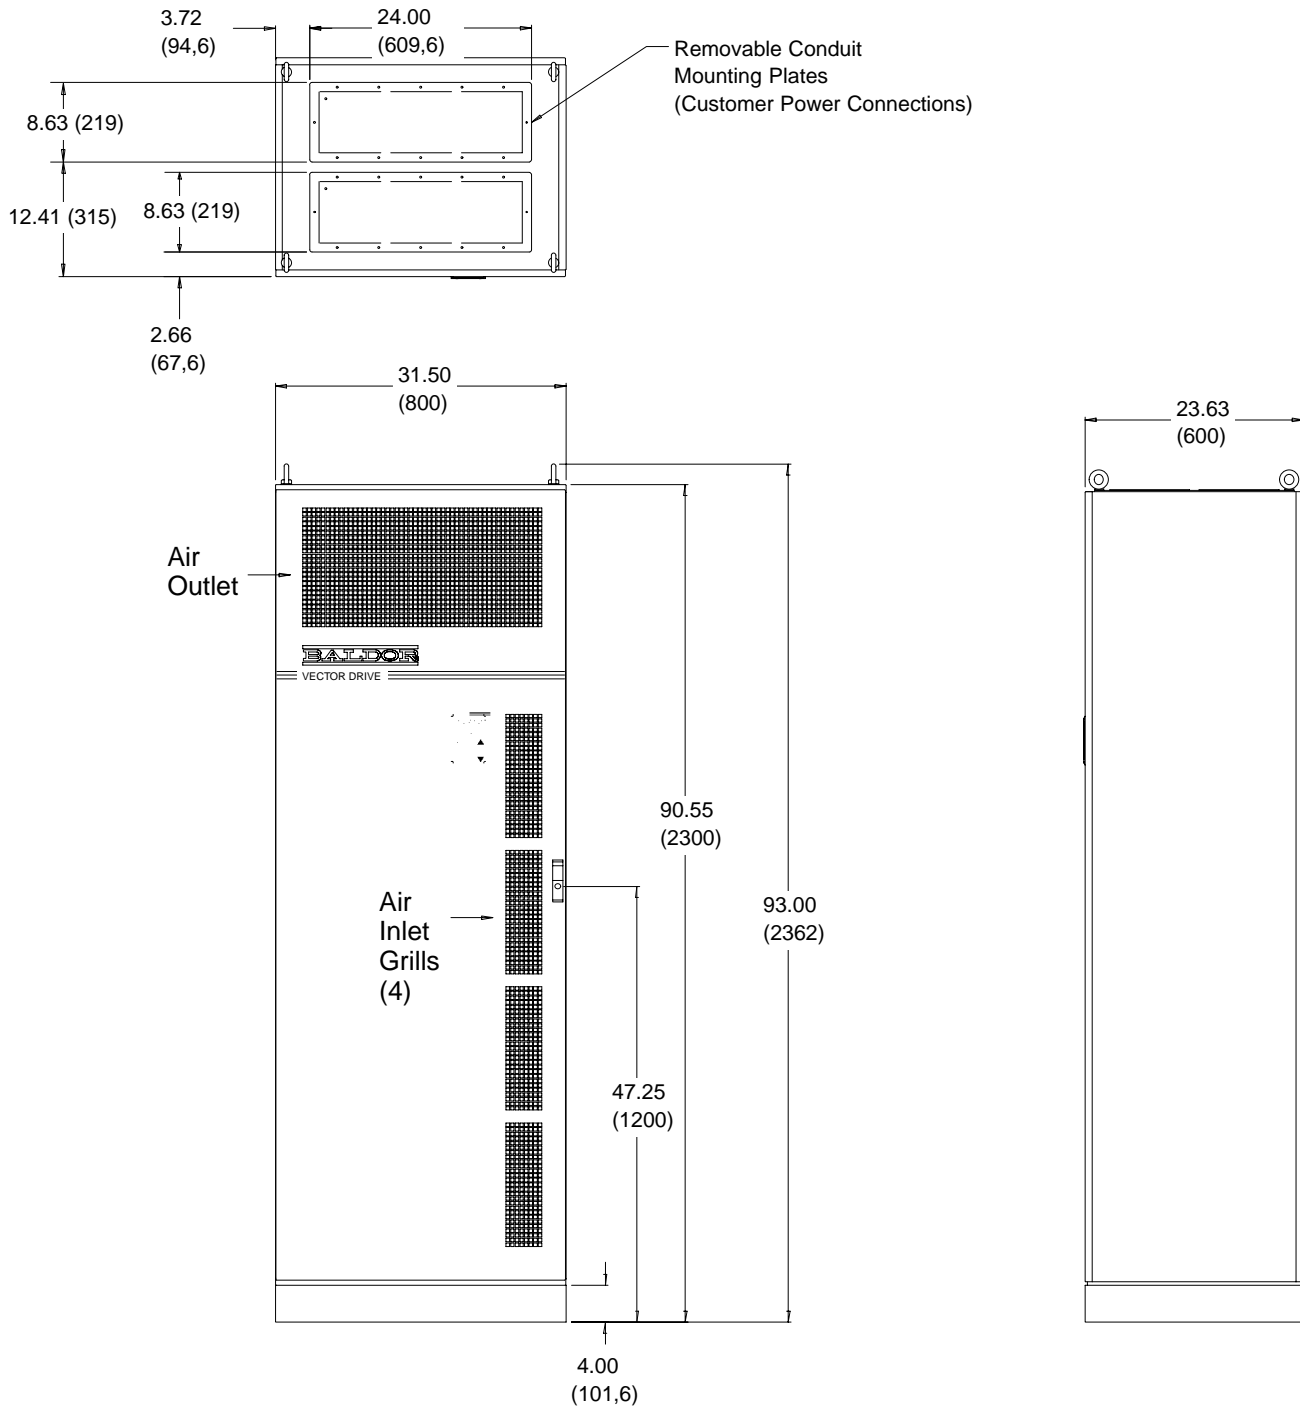

# Appendix A

**Dynamic Braking (DB) Hardware** Whenever a motor is abruptly stopped or forced to slow down quicker than if allowed to coast to a stop, the motor becomes a generator. This energy appears on the DC Bus of the control and must be dissipated using dynamic braking hardware. Dynamic braking (DB) hardware can be a resistor or transistor load. Table A-1 provides a matrix of DB turn ON and turn OFF voltages.

**Table A-1**

Parameter Description	Control Input Voltage		
	230VAC	460VAC	575VAC
Nominal Voltage	230VAC	460VAC	575VAC
AC Input Voltage Range	180-264VAC	340-528VAC	495-660VAC
Overvoltage Fault (Voltage exceeded)	400VDC	800VDC	992VDC
DB ON Voltage	381VDC	762VDC	952VDC
DB UTP *	388VDC	776VDC	970VDC
DB OFF Voltage	375VDC	750VDC	940VDC

\* DBUTP (DB Upper Tolerance Peak) =  $1.02 \times \sqrt{2} \times V_{L-L}$

Braking torque and time should not exceed the available drive braking torque and time rating. The drive braking torque is limited to the available peak current and peak current time rating of the control. If the peak current or peak current time limit is exceeded during braking, the control may trip on an over voltage or a regen power fault. Selecting an oversized control or a line regenerative control should be considered in these cases.

### Selection Procedure

1. Calculate the watts to be dissipated using the following formulas for the appropriate load type.
2. Identify the control model number and determine which braking hardware is required based on the model number suffix: E, EO, ER, MO or MR.
3. Select appropriate braking hardware from Baldor 501 Catalog or Tables A-2, A-3 and A-4.

### Hoisting Load Calculations

1. Calculate braking duty cycle:

$$\text{Duty Cycle} = \frac{\text{Lowering Time}}{\text{Total Cycle Time}}$$

2. Calculate braking watts to be dissipated in dynamic braking resistors:

$$\text{Watts} = \frac{\text{duty cycle} \times \text{lbs} \times \text{FPM} \times \text{efficiency}}{44}$$

where: lbs = weight of load  
 FPM = Feet Per Minute  
 efficiency = mechanical efficiency  
 i.e., 95% = 0.95

Continued on next page.

---

**Dynamic Braking (DB) Hardware** Continued

**General Machinery Load Calculations:**

1. Calculate braking duty cycle:

$$\text{Duty Cycle} = \frac{\text{Braking Time}}{\text{Total Cycle Time}}$$

2. Calculate deceleration torque:

$$T_{\text{Decel}} = \frac{\text{RPM change} \times Wk^2}{308 \times \text{time}} - \text{Friction}_{(\text{Lb.Ft.})}$$

where:  $T_{\text{Decel}}$  = Deceleration torque in Lb.-ft.  
 $Wk^2$  = Inertia in Lb.ft.<sup>2</sup>  
time = In seconds

3. Calculate watts to be dissipated in dynamic braking resistor:

$$\text{Watts} = T_{\text{Decel}} \times (S_{\text{max}} + S_{\text{min}}) \times \text{Duty Cycle} \times (0.0712)$$

where:  $S_{\text{max}}$  = Speed to start braking  
 $S_{\text{min}}$  = Speed after braking

4. Multiply watts calculated in step 3 by 1.25 to allow for unanticipated loads (safety factor).

---

**Dynamic Braking (DB) Hardware** Continued**Catalog Numbers with an “E” Suffix**

These controls are equipped with a factory installed dynamic brake transistor and brake resistor(s). Size A controls have 400 watts and size B controls have 800 watts of dissipation. These can provide 100% braking torque for 6 seconds of a 20% braking duty cycle. Should additional braking capacity be required an optional externally mounted RGA brake resistor can be used in lieu of the internal resistors. See RGA assemblies.

**Catalog Numbers with an “ER” or “MR” Suffix**

These controls include a factory installed dynamic braking transistor. If dynamic braking is required, use an optional external RGA brake resistor. See RGA assemblies.

**Catalog Numbers with an “EO” or “MO” Suffix**

No dynamic braking hardware is installed in these controls. If dynamic braking is required, an optional RBA assembly or a combination of RTA and RGA assemblies should be added. The RBA assembly provide up to 4,000 watts dynamic braking capacity. Should more capacity be required, a combination of an RTA (DB transistor) and RGA (DB resistor) should be used. Refer to RBA, RTA and RGA Assemblies description.

**Dynamic Braking (DB) Hardware** Continued

**RGA Assemblies**

RGA Assemblies include braking resistors completely assembled and mounted in a NEMA 1 enclosure. A listing of available RGA assemblies is provided in Table A-2. The minimum resistance “Minimum Ohms” shown in the table is the minimum resistor value that can be connected to the control without causing damage to the internal dynamic brake transistor for E, ER and MR controls.

RGA assemblies can also be used with EO and MO controls in combination with an RTA assembly when more than 4000 watts of brake capacity is needed. In this case, the minimum resistance of the RGA assembly must be equal to or greater than the minimum resistance specified for the RTA assembly. Refer to Section 3 “Optional Dynamic Brake Hardware” for wiring diagram.

**Table A-2 Dynamic Braking Resistor Assemblies (RGA)**

Input Volts	HP	Minimum Ohms	Continuous Rated Watts						
			600	1200	2400	4800	6400	9600	14200
230	1 - 2	30	RGA630	RGA1230	RGA2430				
	3 - 5	20	RGA620	RGA1220	RGA2420	RGA4820			
	7.5 - 10	10		RGA1210	RGA2410	RGA4810			
	15 - 20	6		RGA1206	RGA2406	RGA4806			
	25 - 40	4		RGA1204	RGA2404	RGA4804			
	50	2			RGA2402	RGA4802	RGA6402	RGA9602	RGA14202
460	1 - 3	120	RGA6120	RGA12120	RGA24120				
	5 - 7.5	60	RGA660	RGA1260	RGA2460	RGA4860			
	10	30	RGA630	RGA1230	RGA2430	RGA4830			
	15 - 25	20	RGA620	RGA1220	RGA2420	RGA4820			
	30 - 60	10		RGA1210	RGA2410	RGA4810			
	75 - 250	4		RGA1204	RGA2404	RGA4804	RGA6404	RGA9604	RGA14204
	300 - 450	2			RGA2402	RGA4802	RGA6402	RGA9602	RGA14202
575	1 - 2	200	RGA6200	RGA12200	RGA24200				
	3 - 5	120	RGA6120	RGA12120	RGA24120				
	7.5 - 10	60	RGA660	RGA1260	RGA2460	RGA4860			
	15	30	RGA630	RGA1230	RGA2430	RGA4830			
	20 - 30	24		RGA1224	RGA2424	RGA4824			
	40 - 150	14			RGA2414	RGA4814	RGA6414	RGA9614	RGA14214

**Dynamic Braking (DB) Hardware** Continued

**RBA Assemblies**

An RBA Assembly includes a dynamic brake transistor and resistors completely assembled and mounted in a NEMA 1 enclosure. They are designed for EO and MO controls. Select the RBA based on the voltage rating of the control and the dynamic brake watt capacity required. Use Table A-3 to select the RBA assembly. If more than 4,000 watts of brake capacity is required, use a combination of RTA (DB transistor) and RGA (DB resistor) assemblies. Refer to Section 3 "Optional Dynamic Brake Hardware" for wiring diagram.

**Table A-3 Dynamic Braking Assemblies (RBA)**

		MAXIMUM BRAKING TORQUE IN % OF MOTOR RATING												Cont. Watts	Catalog No.
		HP	20	25	30	40	50	60	75	100	150V	150	200		
<b>INPUT VOLTAGE</b>	200 to 240	90%	75%	60%	45%	36%								600	RBA2-610
		150%	125%	100%	75%	62%								1800	RBA2-1806
		150%	150%	150%	115%	92%								4000	RBA2-4004
	380 to 480	150%	150%	120%	90%	72%	60%	48%	36%	28%				600	RBA4-620
		150%	150%	120%	90%	72%	60%	48%	36%	28%				1800	RBA4-1820
		150%	150%	150%	150%	150%	120%	96%	72%	56%	48%	36%	29%	4000	RBA4-4010
	550 to 600	150%	150%	120%	90%	72%	60%	48%	36%	28%				600	RBA5-624
		150%	150%	120%	90%	72%	60%	48%	36%	28%				1800	RBA5-1824
		150%	150%	150%	150%	150%	120%	96%	72%	56%				4000	RBA5-4014

**Dynamic Braking (DB) Hardware** Continued

**RTA Assemblies**

RTA assemblies include a dynamic brake transistor and gate driver circuit board completely assembled and mounted in a NEMA 1 enclosure. Brake resistors are not included in the RTA assembly. Each RTA assembly is designed to be used with an RGA dynamic brake resistor assembly. The minimum resistance of the RGA assembly must be equal to or greater than the minimum resistance specified for the RTA assembly. Select the RTA based on the voltage rating of the control and HP which provides the dynamic brake watt capacity required. Use Table A-4 to select the RTA assembly. Refer to Section 3 "Optional Dynamic Brake Hardware" for wiring diagram.

**Table A-4 Dynamic Braking Transistor Assemblies (RTA)**

HP	MAXIMUM BRAKING TORQUE IN % OF MOTOR RATING									
	208 - 230 VAC			380 - 480 VAC				550 - 600 VAC		
20	150%	150%	150%	150%	150%	150%	150%	150%	150%	150%
25	125%	150%	150%	150%	150%	150%	150%	150%	150%	150%
30	100%	150%	150%	120%	150%	150%	150%	150%	150%	150%
40	75%	115%	150%	90%	150%	150%	150%	127%	150%	150%
50	62%	92%	150%	72%	150%	150%	150%	100%	150%	150%
60				60%	150%	150%	150%	85%	145%	150%
75				48%	96%	150%	150%	68%	116%	150%
100				36%	72%	150%	150%	50%	87%	150%
150V				28%	56%	150%	150%	40%	70%	150%
150					48%	126%	150%	34%	58%	150%
200					36%	95%	150%	25%	44%	150%
250					29%	76%	150%		35%	122%
300						62%	125%		29%	100%
350						54%	108%			87%
400						47%	94%			76%
450						41%	84%			68%
<b>CAT. NO.</b>	<b>RTA2-6</b>	<b>RTA2-4</b>	<b>RTA2-2</b>	<b>RTA4-20</b>	<b>RTA4-10</b>	<b>RTA4-4</b>	<b>RTA4-2</b>	<b>RTA5-24</b>	<b>RTA5-14</b>	<b>RTA5-4</b>
Minimum Ohms	6	4	2	20	10	4	2	24	14	4

# Appendix B

## Parameter Values

**Table B-1 Parameter Block Values Level 1**

Level 1 Blocks					
Block Title	Parameter	P#	Adjustable Range	Factory Setting	User Setting
PRESET SPEEDS	PRESET SPEED #1	1001	0-MAX Speed	0 RPM	
	PRESET SPEED #2	1002	0-MAX Speed	0 RPM	
	PRESET SPEED #3	1003	0-MAX Speed	0 RPM	
	PRESET SPEED #4	1004	0-MAX Speed	0 RPM	
	PRESET SPEED #5	1005	0-MAX Speed	0 RPM	
	PRESET SPEED #6	1006	0-MAX Speed	0 RPM	
	PRESET SPEED #7	1007	0-MAX Speed	0 RPM	
	PRESET SPEED #8	1008	0-MAX Speed	0 RPM	
	PRESET SPEED #9	1009	0-MAX Speed	0 RPM	
	PRESET SPEED #10	1010	0-MAX Speed	0 RPM	
	PRESET SPEED #11	1011	0-MAX Speed	0 RPM	
	PRESET SPEED #12	1012	0-MAX Speed	0 RPM	
	PRESET SPEED #13	1013	0-MAX Speed	0 RPM	
	PRESET SPEED #14	1014	0-MAX Speed	0 RPM	
	PRESET SPEED #15	1015	0-MAX Speed	0 RPM	
ACCEL/DECEL RATE	ACCEL TIME #1	1101	0 to 3600 Seconds	3.0 SEC	
	DECEL TIME #1	1102	0 to 3600 Seconds	3.0 SEC	
	S-CURVE #1	1103	0-100%	0 %	
	ACCEL TIME #2	1104	0 to 3600 Seconds	3.0 SEC	
	DECEL TIME #2	1105	0 to 3600 Seconds	3.0 SEC	
	S-CURVE #2	1106	0-100%	0 %	
JOG SETTINGS	JOG SPEED	1201	0-MAX Speed	200 RPM	
	JOG ACCEL TIME	1202	0 to 3600 Seconds	3.0 SEC	
	JOG DECEL TIME	1203	0 to 3600 Seconds	3.0 SEC	
	JOG S-CURVE TIME	1204	0-100%	0 %	
KEYPAD SETUP	KEYPAD STOP KEY	1301	REMOTE OFF (Stop key inactive during remote operation). REMOTE ON (Stop key active during remote operation).	REMOTE ON	
	KEYPAD STOP MODE	1302	COAST, REGEN	REGEN	
	KEYPAD RUN FWD	1303	OFF, ON	ON	
	KEYPAD RUN REV	1304	OFF, ON	ON	
	KEYPAD JOG FWD	1305	OFF, ON	ON	
	KEYPAD JOG REV	1306	OFF, ON	ON	

**Table B-1 Parameter Block Values Level 1** Continued

Level 1 Blocks - Continued					
Block Title	Parameter	P#	Adjustable Range	Factory	User Setting
INPUT	OPERATING MODE	1401	KEYPAD STANDARD RUN 15SPD FAN PUMP 2 WIRE FAN PUMP 3 WIRE SERIAL BIPOLAR PROCESS MODE	KEYPAD	
	COMMAND SELECT	1402	POTENTIOMETER +/-10 VOLTS +/-5 VOLTS 4 TO 20 mA 10V W/ TORQ FF EXB PULSE FOL 5V EXB 10 VOLT EXB 4-20mA EXB 3-15 PSI EXB TACHOMETER EXB SERIAL NONE	+/-10 VOLTS	
	ANA CMD INVERSE	1403	OFF, ON	OFF	
	ANA CMD OFFSET	1404	-20.0 TO +20.0% (where $\pm 0.5V = \pm 20\%$ )	0.0 %	
	ANA 2 DEADBAND	1405	0-10.00 V	0.20 V	
	ANA 1 CUR LIMIT	1406	OFF, ON	OFF	
OUTPUT	OPTO OUTPUT #1	1501	READY ZERO SPEED AT SPEED	READY	
	OPTO OUTPUT #2	1502	OVERLOAD KEYPAD CONTROL AT SET SPEED FAULT	ZERO SPEED	
	OPTO OUTPUT #3	1503	FOLLOWING ERR MOTR DIRECTION DRIVE ON	AT SPEED	
	OPTO OUTPUT #4	1504	CMD DIRECTION OVER TEMP WARN PROCESS ERROR DRIVE RUN	FAULT	
	ZERO SPD SET PT	1505	0-MAX Speed	200 RPM	
	AT SPEED BAND	1506	0-1000 RPM	100 RPM	
	SET SPEED	1507	0-MAX Speed	Rated Motor Speed	

**Table B-1 Parameter Block Values Level 1** Continued

Level 1 Blocks - Continued					
Block Title	Parameter	P#	Adjustable Range	Factory	User Setting
OUTPUT (Continued)	ANALOG OUT #1	1508	ABS SPEED ABS TORQUE SPEED COMMAND PWM VOLTAGE FLUX CURRENT CMD FLUX CUR LOAD CURRENT CMD LOAD CUR MOTOR CURRENT LOAD COMPONENT QUAD VOLTAGE	ABS SPEED	
	ANALOG OUT #2	1509	DIRECT VOLTAGE AC VOLTAGE BUS VOLTAGE TORQUE POWER VELOCITY OVERLOAD PH2 CURRENT PH1 CURRENT PROCESS FDBK SETPOINT CMD	MOTOR CURRENT	
	ANALOG #1 SCALE	1510	10 - 100%	100%	
	ANALOG #2 SCALE	1511	10 - 100%	100%	
	VECTOR CONTROL	CTRL BASE SPEED	1601	0-MAX Speed	CALC
	CURRENT PROP GAIN	1604	0-1000	CALC	
	SPEED PROP GAIN	1606	0-1000	10	
	SPEED INT GAIN	1607	0-9.99 HZ	2.00 HZ	
	SLIP FREQUENCY	1610	0-20.00 HZ	CALC	
	STATOR R1	1611	0-65.535	CALC	
	STATOR X1	1612	0-65.535	CALC	
LEVEL 2 BLOCK	ENTERS LEVEL 2 MENU - See Table B-2.				
PRESS ENTER FOR PROGRAMMING EXIT	Exit programming mode and return to display mode.				

**Table B-2 Parameter Block Values Level 2**

Level 2 Blocks					
Block Title	Parameter	P#	Adjustable Range	Factory	User Setting
OUTPUT LIMITS	OPERATING ZONE	2001	STD CONST TQ STD VAR TQ QUIET CONST TQ QUIET VAR TQ	STD CONST TQ	
	MIN OUTPUT SPEED	2002	0-MAX Speed	0 RPM	
	MAX OUTPUT SPEED	2003	0-32767RPM	Rated Motor RPM	
	PK CURRENT LIMIT	2004	0-PEAK RATED CURRENT	PK Control Rating	
	PWM FREQUENCY	2005	1.0-5.0 KHZ (Standard) 1.0-16.0 KHZ (Quiet)	2.5 KHZ	
	CUR RATE LIMIT	2006	0-10.00 SEC	0.004 SEC	
CUSTOM UNITS	DECIMAL PLACES	2101	0-5	5	
	VALUE AT SPEED	2102	0-65535 / 0-65535	0.1/ 01000 RPM	
	UNITS OF MEASURE	2103	Selection of 9 Character Sets	-	
PROTECTION	OVERLOAD	2201	FAULT, FOLDBACK	FOLDBACK	
	EXTERNAL TRIP	2202	OFF, ON	OFF	
	LOCAL ENABLE INP	2203	OFF, ON	OFF	
	FOLLOWING ERROR	2204	OFF, ON	OFF	
	TORQUE PROVING	2205	OFF, ON	OFF	
MISCELLANEOUS	RESTART AUTO/MAN	2301	AUTOMATIC, MANUAL	MANUAL	
	RESTART FAULT/HR	2302	0-10	0	
	RESTART DELAY	2303	0-120 SECONDS	0 SEC	
	FACTORY SETTINGS	2304	YES, NO	NO	
SECURITY CONTROL	SECURITY STATE	2401	OFF LOCAL SECURITY SERIAL SECURITY TOTAL SECURITY	OFF	
	ACCESS TIMEOUT	2402	0-600 SEC	0 SEC	
	ACCESS CODE	2403	0-9999	9999	
MOTOR DATA	MOTOR VOLTAGE	2501	0-999 VOLTS	Factory Set	
	MOTOR RATED AMPS	2502	0-999.9	Factory Set	
	MOTOR RATED SPD	2503	0-32767 RPM	1750 RPM	
	MOTOR RATED FREQ	2504	0-1000 HZ	60.0 HZ	
	MOTOR MAG AMPS	2505	0-85% Rated Current	CALC	
	CALC PRESETS	2508	YES, NO	NO	

**Table B-2 Parameter Block Values Level 2** Continued

Level 2 Blocks - Continued					
Block Title	Parameter	P#	Adjustable Range	Factory	User Setting
BRAKE ADJUST	RESISTOR OHMS	2601	0-255 OHMS	Factory Set	
	RESISTOR WATTS	2602	0-32767 WATTS	Factory Set	
	DC BRAKE CURRENT	2603	0-100%	0%	
PROCESS CONTROL	PROCESS FEEDBACK	2701	POTENTIOMETER +/-10VOLTS +/-5 VOLTS 4 TO 20mA 5V EXB 10V EXB 4-20mA EXB 3-15 PSI EXB TACHOMETER EXB NONE	NONE	
	PROCESS INVERSE	2702	OFF, ON	OFF	
	SETPOINT SOURCE	2703	SETPOINT CMD POTENTIOMETER +/-10VOLTS +/-5 VOLTS 4 TO 20mA 5V EXB 10V EXB 4-20mA EXB 3-15 PSI EXB TACHOMETER EXB NONE	SETPOINT CMD	
	SETPOINT COMMAND	2704	-100% to +100%	0.0 %	
	SET PT ADJ LIMIT	2705	0-100%	10.0 %	
	PROCESS ERR TOL	2706	1-100%	10 %	
	PROCESS PROP GAIN	2707	0-2000	0	
	PROCESS INT GAIN	2708	0-9.99 HZ	0.00 HZ	
	PROCESS DIFF GAIN	2709	0-1000	0	
	FOLLOW I:O RATIO	2710	(1-65535) : (1-20)	1:1	
MASTER ENCODER	2712	50-65535	1024 PPR		


**Table B-2 Parameter Block Values Level 2** Continued

Level 2 Blocks - Continued					
Block Title	Parameter	P#	Adjustable Range	Factory	User Setting
COMMUNICATIONS	PROTOCOL	2801	RS-232 ASCII, RS-485 ASCII	RS-232 ASCII	
	BAUD RATE	2802	9600, 19.2KB, 38.4KB, 57.6KB, 115.2KB, 230.4KB	9600	
	DRIVE ADDRESS	2803	0 - 31	0	
SYNCHRO STARTS	SYNCHRO STARTS	2901	OFF, RESTARTS ONLY, ALL STARTS	OFF	
	SYNC START SPEED	2902	0-MAX Speed	1750 RPM	
	SYNC SCAN TIME	2903	0-60.0 SEC	10.0 SEC	
	SYNC DIRECTION	2904	SYNC FWD & REV SYNC FORWARD SYNC REVERSE	SYNC FWD & REV	
AUTO-TUNING	<b>CALC PRESETS</b>	2508	YES, NO	NO	
	<b>CMD OFFSET TRM</b> Measures and trims out offset voltage at Analog Input #2 (J1-4 & J1-5).	AU1	-	-	
	<b>STATOR R1</b> Measures stator resistance	AU2	-	-	
	<b>FLUX CUR SETTING</b> Sets the Motor Mag Amps.	AU3	-	-	
LEVEL 1 BLOCK	Enters Level 1 Menu - See Table B-1.				
PRESS ENTER FOR PROGRAMMING EXIT	Exit programming mode and return to display mode.				

## Appendix C

---

## Remote Keypad Mounting Template

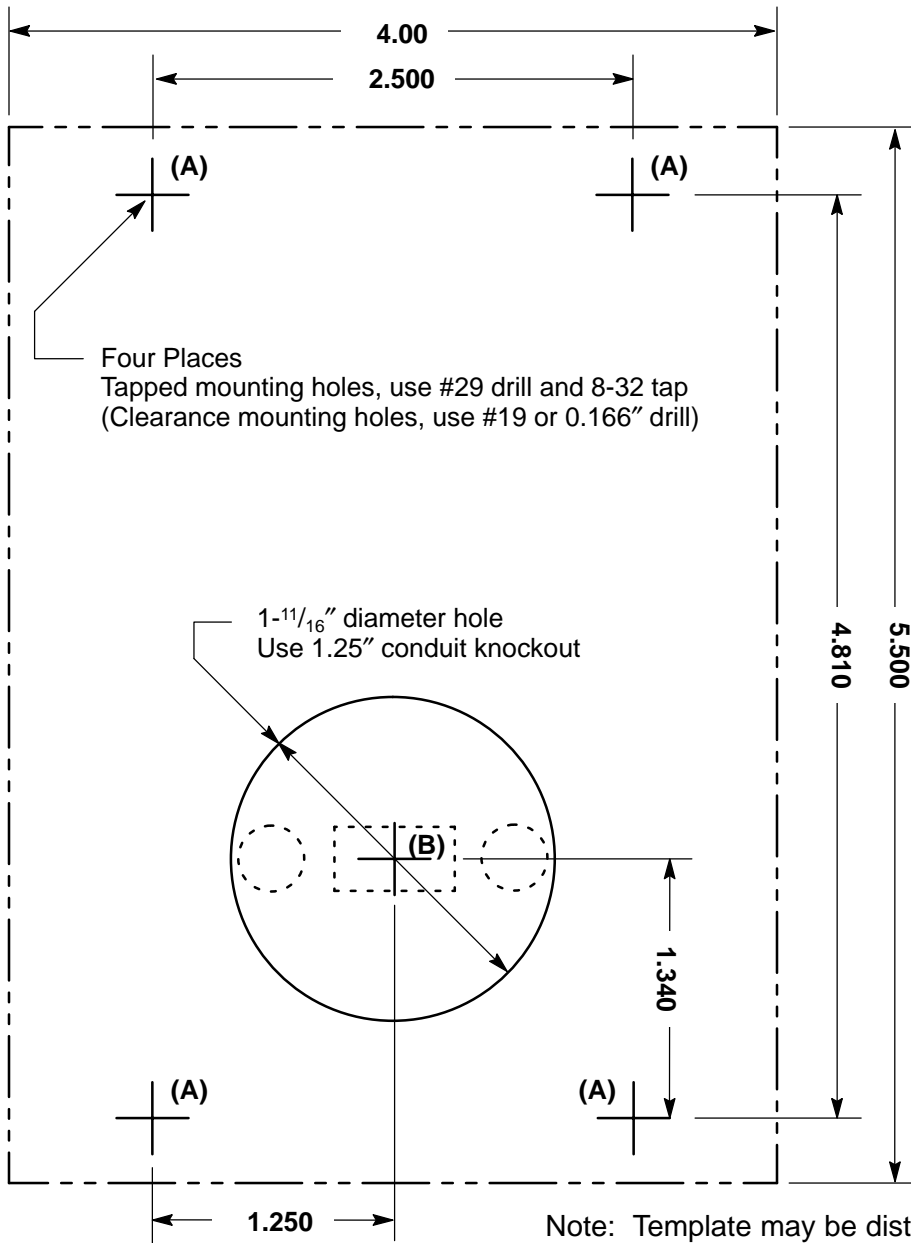

---

**BALDOR<sup>®</sup>**  
**MOTORS AND DRIVES**

---

**BALDOR ELECTRIC COMPANY**  
P.O. Box 2400  
Ft. Smith, AR 72902-2400  
(501) 646-4711  
Fax (501) 648-5792

© Baldor Electric Company  
MN717

Printed in USA  
9/97 C&J2500