


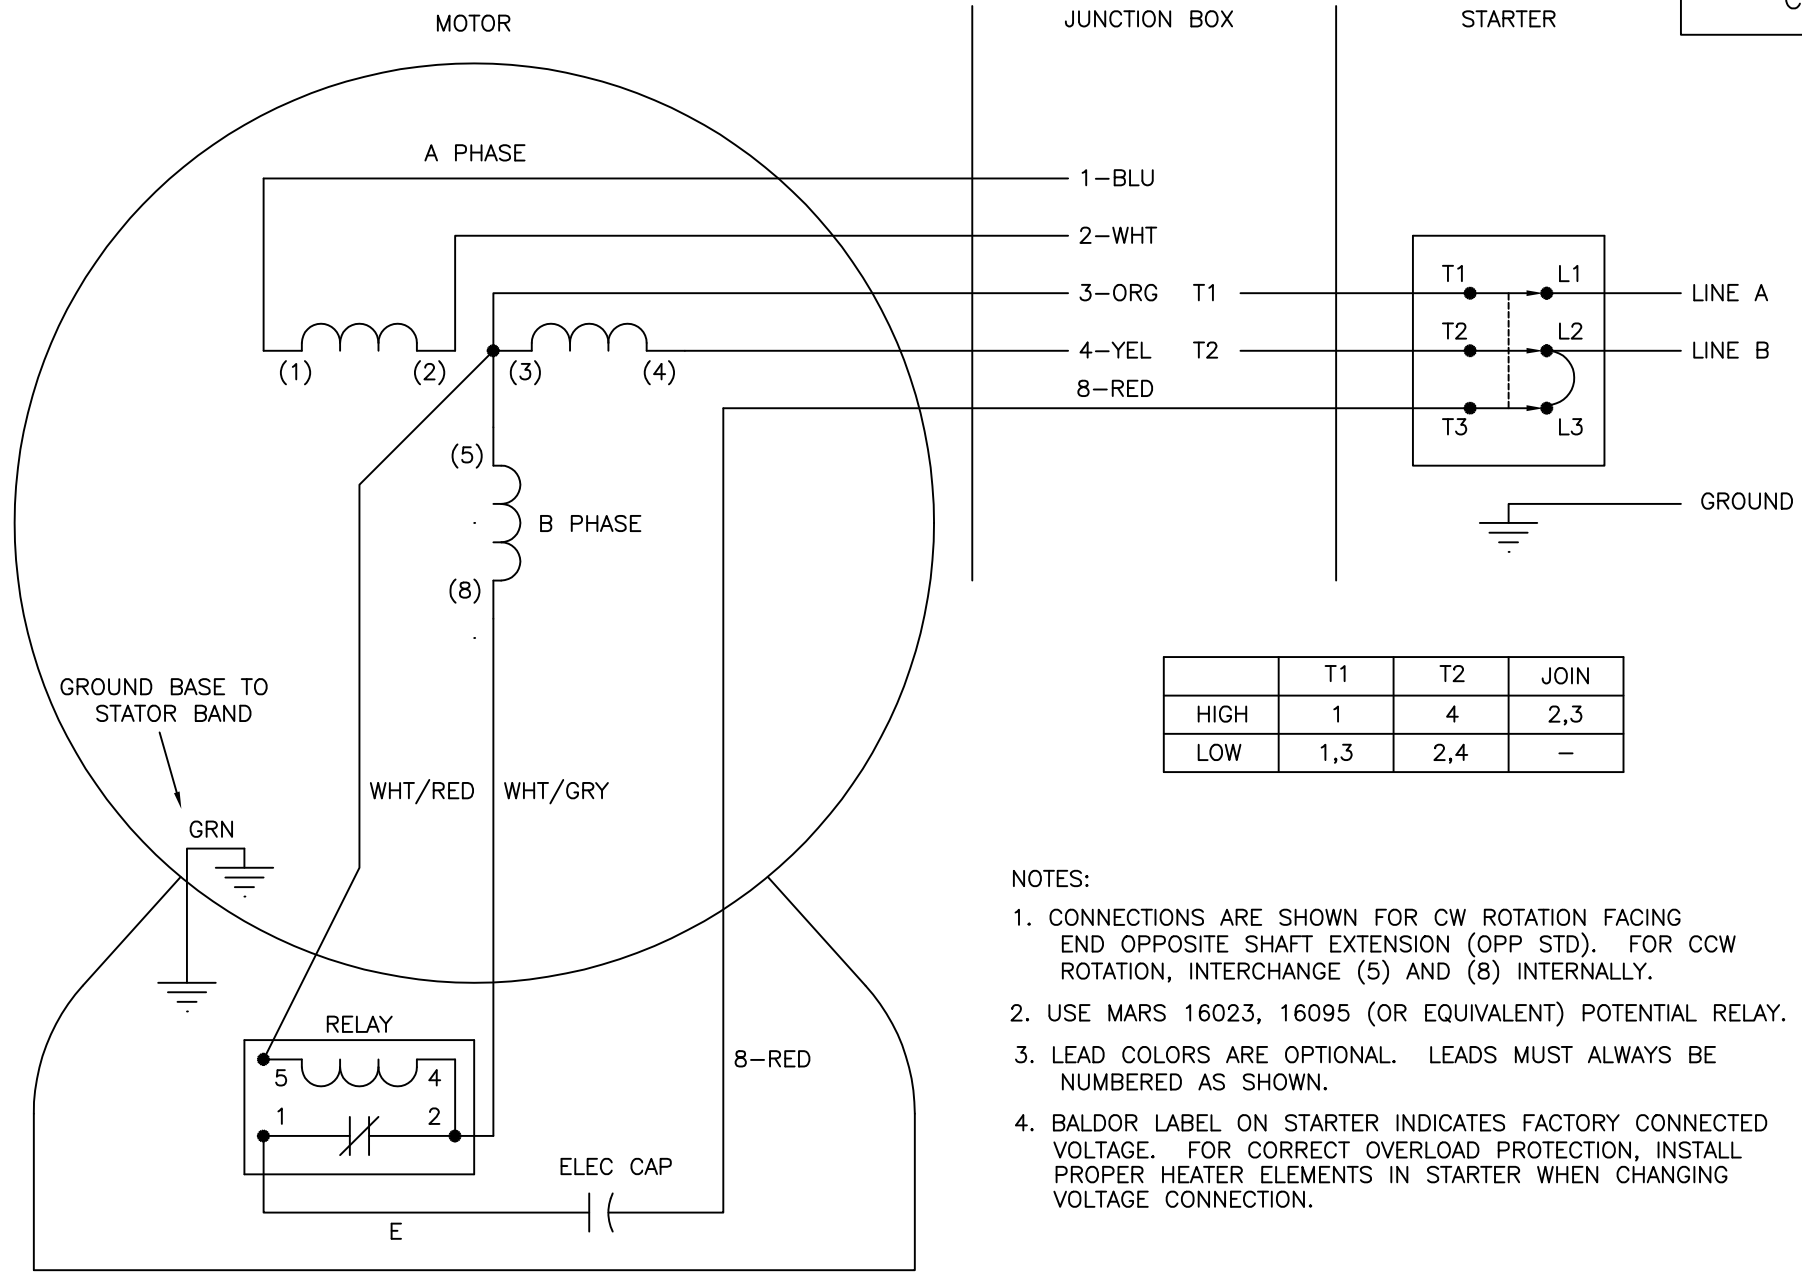

NOTES:

1. CONNECTIONS ARE SHOWN FOR CW ROTATION FACING END OPPOSITE SHAFT EXTENSION (OPP STD). FOR CCW ROTATION, INTERCHANGE (5) AND (8) INTERNALLY.
2. USE MARS 16023, 16095 (OR EQUIVALENT) POTENTIAL RELAY.
3. LEAD COLORS ARE OPTIONAL. LEADS MUST ALWAYS BE NUMBERED AS SHOWN.
4. BALDOR LABEL ON STARTER INDICATES FACTORY CONNECTED VOLTAGE. FOR CORRECT OVERLOAD PROTECTION, INSTALL PROPER HEATER ELEMENTS IN STARTER WHEN CHANGING VOLTAGE CONNECTION.

REV. DESC: ADDED NOTE #4, SEE EC09			
REV. LTR: E	BY: JED	REVISED: 09/22/99 11:24	TDR: 0187361
CD0253		FILE: AAA00028149	MDL: -
		MTL: -	

BALDOR ELECTRIC Co.

TYPE L, DV, FIX, POT. RELAY, MANUAL STARTER, GRINDER