



CUSTOMER ONLY NOTE: FOR VERTICAL SHAFT UP  
AND VERTICAL SHAFT DOWN LIFTING, REMOVE EYEBOLT  
FROM TOP OF MOTOR AND SCREW INTO END OF SHAFT