



Dodge® Ball Bearing Injection-Molded End Cover

These instructions must be read thoroughly before installation or operation. This instruction manual was accurate at the time of printing. Please see baldor.com for updated instruction manuals.

Note! The manufacturer of these products, Baldor Electric Company, became ABB Motors and Mechanical Inc. on March 1, 2018. Nameplates, Declaration of Conformity and other collateral material may contain the company name of Baldor Electric Company and the brand names of Baldor-Dodge and Baldor-Reliance until such time as all materials have been updated to reflect our new corporate identity.

WARNING: To ensure the drive is not unexpectedly started, turn off and lock-out or tag power source before proceeding. Failure to observe these precautions could result in bodily injury.

WARNING: All products over 25 kg (55 lbs) are noted on the shipping package. Proper lifting practices are required for these products.

INSTALLATION - Series 204-212

1. After installation of bearing on shaft, remove grease lubrication fitting with a 7/16" (11mm) socket or wrench.
2. Place serrated Belleville washer onto threaded side of lubrication fitting.
3. Insert the lubrication fitting through the serrated washer provided. Place the raised small end toward the hex portion of the fitting. Reinsert the fitting into the bearing housing through the end cover mounting slot. The washer will be between the end cover slot and fitting. Make sure no dirt or debris enters the fitting opening.
4. Hold cover firmly against face of bearing housing and tighten lubrication fitting with socket or wrench compressing both washer and end cover mounting tangs. Seating torque required is approximately 30 in.-lb. (34 kgf-cm or 340 N-cm). A tight compression and slight spreading of mounting tangs is normal and acceptable.
5. For non re-lube bearings, order hex head plug (part number 430020).

WARNING: Because of the possible danger to person(s) or property from accidents which may result from the improper use of products, it is important that correct procedures be followed. Products must be used in accordance with the engineering information specified in the catalog. Proper installation, maintenance and operation procedures must be observed. The instructions in the instruction manuals must be followed. Inspections should be made as necessary to assure safe operation under prevailing conditions. Proper guards and other suitable safety devices or procedures as may be desirable or as may be specified in safety codes should be provided, and are neither provided by ABB nor are the responsibility of ABB. This unit and its associated equipment must be installed, adjusted and maintained by qualified personnel who are familiar with the construction and operation of all equipment in the system and the potential hazards involved. When risk to persons or property may be involved, a holding device must be an integral part of the driven equipment beyond the speed reducer output shaft.

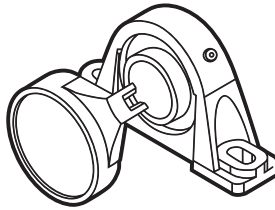


Figure 1 - End Cover

Modifying End Cover to Allow for Through or Extended Shafts

1. One or more groove guides can be found on the inside face of the end cover. These will conform to shaft diameters equal to or greater than bearing bore sizes for that particular series. Prior to mounting, use a utility knife to score bottom of groove from inside of end cover to a diameter consistent with your shaft size (Figure 2).

NOTE: For applications involving slight misalignment, DODGE recommends scoring the OD larger than the bearing bore.

2. Knock out or press bore slug of end cover out.

NOTE: 'P' style covers will only fit properly on shaft attachment side of pillow blocks.

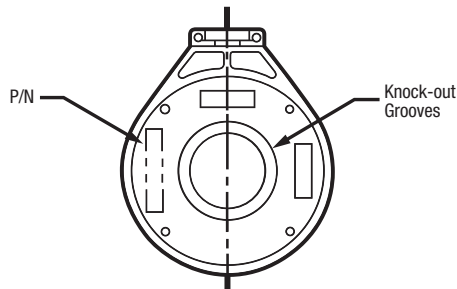


Figure 2 - Groove guides

—
ABB Motors and Mechanical Inc.

5711 R. S. Boreham Jr. Street
Fort Smith, AR 72901
Ph: 1.479.646.4711

Mechanical Power Transmission Support
Ph: 1.864.297.4800

new.abb.com/mechanical-power-transmission
baldor.com

© ABB Motors and Mechanical Inc.
MN3015 (Replaces 499397)



All Rights Reserved. Printed in USA.
10/18